Canon

Color imageCLASS MF8180c

# Software Guide



# Color imageCLASS MF8180c Software Guide



### **Manuals for the Machine**

The manuals for this machine are divided as follows. Please refer to them for detailed information. Depending on the system configuration and product purchased, some manuals may not be needed.



Guides with this symbol are printed manuals.



Guides with this symbol are PDF manuals included on the accompanying CD-ROM. (See footnote.)

- Setting Up the Machine
- Software Installation and Network Settings

**Quick Start Guide** 



- Copying and Printing Instructions
- Troubleshooting

**Basic Guide** 



- Fax Instructions
- Troubleshooting

**Facsimile Guide** 



- Software Installation and Instructions
- Printing, Scanning and PC Faxing Instructions
- Troubleshooting

Software Guide (This Manual)



Remote User Interface Instructions

**Remote UI Guide** 



Network Connectivity and Setup Instructions

**Network Guide** 



Model Name

• F148800 (Color imageCLASS MF8180c)



# How This Manual Is Organized

Chapter 1	Installation
Chapter 2	Printing
Chapter 3	Scanning
Chapter 4	PC Faxing
Chapter 5	Troubleshooting
Chapter 6	Appendix

# **Contents**

Chapter 1

Preface ix
How to Use This Manual ix
Symbols Used in This Manual ix
Buttons Used in This Manual ix
Displays Used in This Manual
Abbreviations Used in This Manual
Legal Notices
Trademarks
Copyright
Noticexi
Installation
System Requirements
Where to Find Help1-3
Installing Software on Your Computer1-4
To Use the Machine as a Local Printer
Step 1 Install the MF Drivers (USB Connection)
Step 2 Connect the USB Cable
Install Accompanying Applications1-11
Read User's Manual1-11
To Use the Machine as a Network Printer (Network Connection)
Step 1 Specifying Network Settings1-12
Step 2 Connecting the Machine to a Network
Step 3 Checking Network Settings1-15
Step 4 Install the MF Network Drivers (Network Connection)
Checking Installation1-22
Uninstalling and Reinstalling the Software1-23
Removing the MF Toolbox
Removing the MF Drivers

#### Chapter 2 Printing

	Printing a Document	
	Changing Print Settings	
	From a Windows Application	
	From the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) Folder	
	Windows 98/Me Properties	
	Windows 2000/XP/Server 2003 Properties and Printing Preferences	
	Properties	
	Printing Preferences	
	Using the Machine on Your Network	2-60
	Setting the Machine as a Shared Printer	
	Using the Shared Printer on Your Network	2-67
Chapter 3	Scanning	
	Scanning with [B&W Start] or [Color Start] on the Machine	3-1
	Setting the Scanning Function for [B&W Start] or [Color Start]	
	Setting Up [Start] to Operate in a Different Way from [Save]	
	Setting Up [B&W Start] or [Color Start] in the [Settings] Dialog Box	
	Setting Up [B&W Start] or [Color Start] in the [Scanners and Cameras] F	
	(Windows 2000: the [Scanners and Cameras Properties] Dialog Box)	
	Scanning with the MF Toolbox	
	MF Toolbox Settings	
	Scanner Settings	
	Save Scanned Image to	
	External program (Mail Program)	3-13
	Confirmation of the Scanned Image and Exif Settings (Confirm Scanned Image)	3₋13
	Scanning an Image from an Application	
	Creating One PDF File from Two or more Pages	
	Setting Preferences and Scanning with ScanGear MF	
	Switching between Simple Mode and Advanced Mode	
	Using Simple Mode	
	Using Advanced Mode	
	Advanced Mode - Specifying the Parameters of a Scan	
	Advanced Mode Settings	
	Determining Resolution	3-42
	Scanning with the WIA Driver (Windows XP Only)	3-44
	Scanning from the [Scanner and Camera Wizard] Dialog Box	
	Scanning from an Application	3-50

#### Chapter 4 PC Faxing

	Sending a Fax4-1
	Characters and Symbols for Fax Numbers
	Fax Sending Settings
	Changing Fax Settings4-12
	From a Windows Application
	From the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) Folder4-13
	Windows 98/Me Fax Properties4-15
	Windows 2000/XP/Server 2003 FAX Properties and
	FAX Printing Preferences
	FAX Properties
	FAX Printing Preferences
	Canon Cover Sheet Editor4-40
	Installing and Uninstalling Cover Sheet Editor
	Opening, Saving, and Closing a File
	Creating an Original Cover Sheet4-46
	Printing a Cover Sheet
	Registering an Original Cover Sheet as a Template
Chapter 5	Troubleshooting
	Drinter Problems 5.1
	Printer Problems
	Driver Problems
	Driver Problems
	Driver Problems
Chapter 6	Driver Problems5-4 Scanning Problems5-6 Installing and Uninstalling Problems5-11 Appendix  Printer Specifications6-1 Hardware6-1
Chapter 6	Driver Problems5-4 Scanning Problems5-6 Installing and Uninstalling Problems5-11  Appendix  Printer Specifications6-1 Hardware6-1 Software6-2
Chapter 6	Driver Problems5-4 Scanning Problems5-6 Installing and Uninstalling Problems5-11  Appendix  Printer Specifications6-1     Hardware6-1     Software6-2 About Color Printing6-3
Chapter 6	Driver Problems         .5-4           Scanning Problems         .5-6           Installing and Uninstalling Problems         .5-11           Appendix           Printer Specifications         .6-1           Hardware         .6-1           Software         .6-2           About Color Printing         .6-3           The Three Primary Colors of Light and Color         .6-3
Chapter 6	Driver Problems         .5-4           Scanning Problems         .5-6           Installing and Uninstalling Problems         .5-11           Appendix           Printer Specifications         .6-1           Hardware         .6-1           Software         .6-2           About Color Printing         .6-3           The Three Primary Colors of Light and Color         .6-3           Method for Expressing Color         .6-4
Chapter 6	Driver Problems         .5-4           Scanning Problems         .5-6           Installing and Uninstalling Problems         .5-11           Appendix           Printer Specifications         .6-1           Hardware         .6-1           Software         .6-2           About Color Printing         .6-3           The Three Primary Colors of Light and Color         .6-3
Chapter 6	Driver Problems         .5-4           Scanning Problems         .5-6           Installing and Uninstalling Problems         .5-11           Appendix           Printer Specifications         .6-1           Hardware         .6-1           Software         .6-2           About Color Printing         .6-3           The Three Primary Colors of Light and Color         .6-3           Method for Expressing Color         .6-4           Mechanism of Color Printing         .6-5
Chapter 6	Driver Problems         .5-4           Scanning Problems         .5-6           Installing and Uninstalling Problems         .5-11           Appendix           Printer Specifications         .6-1           Hardware         .6-1           Software         .6-2           About Color Printing         .6-3           The Three Primary Colors of Light and Color         .6-3           Method for Expressing Color         .6-4           Mechanism of Color Printing         .6-5           To Achieve More Beautiful Results in Smoother
Chapter 6	Driver Problems         .5-4           Scanning Problems         .5-6           Installing and Uninstalling Problems         .5-11           Appendix           Printer Specifications         .6-1           Hardware         .6-1           Software         .6-2           About Color Printing         .6-3           The Three Primary Colors of Light and Color         .6-3           Method for Expressing Color         .6-4           Mechanism of Color Printing         .6-5           To Achieve More Beautiful Results in Smoother         .6-6           Operations         .6-6

# **Preface**

Thank you for purchasing the Canon Color imageCLASS MF8180c. Please read this manual thoroughly before operating the product in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference.

#### **How to Use This Manual**

#### **Symbols Used in This Manual**

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.

MPORTANT In

Indicates operational requirements and restrictions. Be sure to read these items carefully in order to operate the machine correctly, and to

avoid damage to the machine.

∧ NOTE

Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly

recommended.

Refer to the Basic Guide

Refer to the Basic Guide for details on the topic of the previous sentence.

machine The word "machine" refers to Canon Color imageCLASS MF8180c

machine.

**default** A setting that remains in effect unless you change it.

#### **Buttons Used in This Manual**

A button or an item is referred to in [brackets] as follows in this manual.

• A button or an item on the screen ......[OK]

Name of window or dialog box .....[Add Printer Wizard]

• A button on a toolbar...... [?] (Help)

### **Displays Used in This Manual**

Screen shots of computer operation screens used in this manual may differ from the ones you actually see depending on the model or options that come with your machine.

#### **Abbreviations Used in This Manual**

In this manual, product names and model names are abbreviated as follows: Microsoft<sup>®</sup> Windows<sup>®</sup> 98 operating system is referred to as Windows 98. Microsoft<sup>®</sup> Windows<sup>®</sup> Millennium Edition operating system is referred to as Windows Me.

Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 operating system is referred to as Windows 2000. Microsoft<sup>®</sup> Windows<sup>®</sup> XP operating system is referred to as Windows XP. Microsoft<sup>®</sup> Windows Server<sup>™</sup> 2003 operating system is referred to as Windows Server 2003.

### **Legal Notices**

#### **Trademarks**

Canon, the Canon Logo and imageCLASS are trademarks of Canon Inc.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or in other countries.

Other brand and product names are trademarks or registered trademarks of their respective companies.

In this manual, Microsoft and Microsoft Windows are referred to as Microsoft and Windows respectively.

#### Copyright

Copyright © 2006 by Canon Inc. All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

#### **Notice**

The information in this manual is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR AGAINST INFRINGEMENT OF ANY PATENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

# Installation



This chapter explains the procedure to install the drivers and software on your computer. Once the corresponding drivers are installed, you can print, fax and scan from your computer.

# **System Requirements**

The drivers can be installed and used in the following system environments.

#### ■ Operating System

Windows 98, Windows Me, Windows 2000 Professional, Windows XP, Windows Server 2003\*.

#### **■** Computer

Any computer on which Windows 98, Windows Me, Windows 2000, Windows XP, or Windows Server 2003\* runs properly.

#### **■** Hardware Environment

- IBM or IBM-compatible PC
- CD-ROM drive or network environment with the access to CD-ROM
- PC equipped with a USB port and the USB class driver installed

os	CPU	RAM	Available free disk space
Windows 98	Pentium® 90 MHz or greater, or compatible micro processors (up to 2 processors are supported)	32 MB of RAM, 64 MB or greater is recommended	At least 115 MB, 200 MB or greater is recommended

<sup>\*</sup> Only for network connection.

os	CPU	RAM	Available free disk space
Windows Me	Pentium® 150 MHz or greater, or compatible micro processors (up to 2 processors are supported)	32 MB of RAM, 64 MB or greater is recommended	At least 115 MB, 200 MB or greater is recommended
Windows 2000* Professional	Pentium® 133 MHz or greater, or compatible micro processors (up to 2 processors are supported)	64 MB of RAM, 128 MB or greater is recommended	At least 115 MB, 200 MB or greater is recommended
Windows XP*	Pentium®/Celeron® 300 MHz or greater, or compatible micro processors (up to 2 processors are supported)	64 MB of RAM, 128 MB or greater is recommended	At least 115 MB, 200 MB or greater is recommended
Windows Server 2003**	Pentium®/Celeron® 300 MHz or greater, or compatible micro processors (up to 2 processors are supported)	64 MB of RAM, 128 MB or greater is recommended	At least 115 MB, 200 MB or greater is recommended

<sup>\*</sup> Log on as a user account with administrator privileges is recommended.

<sup>\*\*</sup> Only for network connection and log on as a user account with administrator privileges is recommended.



The USB 2.0 Hi Speed connection requires a PC equipped with a CPU faster than 300 MHz and more than 64 MB of RAM and with Windows XP SP1 installed, or with a CPU faster than 133 MHz and more than 64 MB of RAM and with Windows 2000 SP4 installed. If your PC meets all of these requirements and is preinstalled with USB 2.0 Host Controller, the USB 2.0 connection will be guaranteed.

# Where to Find Help

When you encounter a problem during installation of the driver software or while operating your machine, consult the following:

#### ■ In This Manual

See Chapter 5, "Troubleshooting."

#### ■ In the Basic Guide

Refer to Chapter 9, "Troubleshooting."

#### ■ README. TXT File

The hints, limitations, and restrictions you need to be aware of when installing and using the drivers are included in the README.TXT file provided with the drivers.

#### ■ Online Help

You can locate additional help in the online Help file provided with the driver software. In the [Properties] dialog box, you can click [Help] to display information about every feature and option in the drivers.

#### ■ Context Sensitive Help

This Help displays the explanation of each item in the current dialog box. Use one of the following procedures to activate a context sensitive help.

- Click ? (Help) in the title bar of the dialog box → click the desired item.
- Right-click the desired item → select [What's this?].
- Select the desired item → press [F1].

#### ■ Canon Support Center

If the above Help does not provide the information you need, please contact the Canon Support Center at 1-800-828-4040 between the hours of 8:00 A.M. to 8:00 P.M. EST Monday through Friday and 10:00 A.M. to 8:00 P.M. on Saturday.

### **Installing Software on Your Computer**

This section provides installation procedure of drivers to use the Canon Color imageCLASS MF8180c as a network or a local printer, fax and a local scanner (connected directly to your computer).

When installing the drivers, follow the steps shown in the [MF8100 Series Setup] screen.

Before you install the software, be sure to:

- Confirm the machine is not connected to your computer.
- Turn on the machine. (Refer to the *Quick Start Guide*.)
- Quit any Windows application running on your computer.



If you are using Windows 2000/XP/Server 2003, be sure to log on as a member of Administrators.



- Use of a cable 9.8 ft (3 m) long or less is recommended.
- The screen shots shown are from Windows XP.

### To Use the Machine as a Local Printer

#### Insert the CD-ROM into your CD-ROM drive.

The [MF8100 Series CD-ROM Setup] screen appears.

Install the software following Steps 1, 2 and 3 in the [Install Drivers] screen.



[MF8100 Series CD-ROM Setup] screen

If the [MF8100 Series Setup] screen is not displayed, on the Windows desktop, click [start] → [My Computer] (Windows 98/Me/2000: double-click [My Computer]). Open the CD-ROM icon  $\rightarrow$  double-click [Minst (Minst.exe)].

If you are installing from a copy saved on a network or hard disk, double-click [Minst (Minst.exe)] in the copy.


### Step 1 Install the MF Drivers (USB Connection)

#### 1 Click [Easy Installation].




When you select [Easy Installation], Printer Driver and Online Manuals will be installed. If you do not want to install both items, select [Custom Installation].

### Click [Next] under [Connect Printer Directly to Computer].

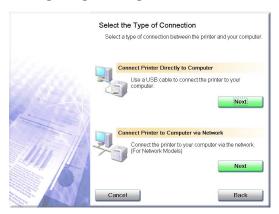

#### 3 Click [Install].

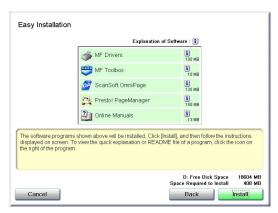

4 Read the contents of the [License Agreement] → click [Yes].



5 Read the contents of the [License Agreement] → click [Yes].



The installation will start.


6 Click [Exit].





If you are using Windows 98/Me, a message recommending you to restart your computer may appear. In this case, continue installing after restarting your computer.

#### 7 Click [Next] to setup the MF Toolbox.

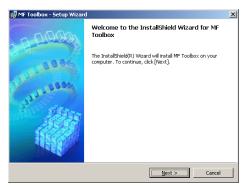

#### 8 Check the destination folder to be installed → click [Next].



Click [Browse] to change the folder, and select the folder.

#### 9 Confirm the folder to be installed → click [Next].



## 10 Click [Start].




The installation will start.

# 11 Click [Exit].



12 Confirm that ✓ is marked on [MF Drivers], [MF Toolbox], [ScanSoft OmniPage], [Presto! PageManager] and [Online Manuals] → click [Next].

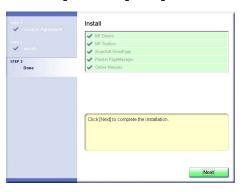

### 13 Click [Restart].



#### Step 2 Connect the USB Cable

Make sure that the machine is turned on.

Connect the USB cable after MF Toolbox installation.

## **2** Connect the USB cable to the machine and computer USB port.

When you connect the USB cable to the computer, the machine is automatically detected as a new hardware. Wait for a while as your computer performs various settings.

Depending on your computer, a message may display asking you to restart your computer.

After restarting your computer, wait for a while for your computer to continue performing various settings.

#### **Install Accompanying Applications**

If you do not select the accompanying applications, you can install them later, in the [MF8100 Series Setup] screen, click [Additional Software Program].

#### Read User's Manual

To read the PDF manual on the CD-ROM, click [Display Manuals] on the [MF8100] Series Setup] screen.

Installation is now complete. In the [MF8100 Series Setup] screen, click [Exit] to close the screen. Then remove the CD-ROM from the disk drive.

# To Use the Machine as a Network Printer (Network Connection)

#### IMPORTANT

The machine needs to be restarted for the specified settings to become effective. To restart the machine, disconnect the power cord, wait for at least 10 seconds, and connect the power cord again.



- For details on specifying network settings, refer to Chapter 2, "Specifying the Network Settings," in the *Network Guide*.
- For additional network protocol settings, refer to the Network Guide.
- For the values of the network settings, consult your network administrator or internet service provider (ISP).

#### **Step 1 Specifying Network Settings**



- The machine is set to IP ADDRESS AUTO by default. If you are using DHCP you do not need to make any changes and can move to "Step 2 Connecting the Machine to a Network," on p. 1-15.
- 1 Press [Menu] → or to select <6.NETWORK SETTINGS> on the LCD → press [Set].

MENU 6.NETWORK SETTINGS

Press or to select <1.LAN SETTINGS> → press [Set].

NETWORK SETTINGS 1.LAN SETTINGS

3 Press or ► to select <1.IP ADDRESS AUTO.> → press [Set].

LAN SETTINGS 1.IP ADDRESS AUTO.

- To obtain an IP address automatically (dynamic allocation):
- Press o r ► to select <ON> → press [Set].

```
IP ADDRESS AUTO.
                 ON
```

press [Set].

```
IP ADDRESS AUTO.
1.DHCP
```

- Fress or ► to select <ON> or <OFF> → press [Set].
- Press [Stop/Reset] to return to the standby display.
- Restart the machine by disconnecting the power cord, and then reconnecting it.
- To specify an IP address manually (static allocation):
- 4 Press or ► to select <OFF> → press [Set].

5 Press or ► to select <2.IP ADDRESS> → press [Set].

LAN SETTINGS 2.IP ADDRESS 6 Enter an IP address of the machine using the numeric keys → press [Set].

Write down the IP address you entered: \_\_\_\_\_, \_\_\_\_, \_\_\_\_\_

IP ADDRESS 000.000.000

7 Press or ► to select <3.SUBNET MASK> → press [Set].

LAN SETTINGS
3.SUBNET MASK

Enter the subnet mask using the numeric keys → press [Set].

Write down the subnet mask you entered: \_\_\_\_\_, \_\_\_\_, \_\_\_\_\_,

SUBNET MASK 000.000.000

LAN SETTINGS
4.DEFAULT GATEWAY

10 Enter the default gateway address using the numeric keys → press [Set].


Write down the gateway address you entered: \_\_\_\_\_, \_\_\_\_, \_\_\_\_\_

DEFAULT GATEWAY 000.000.000

- 11 Press [Stop/Reset] to return to the standby display.
- 12 Restart the machine by disconnecting the power cord, and then reconnecting it.

### **Step 2 Connecting the Machine to a Network**

Connect a Category 5 rated (Cat 5) twisted-pair LAN cable to the 100Base-TX/10Base-T port on the back of the machine. Connect the other end of the cable to a network router or a hub.

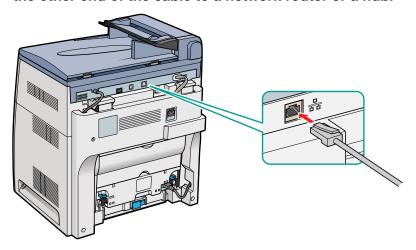

### **Step 3 Checking Network Settings**

1 Press [Menu] → ◀ or ► to select <6.NETWORK SETTINGS> on the LCD → press [Set].

MENU 6.NETWORK SETTINGS

Press → 

or 

to select <2.VIEW IP ADDRESS> → press [Set].

NETWORK SETTINGS 2.VIEW IP ADDRESS

VIEW IP ADDRESS 1.IP ADDRESS

4 Press [Stop/Reset] to return to the standby display.

# Step 4 Install the MF Network Drivers (Network Connection)

**⊘** NOTE

For Windows 2000/XP/Server 2003, log on as Administrator to install the software.

1 Insert the CD-ROM into your CD-ROM drive.


The [MF8100 Series CD-ROM Setup] screen appears.

Install the software following steps in the [Install Drivers] screen.

Click [Easy Installation].



**3** Click [Next] under the [Connect Printer to Computer via Network].

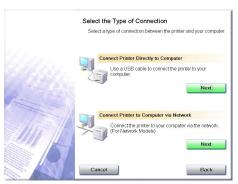


Click [Install].



[License Agreement] screen appears, then click [Yes].



Click [Next] on the Setup Wizard screen.

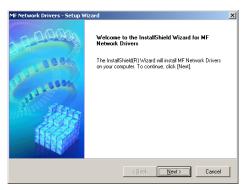

7 Read the contents of the [License Agreement], then click [Yes].



8 Select the target machine in the Device List → click [Next >].



#### ∧ NOTE


If the target machine is not listed in the Device List, click [Search by IP Address] and enter the IP address → click [OK]. If you do not know the machine's IP address, see "Step 3 Checking Network Settings," on p. 1-15.



Select the driver(s) to install → click [Next].




## 10 Click [Start].

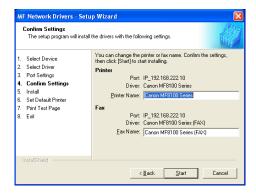


The installation will start.

# 11 Select the default printer or fax → click [Next].

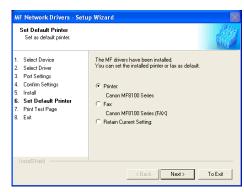

## 12 Select the driver type (Printer and/or Fax) $\rightarrow$ click [Next].

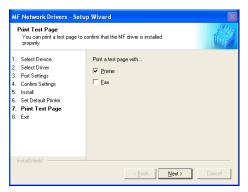


## 13 Click [Exit].



14 Confirm that ✓ is marked on [MF Drivers] and [Online Manuals]

→ Click [Next].

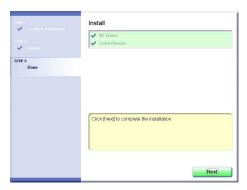

# 15 Click [Restart].



# **Checking Installation**

Check if the drivers are installed successfully and the machine is selected as the default printer.



#### NOTE

If your machine is selected in the printer box when you open the [Print] dialog box in an application, which means your machine is set as the default printer.

# 1 Open the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder.

Click [start] on the Windows task bar  $\rightarrow$  select [Printers and Faxes] (Windows 98/Me/ 2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Printers]).

Make sure the driver icon is displayed.

### Select the default printer.

If your machine is already set as the default printer, go to step 3.

- Click the corresponding printer driver icon.
- ☐ From the [File] menu, click [Set as Default Printer] (Windows 98/Me: [Set as Default]).

# **3** Open the [Scanners and Cameras] folder (Windows 98/Me/2000: the [Scanners and Cameras Properties] dialog box).

Click [start] on the Windows task bar  $\rightarrow$  select [Control Panel]  $\rightarrow$  [Printers and Other Hardware]  $\rightarrow$  [Scanners and Cameras] (Windows 98/Me/2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Control Panel]  $\rightarrow$  double-click the [Scanners and Cameras] icon).

Make sure the corresponding scanner driver name or icon is displayed.

4 If the [Canon MF Toolbox 4.9] icon is displayed on the Windows desktop, installation of the MF Toolbox 4.9 has been successful.

### Uninstalling and Reinstalling the Software

If the drivers are not working properly, remove the drivers and install them again. When removing the software, the first remove the MF Toolbox, and then the MF drivers. Even if you want to reinstall the software, you must still remove the currently installed software. Before you remove the drivers, make sure the following:

- You have the installation software available for installation.
- No application is running on your computer.
- IMPORTANT

To uninstall the software in Windows 2000/XP/Server 2003, you must be the user with administrative privileges.

#### Removing the MF Toolbox

1 Quit the MF Toolbox and any applications (including anti-virus) that are currently running.

To close the MF Toolbox, click [X] at the top right of the MF Toolbox window.

- 2 Click [start] on the Windows task bar → [(All) Programs] → [Canon] → [MF Toolbox 4.9] → [Toolbox Uninstall].
- **3** Follow the on-screen instructions.

When the Repair or Remove program selection screen is displayed, check [Remove] → click [Next].

If asked to confirm removal of an application etc., click [Remove].

Restart your computer if asked to do so.


4 Click [Exit].

#### **Removing the MF Drivers**

1 Click [start] on the Windows task bar → [(All) Programs] → [Canon] → [MF Drivers] → [Uninstall Drivers].

The [MF Drivers Uninstaller] dialog box appears.

2 Select the corresponding printer → click [Perform].




The confirmation message dialog box appears.

3 Click [Yes].



Uninstallation proceeds automatically and next dialog box appears.

4 Click [Exit].

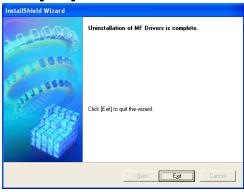



A message recommending you to restart your computer may appear under some operating systems. In this case, restart your computer.

# **Printing**

This chapter explains the procedure to print a document from a Windows application. If you want to change print settings, you can access the properties dialog box of the printer driver.

# **Printing a Document**


- **1** Load paper in the cassette or the multi-purpose tray.


  For details on loading paper, refer to Chapter 2, "Paper Handling," in the *Basic Guide*.
- Open the document in an application.

# Select the command to print.

In most cases, click [Print] from the [File] menu.

The [Print] dialog box appears.

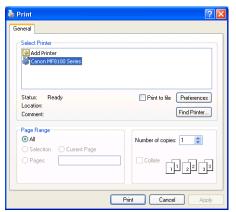

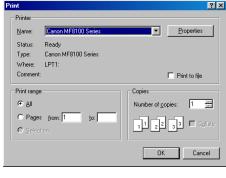

- 4 From the [Select Printer] list box or the [Name] pull-down list in the [Print] dialog box, select the printer to be used.
- 5 Click [Preferences] or [Properties].
- **⊘** NOTE

Depending on the application you are using, select the printer to be used in the [General] tab sheet in the [Print] dialog box, then specify the print settings in the corresponding tab sheet (only for Windows 2000).

- **6** Specify the required settings → click [OK].

For details, see "Changing Print Settings," on p. 2-4.

7 Click [Print] or [OK].

Printing starts.

**Ø** NOTE

To cancel printing, click [Cancel].

# **Canceling Printing**

1 Open the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder.

Click [start] on the Windows task bar  $\rightarrow$  select [Printers and Faxes] (Windows 98/Me/ 2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Printers]).

- **2** Double-click the corresponding printer driver icon.
- 3 Right click the print job → click [Cancel].



You can also cancel a print job using [Status Monitor] on the operation panel of the machine. For details, refer to Chapter 7, "System Monitor," in the *Basic Guide*.

# **Changing Print Settings**

To view or change the print settings, access the properties or printing preferences dialog box of the printer driver.

You can access the properties dialog box either from the application's [Print] dialog box and the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder, or the printing preferences dialog box from the [Printers and Faxes] (Windows 2000: [Printers]) folder.

To access the dialog box, follow the procedure below.



#### ∧ NOTE

- The properties dialog box enables you to set up the printer configuration and configure the print settings for all Windows applications. The printing preferences dialog box enables you to specify the default settings for the printing options available when you print with the Canon Color imageCLASS MF8180c (only for Windows 2000/XP/Server 2003).
- The number of tabs displayed in the properties dialog box will vary, depending on the type of operating system you are using and the method you use to access the dialog box.
- The method you use to access the dialog boxes determines how long the printing options remain in effect:
  - If you access the dialog box from an application's [Print] dialog box, your selected printing options apply only to the current print job. They will not be stored when you close the application.
  - If you access the dialog box from the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder, selected printing options apply to all Windows applications and remain in effect until you change those settings.

# From a Windows Application

# Opening the Printing Preferences or Properties Dialog Box

Select the command to print.

In most cases, click [Print] from the [File] menu.

The [Print] dialog box appears.

From the [Select Printer] list box or the [Name] pull-down list in the [Print] dialog box, select the printer to be used.

# 3 Click [Preferences] or [Properties].

The [Printing Preferences] or [Canon MF8100 Series Properties] dialog box appears.

# From the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) Folder

# **Opening the Properties Dialog Box**

1 Open the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder.

Click [start] on the Windows task bar  $\rightarrow$  select [Printers and Faxes] (Windows 98/Me/ 2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Printers]).

- Click the corresponding printer driver icon.
- 3 From the [File] menu, click [Properties].

You can also open the properties dialog box by right-clicking the corresponding printer driver icon and selecting [Properties] from the pop-up menu.

The [Canon MF8100 Series Properties] dialog box appears.

# Opening the Printing Preferences Dialog Box (Windows 2000/XP/ Server 2003)

1 Open the [Printers and Faxes] (Windows 2000: [Printers]) folder.

Click [start] on the Windows task bar  $\rightarrow$  select [Printers and Faxes] (Windows 2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Printers]).

- Click the corresponding printer driver icon.
- **3** From the [File] menu, click [Printing Preferences].

You can also open the printing preferences dialog box by right-clicking the corresponding printer driver icon and selecting [Printing Preferences] from the pop-up menu.

The [Canon MF8100 Series Printing Preferences] dialog box appears.


# Windows 98/Me Properties



The screens shown below are displayed when you open [Canon MF8100 Series Properties] from the [Printers] folder.


### General Tab

Lets you print a test page or define separator pages. Refer to your Windows operating system documentation for more information.

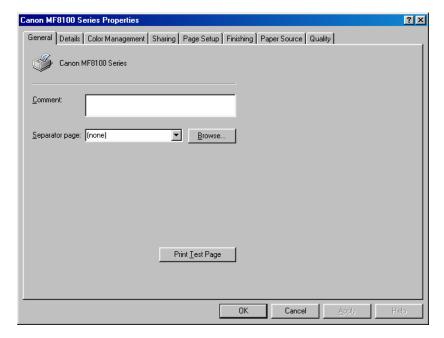


#### **Details Tab**

Specifies the printer port and time-out settings. Refer to your Windows operating system documentation for more information.

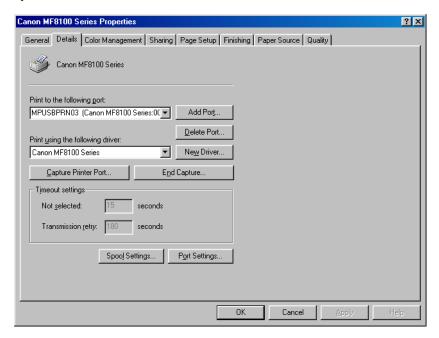


### ■ Spool Settings

The installer sets the following defaults.

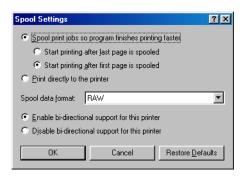


# **Color Management Tab**

Associates color profiles with your color printer. Refer to your Windows operating system documentation for more information.

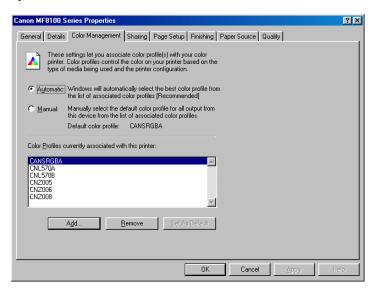

# **Sharing Tab**


Specifies the printer sharing settings. This tab sheet is available only when the printer sharing is enabled (see p. 2-63). Refer to your Windows operating system documentation for more information.

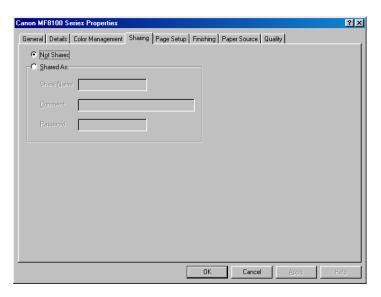

# Page Setup Tab

Specifies the page settings including the paper size, scaling, number of copies, orientation, number of pages per sheet, etc.

For information on [Profile] and [Output Method], see "Profiles," on p. 2-24.

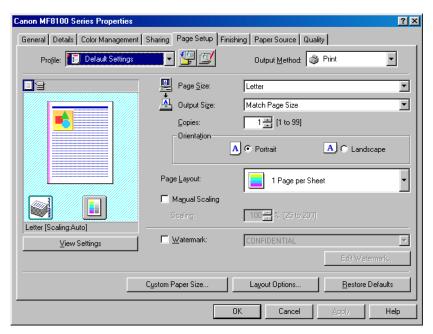

Default settings depend on the country/region of purchase.

Preview image Displays the image with the currently selected settings reflected. For

details on preview image, see p.2-24.

[Page Size] Selects the original page size to work with in an application. Available options are; [Letter], [11x17], [Legal], [Executive], [A5], [B5], [A4], [B4], [A3], [Index Card], [Envelope COM10], [Envelope Monarch], [Envelope DL], [Envelope C5], [Envelope B5] and [Custom]. However, when [11x17], [B4] or [A3] is selected in the [Page Size], the original page size

is automatically reduced to fit [Letter] size.

[Output Size] Selects the output paper size to print on. When this option is set to anything other than [Match Paper Size], the original page size is automatically reduced or enlarged to fit the selected output paper size

when printed.



Up to 50 sizes can be defined for [Custom Paper Size] with the [Custom Paper Size Settings] option (see p. 2-13).

[Copies] Specifies the number of copies to be printed (1 to 99).

[Orientation] Selects the direction of printing relative to the paper ([Portrait] or

[Landscape]).

[Page Layout] Selects the number (1, 2, 4, 6, 8, 9 or 16) of original pages per sheet or

[Poster] ( $2 \times 2$ ,  $3 \times 3$  or  $4 \times 4$  pages to comprise one sheet). When this option is set to anything other than [1 Page per Sheet] and [Poster], the original page size is reduced to fit the selected page layout when

printed.



 When [Poster] is selected, [Manual Scaling], [Watermark] and [Layout Options] are disabled.

When [1 Page per Sheet] is selected, [Manual Scaling] appears. When this
option is set to anything other than [1 Page per Sheet], [Manual Scaling]
disappears.

[Manual Scaling] Reduces or enlarges the original page size. Selecting this check box

enables the edit box on the right side to specify the magnification factor

(25 to 200%).

[Page Order] Selects the order in which original pages are placed on each sheet of the

output paper when more than one page is printed per sheet.



#### [Watermark]

Inserts the selected watermark to be printed on each page. 8 types of watermark are available as default:

- CONFIDENTIAL
- COPY
- DRAFT
- FILE COPY
- FINAL
- PRELIMINARY
- PROOF
- TOP SECRET

Selecting this check box enables [Edit Watermark] to add a watermark.



This option is disabled when [Page Layout] is set to [Poster].

[Edit Watermark...] Opens the [Edit Watermark] dialog box (see p. 2-12).

[Custom Paper

Size...]

Opens the [Custom Paper Size Settings] dialog box (see p. 2-13).


[Layout Options...]Opens the [Layout Options] dialog box (see p. 2-14).



This option is disabled when [Page Layout] is set to [Poster].

#### ■ Edit Watermark

Clicking [Edit Watermark] in the [Page Setup] tab sheet opens the [Edit Watermark] dialog box. This dialog box enables you to insert a text string as a watermark onto pages. This option is enabled only when the [Watermark] check box is selected in the [Page Setup] tab sheet (see p. 2-9).

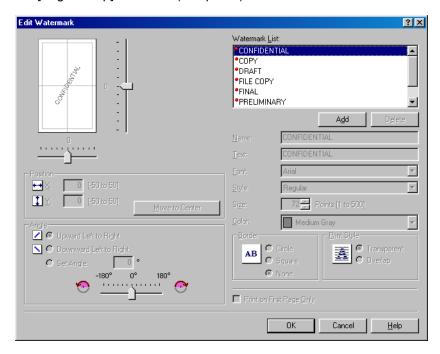

[Watermark List] Displays the names of registered watermarks. The preview image in the

specified settings reflected.

[Add] Registers a new watermark. Clicking this button adds a blank name field

in [Watermark List] in which you enter the name of watermark to be

upper left part of the dialog box displays the selected watermark with the

registered. Up to 50 watermarks can be registered.

[Delete] Removes the selected watermark from [Watermark List].

You cannot delete a pre-defined watermark.

[Position] Specifies the position where the watermark is printed on each page. You can enter the values in the [X] and [Y] edit boxes (in a range between

-50 and 50), or use the X and Y slide bars to move the position.

[Move to Center] Relocates the watermark to the center of the page.

[Angle] Specifies the angle of watermark. You can select the corresponding

radio button, or use the slide bar to move the angle.

[Name] Displays the name of the currently selected watermark.

[Text] Displays the text string of the currently selected watermark.

[Font] Selects the font type of the watermark.

[Style] Selects the font style of the watermark. Available styles are [Regular],

[Italic], [Bold] and [Bold Italic].

[Size] Specifies the font size of the watermark (1 to 500).

[Color] Selects the font color of the watermark.

[Border] Adds the frame to the watermark. You can select the frame type ([Circle],

[Square], or [None]).


[Print Style] Selects the type of watermark ([Transparent] or [Overlap]).

[Print on First Page Only]

Prints the selected watermark only on the first page of the document.

#### ■ Custom Paper Size Settings

Clicking [Custom Paper Size...] in the [Page Setup] tab sheet opens the [Custom Paper Size Settings] dialog box. This dialog box enables you to define custom paper sizes for quick selection and register new custom paper sizes to the [Paper List] box. You can specify the name, width, and height of each size. Up to 50 custom paper sizes can be defined.

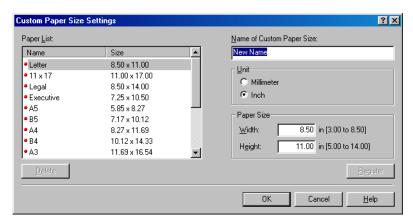



This setting is not available when the [Canon MF8100 Series Properties] dialog box is opened from a Windows application.

[Paper List] Displays the paper sizes actually available. Selects a paper size from

which you can create a custom paper size.

[Name of Custom Paper Size]

Specifies the name of custom paper.

[Unit] Selects the unit of measurement of paper size ([Millimeter] or [Inch]).

[Paper Size] Specifies the width and height of the custom paper.

**⊘** NOTE

Be sure that [Width] does not exceed [Height] when specifying the values.

[Register] Registers the custom paper and adds its name to [Paper List].


[Delete] Removes the selected custom paper from [Paper List].



You cannot delete a pre-defined paper size.

#### ■ Layout Options

Clicking [Layout Options...] in the [Page Setup] tab sheet opens the [Layout Options] dialog box. This dialog box enables you to print pages with a page frame, header, and footer. This option is disabled when [Page Layout] in the [Page Setup] tab sheet is set to [Poster] (see p. 2-10).

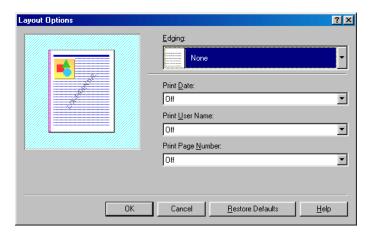

[Edging] Adds a page frame to be printed on each page. 11 options are

available.

[Print Date] Selects if the date is printed on each page or not. Six positions to print

the date are available.

[Print User Name] Selects if the user name is printed on each page or not. Six positions to

print the user name are available.

[Print Page Selects if the page number is printed on each page or not. Six positions


**Number**] to print the page number are available.

[Restore Defaults] Resets all the current settings to their default values.

### Finishing Tab

Specifies the finishing settings for the printed pages including the collating and binding.

For information on [Profile] and [Output Method], see "Profiles," on p. 2-24.

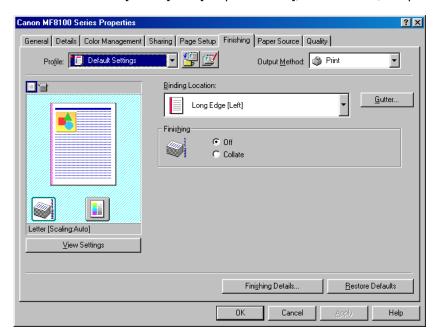

[Binding Location] Selects a binding location for the printed pages.

[Gutter...] Click this button to set the gutter width for binding a printed document

(see p. 2-16).

[Finishing] Select the Collate option to print a document in correct binding order.

For example, when printing multiple copies of a 3-page document, the

print order is 1,2,3, 1,2,3, and so on.

[Finishing Click this button to display [Finishing Details] dialog box for specifying

**Details...**] the finishing details and print mode appropriate to the printing paper

(see p. 2-16).

#### ■ Gutter Settings

Clicking [Gutter...] in the [Finishing] tab sheet opens the [Gutter Settings] dialog box.



[Gutter]

Specifies the gutter width in a range between 0.0 and 1.2 in (0 and 30 mm).

# ■ Finishing Details


Clicking [Finishing Details...] in the [Finishing] tab sheet opens the [Finishing Details] dialog box.



[Rotate Print Data Rotates the print output 180 degrees. 180 Degrees]

### **Paper Source Tab**

Specifies the paper source settings including the paper type. For more information on [Profile] and [Output Method], see "Profiles," on p. 2-24.

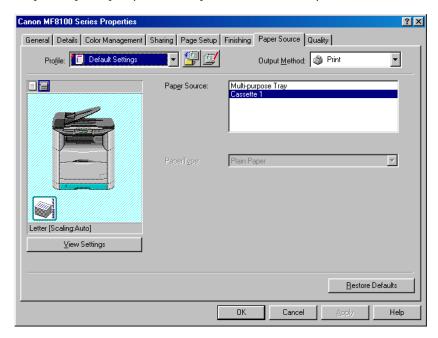

[Paper Source]

Specifies the paper Source.

[Paper Type]

Specifies the type of paper to be used as follow.


Printed Paper	[Paper Type]
Plain Paper	[Plain Paper]
Heavy Paper	[Heavy Paper]
Envelope	[Envelope]
Transparency	[Transparencies]

[Envelope] is automatically specified in [Paper Type] if you select it for [Paper Size] or [Output Size].

# **Quality Tab**

Specifies the settings for print quality including the resolution and contrast.

For more information on [Profile] and [Output Method], see "Profiles," on p. 2-24.

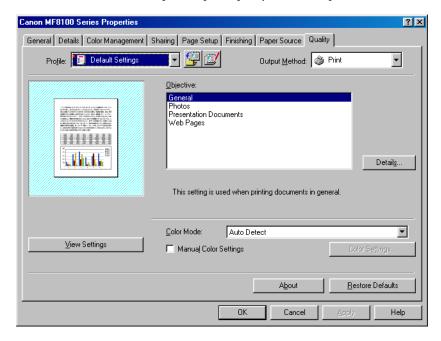

[Objective] Selects the best setting for the print job according to document content.

[Details...] Click this button to open the [Detailed Settings] dialog box for Object and make print quality settings (see p. 2-19).

[Color Mode] Selects whether to perform color printing or black and white printing.

#### [Manual Color Settings]

Enables the manual color settings. Selecting this check box enables [Color Settings] to access the dialog box which enables you to set the color for images (see p. 2-20).

[Color Settings...] Click this button after selecting the Manual Color Settings check box to manually adjust the color settings. The [Color Settings] dialog box allows you to specify Color, Brightness, Contrast, and Matching (see p. 2-20).




This option is enabled only when [Manual Color Settings] is selected.

[About] Displays the version information on the driver.

#### ■ Detailed Settings

Clicking [Details...] in the [Quality] tab sheet opens the [Detailed Settings] dialog box. This dialog box enables you to specify the detailed settings for print quality.

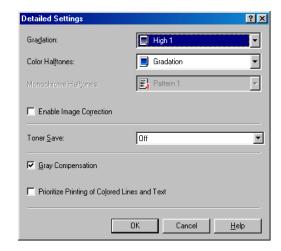

#### [Gradation]

You can select gradation when you print images in halftones.

Normal

Performs a normal print job by processing black and white.

High 1:

Performs a high-quality print job by processing multi-valued colors.

Hiah 2:

Performs a higher-quality print job than High 1.

#### [Color Halftones]

You can select a dither pattern when you print data in color halftones.

#### Resolution:

Prints normal letters and photo images at high quality. You can print most image data to a very high quality by selecting this item.

#### Gradation:

Produces high-quality printing for image data that contains a lot of gradations for Graphics and Computer Graphics.

#### Color Tone:

Make any color differences imperceptible when you print photos or images on multiple pages.

#### Pattern1 to 5:

Applies different dither patterns to text data, graphics data, and image data

Pattern 1: Text = Resolution; Graphics = Gradation; Image = Gradation Pattern 2: Text = Resolution; Graphics = Resolution; Image = Gradation Pattern 3: Text = Resolution; Graphics = Color Tone; Image = Color Tone Pattern 4: Text = Resolution; Graphics = Resolution; Image = Color Tone Pattern 5: Text = Resolution; Graphics = Gradation; Image = Color Tone

#### [Monochrome Halftones]

Specifies the use of dithering for printing halftone data.

Pattern 1:

Applies the same dither pattern to text data, graphics data, and image data.

Pattern 2:

Applies dither pattern of clear-cut to text data, of high-quality gradation to graphics data, and of high-quality nature image to image data.

Pattern 3:

Applies dither pattern of clear-cut to text and graphics data, and of high-quality nature image to image data.

None (Solid):

Prints all colors in black except for white.

#### [Enable Image Correction]

Select Enable Image Correction to smooth out the streaking and coarse features that tend to occur when printing enlarged image files and photographs using a software application.

[Toner Save] Modifies print data to print lighter and conserve toner.

Off:

Prints using normal density.

On

Prints text lighter in printouts for proofreading and checking.

#### [Gray Compensation]

Makes graphics data in black and gray printed clearly.


#### [Prioritize Printing of Colored Lines and Text]

Check this box when printed color lines or text look patchy or broken.

### ■ Color Settings

Clicking [Color Settings] in the [Quality] tab sheet opens the [Color Settings] dialog box. This dialog box enables you to control the brightness and contrast of images. This function is enabled only when [Manual Color Setting] is selected in the [Quality] tab sheet (see p. 2-18). Two tab sheets are provided in this dialog box.

#### Color Adjustment Tab

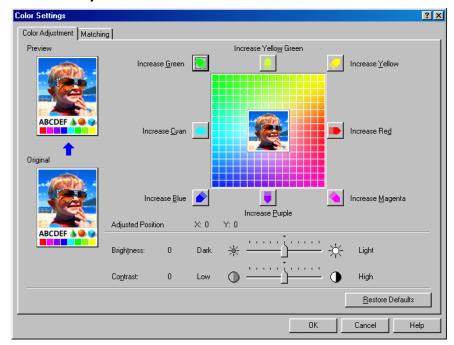

[Preview] Displays the image with the currently selected brightness and contrast

reflected.

[Original] Displays the original image.

Adjustment Grid Adjust color by moving [Preview image] at the center of the Adjustment

Grid from side to side or up and down.


[Adjusted Position] Indicates with X (horizontal) and Y (vertical) the position of Preview Icon

after adjustment. The center position is X: 0 and Y: 0.

[Brightness] Adjusts the brightness of the preview image in the range between –5 and 5.

[Contrast] Adjusts the contrast of the preview image in the range between –5 and 5.

#### Matching Tab

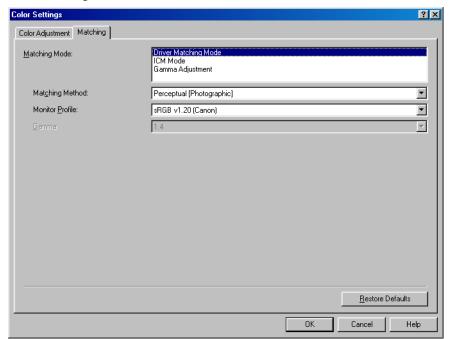

[Matching Mode] You can specify the procedure for color correction.

Driver Matching Mode:

Processes color in the printer driver. The settings specified in Matching Method and Monitor Profile will be enabled.

#### ICM Mode:

Performs ICM function on Windows systems or in the application. Monitor Profile, Gamma, and User CanoFile in the Matching tab sheet become disable when ICM Mode is selected.

#### Gamma Adjustment:

Performs gamma adjustment with the gamma correction value specified in the Gamma box.

[Matching Method] Specifies the matching method by assigning highest priority when the Driver Matching Mode is selected in the Matching Mode box.

Perceptual [Monitor Color Matched]:

Gives priority to matching the hue of the color on the monitor with the color of the printed output.

Perceptual [Photographic]:

Gives priority to color hue in matching and generates the colors on the monitor.

Colorimetric:

Gives priority to reducing the color difference between the original document on the screen (a logo, for example) and the printed output.

Saturation:

Gives priority to vividness in matching.



This option can be selected only when Driver Matching Mode is selected for Matching Mode.

#### [Monitor Profile]

Specifies the setting suitable for your monitor when the Driver Matching Mode is selected in the Matching Mode box.



In the case where several gamma values are provided for one option, to obtain better results select the higher gamma value if the printed image is lighter than that of the monitor.

If the monitor is set to a custom setting, it is difficult to produce printed output similar to the color of the monitor when performing matching.

#### [Gamma]

Specifies the gamma correction value when the Gamma Adjustment is selected in the Matching Mode box.

The brightness of the document printout can be adjusted without losing the brightest and darkest portion of the document.

This option is useful when the printout result is brighter than the original image (for example, a photograph before scanning or graphics displayed on the monitor), or when you want to intentionally change the brightness of the output.

Four gamma correction values are provided. The larger the value, the darker the printout is.

1.0


1.4 Default value

1.8

2.2

#### **Profiles**

A registered combination of settings for the [Page Setup], [Finishing], [Paper Source] and [Quality] tab sheets is referred to as a profile. The profile function commonly provided in each of these tab sheets enables you to add, edit, and select a profile, which facilitates your print jobs.

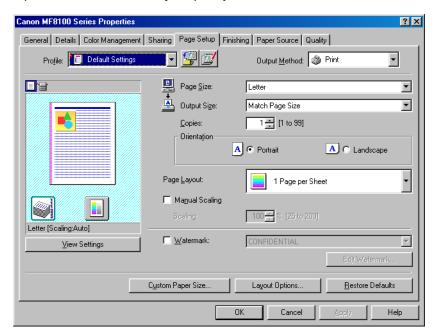

[Profile] Stores various printer driver settings, each suitable for certain print jobs,

as pre-defined Profiles. Selecting Profiles from the drop-down list enables the printer to perform a variety of print jobs. A frequently


performed print job can also be saved as a Profile.

**Preview image** Displays the image with the currently selected settings reflected.

Changes the setting for [Page Layout] every time you click anywhere inside the image of the page (see p. 2-10). The setting changes in the following order: [1 Page per Sheet]  $\rightarrow$  [2 Pages per Sheet]  $\rightarrow$  [4 Pages per Sheet]  $\rightarrow$  [1 Page per Sheet]....

Right-clicking the mouse button on the preview image displays the pop-up menu, from which you can also change the setting for [Page Layout] and [Color Mode].

Clicking the edges of the preview image of the page changes the binding location.

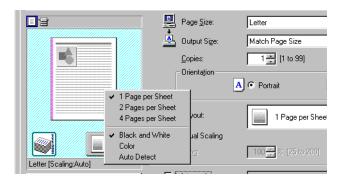

[Output Method] Switches the job mode between [Print] and [Edit and Preview].



[Print] Executes a normal print job.

#### [Edit and Preview]

Saves the data in the Canon PageComposer dialog box. If you open [Canon MF8100 Series Properties] from the [Printers] folder and select the [Edit and Preview] mode, (Lock) button appears on the right side. When you click this button, the [Edit and Preview] mode is locked.


(Add Profile) Click this button to display the Add Profile dialog box to add a new Profile to the list (see p. 2-26).

(Edit Profile) Click this button to display the Edit Profile dialog box to edit the name, icon, or comment of a stored Profile (see p. 2-26).

[View Settings] Click this button to display the [View Settings] dialog box. This dialog box allows you to view and confirm all of the current page settings in a listed form (see p. 2-28).

#### ■ Add Profile

Clicking (Add Profile) opens the [Add Profile] dialog box. This dialog box enables you to register a new profile with the current settings. You can add up to 50 new profiles.

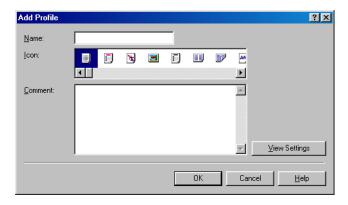

[Name] Specifies the name of the profile to be registered.

[Icon] Selects an icon to represent the profile to be registered.

[Comment] Adds comments on the profile to be registered.


[View Settings] Click this button to display the [View Settings] dialog box. This dialog

box allows you to view and confirm all of the current page settings in a

listed form (see p. 2-28).

#### ■ Edit Profile

Clicking (Edit Profile) opens the [Edit Profile] dialog box. This dialog box enables you to edit the profile selected in [Profile List].

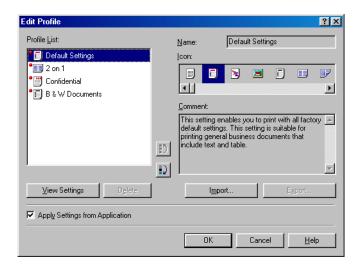

[Profile List] Displays the list of registered profiles.

[View Settings] Click this button to display the [View Settings] dialog box. This dialog

box allows you to view and confirm all of the current page settings in a

listed form (see p. 2-28).

Moves the profile selected in the [Profile List] one position up.

Moves the profile selected in the [Profile List] one position down.

[Delete] Removes the selected profile from [Profile List].

**⊘** NOTE

When one of the pre-defined profiles is selected, this button is disabled.

[Name] Displays and allows you to change the name of the currently selected profile.

NOTE

When one of the pre-defined profiles is selected, the name cannot be changed.

[Icon] Displays and allows you to change the icon representing the currently selected profile.

∅ NOTE

When one of the pre-defined profiles is selected, the icon cannot be changed.

[Comment] Displays and allows you to change the comment on the currently selected profile.

**⊘** NOTE

When one of the pre-defined profiles is selected, the comment cannot be changed.

[Import...] Enables you to import profile information from a file.

[Export...] Enables you to export the selected profile information to a file.




When one of the pre-defined profiles is selected, this button is disabled.

[Apply Settings from Application]

Applies the selected profile only to the settings other than [Paper Size], [Orientation] and [Copies].

#### ■ View Settings

Clicking [View Settings] opens the [View Settings] dialog box. This dialog box displays the current settings in the [Page Setup], [Finishing], [Paper Source] and [Quality] tab sheets.

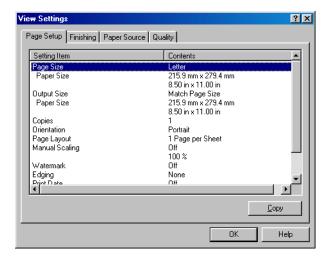


[Copy] Copies the contents of the current settings to the clipboard.

# Windows 2000/XP/Server 2003 Properties and Printing Preferences

The printer driver for Windows 2000/XP/Server 2003 has the following two main dialog boxes:

#### ■ The Properties Dialog Box

This dialog box enables you to set up the printer configuration and configure the print settings for all Windows applications.



#### ■ The Printing Preferences Dialog Box

This dialog box enables you to specify the default settings for the printing options available when you print on the Canon Color imageCLASS MF8180c.



# **Properties**


The [Canon MF8100 Series Properties] dialog box contains several tab sheets that enable you to set up the printer configuration and configure the print settings.



- The number of tabs displayed in the properties dialog box depends on how you have your system set up.
- For more information about the following features, see the Online Help (see p. 1-3).
- The screen shots shown are from Windows XP.


# **General Tab**

Lets you print a test page and define printing preferences. Refer to your Windows operating system documentation for more information.

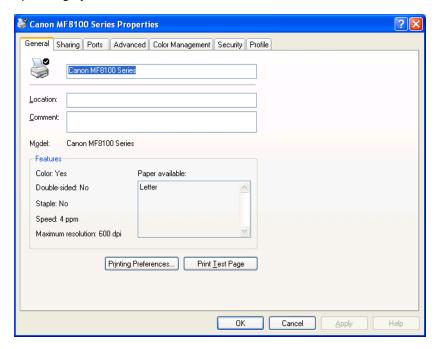


# **Sharing Tab**

Specifies the printer sharing settings. This tab sheet is always available (see p. 2-63). Refer to your Windows operating system documentation for more information.

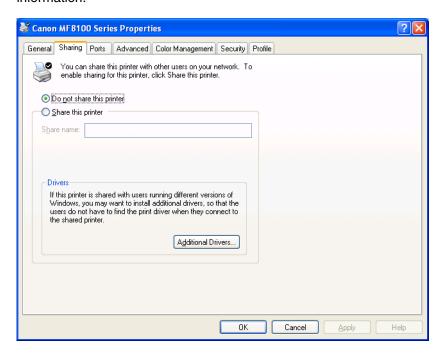


### **Ports Tab**

Specifies the port to which the printer is attached. Refer to your Windows operating system documentation for more information.

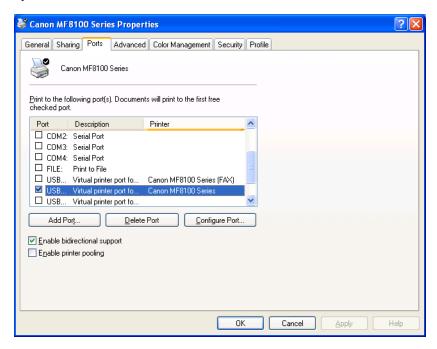

### **Advanced Tab**

Specifies the settings for print spooling. Refer to your Windows operating system documentation for more information.

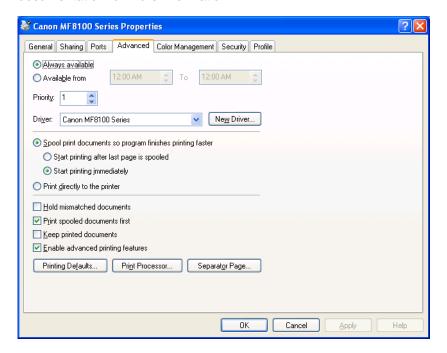




[Spool print documents so program finishes printing faster] and [Start printing immediately] are set automatically when you install the printer driver.


# **Color Management Tab**

Associates color profiles with your color printer. Refer to your Windows operating system documentation for more information.

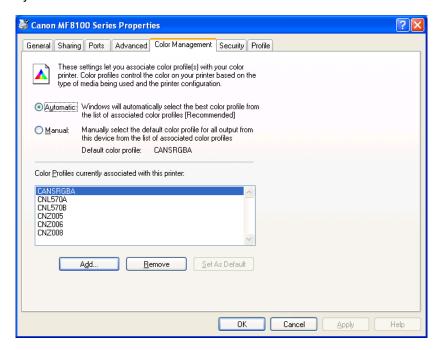


# **Security Tab**

Specifies security settings. Refer to your operating system documentation for more information.

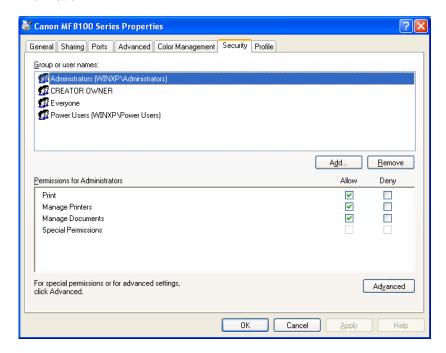

#### **Profile Tab**

Enables you to add, edit, and select a profile to be applied to print jobs.

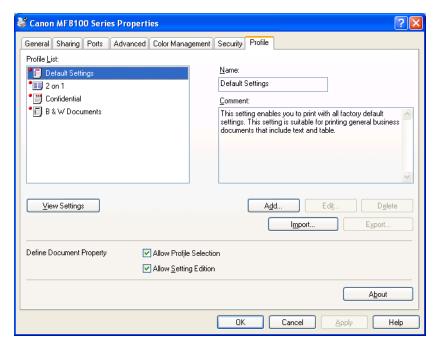

[Profile List] Displays the list of registered profiles.

Displays the name of the profile currently selected in [Profile List]. [Name]

[Comment] Describes the comment of the currently selected profile.

[View Settings] Displays the settings of the currently selected profile.

Opens the [Add/Edit Profile] dialog box which enables you to register a [Add...]

new profile (see p. 2-38).

Opens the [Add/Edit Profile] dialog box which enables you to edit the [Edit...]

registered profiles (see p. 2-38).



#### ∧ NOTE

When one of the pre-defined profile ([Default Settings], [2 on 1], [Confidential] or [B&W Documents]) is selected in [Profile List], this button is disabled.

[Delete] Removes the selected profile from [Profile List].



When one of the pre-defined profiles is selected, this button is disabled.

[Import...] Enables you to import profile information from a file.

[Export...] Enables you to export the selected profile information to a file.



When one of the pre-defined profiles is selected, this button is disabled.

#### [Define Document Property]

Controls the profile settings.

#### [Allow Profile Selection]

Enables the selecting of profiles in the document properties dialog box.

#### [Allow Setting Edition]

Enables the adding and editing of profiles as well as selecting.




When [Allow Profile Selection] is cleared, [Allow Setting Edition] is disabled.

## Add/Edit Profile

Clicking [Add] or [Edit] opens the [Add/Edit Profile] dialog box which enables you to register new profiles and edit existing profiles. This dialog box has five tab sheets.

#### ■ Attribution Tab

The [Attribution] tab sheet enables you to specify attributions of the profile.

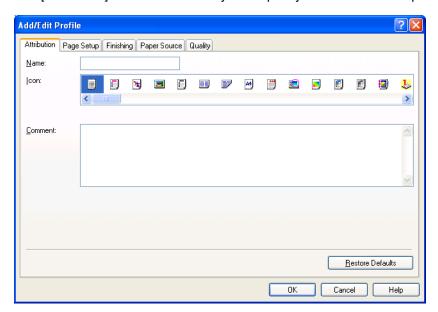

[Name] Specifies the name of the new profile, or allows you to change the name

of the profile selected in the [Profile] tab sheet.

[Icon] Selects an icon to represent the new profile, or allows you to change the

icon of the profile selected in the [Profile] tab sheet.

[Comment] Adds comments on the new profile, or allows you to change the

comments on the profile selected in the [Profile] tab sheet.

## ■ Page Setup Tab

Specifies the page settings including the paper size, scaling, number of copies, orientation, and number of pages per sheet (see p. 2-40).

### ■ Finishing Tab

Specifies the finishing settings for the printed pages including the collating and binding (see p. 2-46).

### ■ Paper Source Tab

Specifies the paper source settings including the paper source and paper type (see p. 2-48).

### ■ Quality Tab

Specifies the print quality including resolution, brightness and contrast (see p. 2-49).

## **Printing Preferences**

The [Canon MF8100 Series Printing Preferences] dialog box contains four tab sheets that enable you to specify the default print settings for every print job.




- If you access the equivalent dialog box from an application's [Print] dialog box, your selected printing options apply only to the current print job.
- For more information about the following features, see the Online Help (see p. 1-3).
- The screen shots shown are from Windows XP.

## Page Setup Tab

Specifies the page settings including the paper size, scaling, number of copies, orientation, number of pages per sheet, etc.

For information on [Profile] and [Output Method], see "Profiles," on p. 2-55.

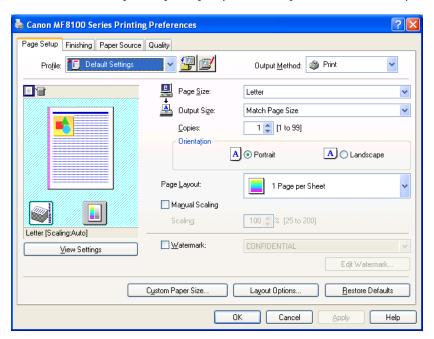

Default settings depend on the country/region of purchase.

Preview image Displays the image with the currently selected settings reflected. For

details on preview image, see p.2-56.

[Page Size] Selects the original page size to work with in an application. Available

options are; [Letter], [11 x17], [Legal], [Executive], [A5], [B5], [A4], [B4], [A3], [Index Card], [Envelope COM10], [Envelope Monarch], [Envelope DL], [Envelope C5], [Envelope B5] and [Custom]. However, when [11x17], [B4] or [A3] is selected in the [Page Size], the original page size

is automatically reduced to fit [Letter] size.

[Output Size] Selects the output paper size to print on. When this option is set to

anything other than [Match Paper Size], the original page size is automatically reduced or enlarged to fit the selected output paper size

when printed.

[Copies] Specifies the number of copies to be printed (1 to 99).

[Orientation] Selects the direction of printing relative to the paper ([Portrait] or

[Landscape]).

#### [Page Layout]

Selects the number (1, 2, 4, 6, 8, 9 or 16) of original pages per sheet or [Poster]  $(2 \times 2, 3 \times 3 \text{ or } 4 \times 4 \text{ pages to comprise one sheet})$ . When this option is set to anything other than [1 Page per Sheet] and [Poster], the original page size is reduced to fit the selected page layout when printed.




- When [Poster] is selected, [Manual Scaling], [Watermark] and [Layout Options] are disabled.
- When [1 Page per Sheet] is selected, [Manual Scaling] appears. When this
  option is set to anything other than [1 Page per Sheet] and [Poster], [Manual
  Scaling] disappears.

#### [Manual Scaling]

Reduces or enlarges the original page size. Selecting this check box enables the edit box on the right side to specify the magnification factor (25 to 200%).

#### [Page Order]

Selects the order in which original pages are placed on each sheet of the output paper when more than one page is printed per sheet.



#### [Watermark]

Inserts the selected watermark to be printed on each page. Eight types of watermark are available as default:

- CONFIDENTIAL
- COPY
- DRAFT
- FILE COPY
- FINAL
- PRFI IMINARY
- PROOF
- TOP SECRET

Selecting this check box enables [Edit Watermark] to add a watermark.



This option is disabled when [Page Layout] is set to [Poster].

## [Edit Watermark...]

Click this button to specify detailed watermark settings (see p. 2-42).

## [Custom Paper Size...]

Click this button to specify the dimensions for a paper size other than the provided standard paper sizes (see p. 2-43).



You can specify the dimensions for a paper size only in the Printer Properties dialog box (Windows - [start] - [Settings] - [Printers]). It depends on software application, you may not specify the dimensions from the Document Properties dialog box (software application).

[Layout Options...] Click this button to select options for printing dates, user name, page numbers, and borders, etc. (see p. 2-45).




This option is disabled when [Page Layout] is set to [Poster].

[Restore Defaults] Resets all the current settings to their default values.

## **Edit Watermark**

Clicking [Edit Watermark] in the [Page Setup] tab sheet opens the [Edit Watermark] dialog box. This dialog box enables you to insert a text string as a watermark onto pages. This option is enabled only when the [Watermark] check box is selected in the [Page Setup] tab sheet (see p. 2-40).

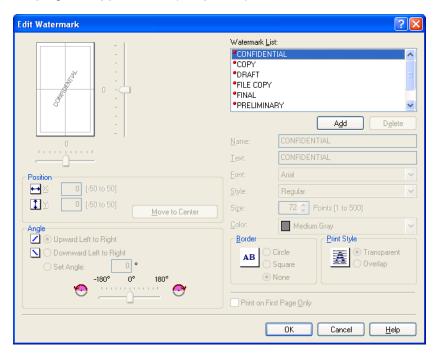

[Watermark List] Displays the names of registered watermarks. The preview image in the

upper left part of the dialog box displays the selected watermark with

the specified settings reflected.

[Add] Registers a new watermark. Clicking this button adds a blank name field

in [Watermark List] in which you enter the name of watermark to be

registered. Up to 50 watermarks can be registered.

[Delete] Removes the selected watermark from [Watermark List].



You cannot delete a pre-defined watermark.

[Position] Specifies the position where the watermark is printed on each page. You

can enter the values in the [X] and [Y] edit boxes (in a range between

-50 and 50), or use the X and Y slide bars to move the position.

[Move to Center] Relocates the watermark to the center of the page.

[Angle] Sets the angle of watermark. You can select the corresponding radio

button, or use the slide bar to move the angle, or enter a desired value in

the [Set Angle] edit box (in a range between -180 and 180).

[Name] Displays the name of the currently selected watermark.

[Text] Displays the text string of the currently selected watermark.

[Font] Selects the font type of the watermark.

[Style] Selects the font style of the watermark. Available styles are [Regular],

[Italic], [Bold], and [Bold Italic].

Specifies the font size of the watermark (1 to 500). [Size]

Selects the font color of the watermark. [Color]

[Border] Adds the frame to the watermark. You can select the frame type

([Circle], [Square], or [None]).

[Print Style] Selects the type of watermark ([Transparent] or [Overlap]).

[Print on First Page Only]


Prints the selected watermark only on the first page of the document.

### ■ Custom Paper Size Settings

Clicking [Custom Paper Size] in the [Page Setup] tab sheet opens the [Custom Paper Size Settings] dialog box. This dialog box enables you to define custom paper sizes for guick selection and register new custom paper sizes to the [Paper List] box. You can specify the name, width, and height of each size.



This setting is available only when you open the [Canon MF8100 Series Printing Preferences] dialog box from the [Printers and Faxes] folder (in Windows 98/Me/2000, [Printers]). It depends on software application, you may specify the setting from the Document properties dialog box (Software application).

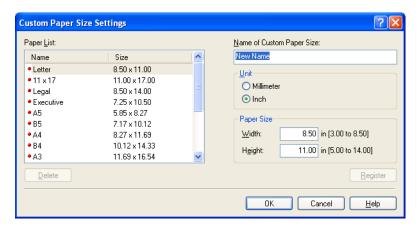

[Paper List] Displays the paper sizes actually available. Selects a paper size from which you can create a custom paper size.

#### [Name of Custom Paper Size]

Specifies the name of custom paper.

[Unit] Selects the unit of measurement of paper size ([Millimeter] or [Inch]).

[Paper Size] Specifies the width and height of the custom paper.



### ∧ NOTE

Be sure that [Width] does not exceed [Height] when specifying the values.

#### [Register]

Registers the custom paper and adds its name to [Paper List].



To register a new custom paper size, be sure to log on as a member of Administrators (Windows 2000/XP/Server 2003) or Power User (Windows 2000 only). To change the paper size for the existing custom paper size, be sure to log on as a member of Administrators.

#### [Delete]


Removes the selected custom paper from [Paper List].



- You cannot delete a pre-defined paper size.
- To delete a registered custom paper size, you be sure to log on as a member of Administrators.

### ■ Layout Options

Clicking [Layout Options] in the [Page Setup] tab sheet opens the [Layout Options] dialog box. This dialog box enables you to print pages with a page frame, header, and footer. This option is disabled when [Page Layout] in the [Page Setup] tab sheet is set to [Poster] (see p. 2-42).

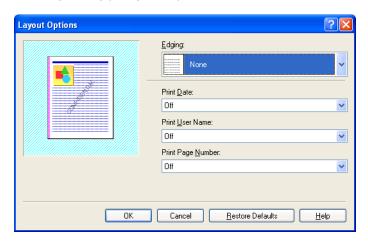

[Edging] Adds a page frame to be printed on each page. 11 options are

available. Edging is not available to use with [Print Color Sample] in the

[Quality] tab sheet (see p. 2-49).

[Print Date] Selects if the date is printed on each page or not. Six positions to print

the date are available.

[Print User Name] Selects if the user name is printed on each page or not. Six positions to

print the user name are available.


[Print Page Selects if the page number is printed on each page or not. Six positions

**Number**] to print the page number are available.

## Finishing Tab

Specifies the finishing settings for the printed pages including the collating and binding.

For information on [Profile] and [Output Method], see "Profiles," on p. 2-55.

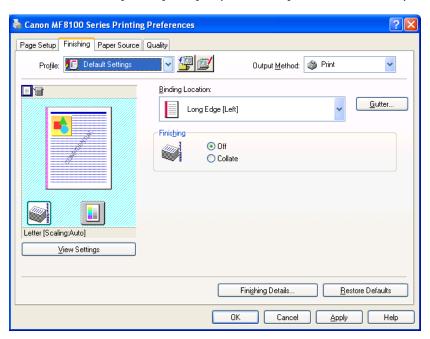

[Binding Location] Selects a binding location for the printed pages.

[Gutter...] Click this button to set the gutter width for binding a printed document

(see p. 2-47).

Select the Collate option to print a document in correct binding order. [Finishing]

For example, when printing multiple copies of a 3-page document, the

print order is 1,2,3, 1,2,3, and so on.

Click this button to display Finishing Details dialog box for specifying the [Finishing

Details...] finishing details and print mode appropriate to the printing paper (see p.

2-47).

## ■ Gutter Settings

Clicking [Gutter...] in the [Finishing] tab sheets opens the [Gutter Settings] dialog box.




[Gutter]

Specifies the gutter width in a range between 0.0 and 1.2 in (0 and 30 mm).

## ■ Finishing Details

Clicking [Finishing Details...] in the [Finishing] tab sheet opens the [Finishing Details] dialog box.



[Rotate Print Data Rotates the print output 180 degrees. 180 Degrees]


[EMF Spooling] Specifies whether the print data is spooled as EMF (meta file) format.



With some application, spooling in EMF format may cause printed images to appear differently from how they look on the screen and may require a longer time to print. In this case, uncheck this box.

## Paper Source Tab

Specifies the paper source settings including the paper type. For more information on [Profile] and [Output Method], see "Profiles," on p. 2-55.

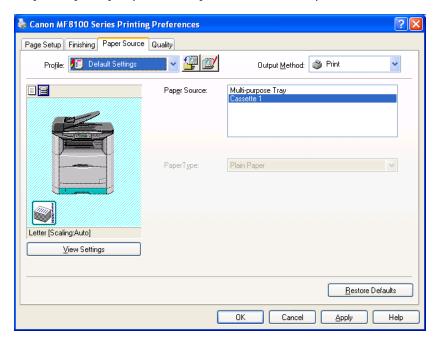

[Paper Source]

Specifies the paper Source.

[Paper Type]

Specifies the type of paper to be used as follow.


Printed Paper	[Paper Type]
Plain Paper	[Plain Paper]
Heavy Paper	[Heavy Paper]
Envelope	[Envelope]
Transparency	[Transparencies]

[Envelope] is automatically specified in [Paper Type] if you select it for [Paper Size] or [Output Size].

## **Quality Tab**

Specifies the settings for print quality including the resolution and contrast.

For information on [Profile] and [Output Method], see "Profiles," on p. 2-55.

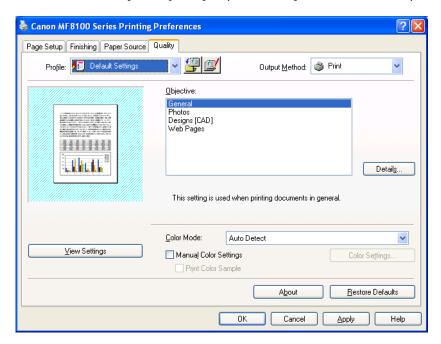

[Objective] Selects the best setting for the print job according to document content.

[Details...] Click this button to open the [Detailed Settings] dialog box and make

print quality settings (see p. 2-50).

[Color Mode] Selects whether to perform color printing or black and white printing.

[Manual Color Settings]

Enables the manual color settings. Selecting this check box enables [Color Settings] to access the dialog box which allows you to set the color for images (see p. 2-52).

[Print Color Sample]

Prints nine thumbnails per sheet to provide the print samples with the current color settings when printing the document.



This option is enabled only when [Manual Color Settings] is selected.

[Color Settings]

Click this button after selecting the Manual Color Settings check box to manually adjust the color settings. The Color Settings dialog box allows you to specify Color, Brightness, Contrast, and Matching (see p. 2-52).




This option is enabled only when [Manual Color Settings] is selected.

[About] Displays the version information on the driver.

[Restore Defaults] Resets all the current settings to their default values.

## ■ Detailed Settings

Clicking [Details...] in the [Quality] tab sheet opens the [Detailed Settings] dialog box. This dialog box enables you to specify detailed settings for print quality.

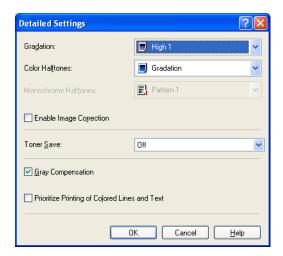

[Gradation]

Selects gradation when you print images in halftones.

Normal:

Performs a normal print job by processing black and white.

High 1:

Performs a high-quality print job by processing multi-valued colors.

High 2:

Performs a higher-quality print job than High 1.

#### [Color Halftones] Select a dither pattern when you print data in color halftones.

Resolution:

Prints normal letters and photo images at high quality. You can print most image data to a very high quality by selecting this item.

#### Gradation:

Produces high-quality printing for image data that contains a lot of gradations for Graphics and Computer Graphics.

#### Color Tone:

Make any color differences imperceptible when you print photos or images on multiple pages.

#### Pattern1 to 5:

Applies different dither patterns to text data, graphics data, and image data.

Pattern 1: Text = Resolution; Graphics = Gradation; Image = Gradation Pattern 2: Text = Resolution; Graphics = Resolution; Image = Gradation Pattern 3: Text = Resolution; Graphics = Color Tone; Image = Color Tone Pattern 4: Text = Resolution; Graphics = Resolution; Image = Color Tone Pattern 5: Text = Resolution; Graphics = Gradation; Image = Color Tone

#### [Monochrome Halftones]

Specifies the use of dithering for printing halftone data.

#### Pattern 1:

Applies the same dither pattern to text data, graphics data, and image data.

#### Pattern 2:

Applies dither pattern of clear-cut to text data, of high-quality gradation to graphics data, and of high-quality nature image to image data.

#### Pattern 3:

Applies dither pattern of clear-cut to text and graphics data, and of high-quality nature image to image data.

#### None (Solid)

Prints all colors in black except for white.

### [Enable Image Correction]

Select Enable Image Correction to smooth out the streaking and coarse features that tend to occur when printing enlarged image files and photographs using a software application.

#### [Tone Save]

Modifies print data to print lighter and conserve toner.

#### Off.

Prints using normal density.

#### On:

Prints text lighter in printouts for proofreading and checking.

#### [Gray Compensation]

Makes graphics data in black and gray printed clearly.


#### [Prioritize Printing of Colored Lines and Text]

Check this box when printed color lines or text look patchy or broken.

### ■ Color Settings

Clicking [Color Settings] in the [Quality] tab sheet opens the [Color Settings] dialog box. This dialog box enables you to control the brightness and contrast of images. This function is enabled only when [Manual Color Settings] is selected in the [Quality] tab sheet (see p. 2-49). Two tab sheets are provided in this dialog box.

#### Color Adjustment Tab

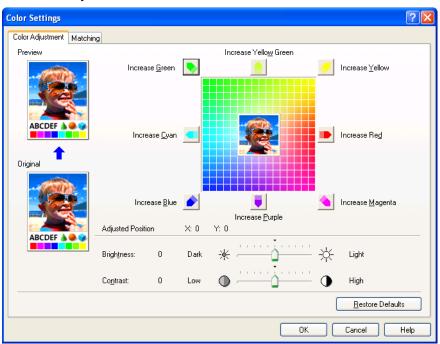

[Preview] Displays the image with the currently selected brightness and contrast

reflected.

[Original] Displays the original image.

[Adjustment Grid] Adjust color by moving [Preview Image] at the center of the Adjustment

Grid from side to side or up and down.

[Adjusted Position] Indicates with X (horizontal) and Y (vertical) the position of Preview Icon

after adjustment. The center position is X: 0 and Y: 0.

[Brightness] Adjusts the brightness of the preview image in the range between -5

and 5.

[Contrast] Adjusts the contrast of the preview image in the range between -5 and 5.

#### Matching Tab



[Matching Mode] Specifies the procedure for color correction.

Driver Matching Mode:

Processes color in the printer driver. The settings specified in Matching Method and Monitor Profile will be enabled.

ICM Mode:

Performs ICM function on Windows systems or in the application.

Gamma Adjustment:

Performs gamma adjustment with the gamma correction value specified in the Gamma box.



Gamma, and Use CanoFine in the Matching sheet become disabled when ICM Mode is selected.

[Matching Method] Specifies the matching method by assigning highest priority when the

Driver Matching Mode or ICM Mode is selected in the Matching Mode box.

Perceptual [Monitor Color Matched]:

Gives priority to matching the hue of the color on the monitor with the color of the printed output.

Perceptual [Photographic]:

Gives priority to color hue in matching and generates the colors on the monitor.

Colorimetric:

Gives priority to reducing the color difference between the original document on the screen (a logo, for example) and the printed output.

Saturation:

Gives priority to vividness in matching.

Colorimetric [No White-point Correction]:

Matching functions the same as Colorimetric but without white correction.



#### ∧ NOTE

This option can be selected only when Driver Matching Mode or ICM Mode is selected for Matching Mode.

[Monitor Profile]

Specifies the setting suitable for your monitor when the Driver Matching Mode is selected in the Matching Mode box.



#### ∧ NOTE

In the case where several gamma values are provided for one option, to obtain better results select the higher gamma value if the printed image is lighter than that of the monitor.

If the monitor is set to a custom setting, it is difficult to produce printed output similar to the color of the monitor when performing matching.

#### [Gamma]

Specifies the gamma correction value when the Gamma Adjustment is selected in the Matching Mode box.

The brightness of the document printout can be adjusted without losing the brightest and darkest portion of the document.

This option is useful when the printout result is brighter than the original image (for example, a photograph before scanning or graphics displayed on the monitor), or when you want to intentionally change the brightness of the output.

Four gamma correction values are provided. The larger the value, the darker the printout is.

1.0

1.4 Default value

1.8

2.2

#### [Use CanoFine]

Selects this option when using CanoFine. The functions of CanoFine are to correct bitmap data in a page automatically and print high-quality outputs. CanoFine prints high-quality images taken by a digital camera.

#### [Single-page Batch Processing]

Processes multiple bitmaps on a page as a single data item when Use CanoFine is selected.


#### [Enhanced Saturation]

Emphasizes color intensity for CanoFine processing when Use CanoFine is selected.

[Restore Defaults] Resets all the current settings to their default values.

### **Profiles**

A registered combination of settings for the [Page Setup], [Finishing], [Paper Source] and [Quality] tab sheets is referred to as a profile. The profile function commonly provided in each of these tab sheets enables you to add, edit, and select a profile, which facilitates your print jobs.

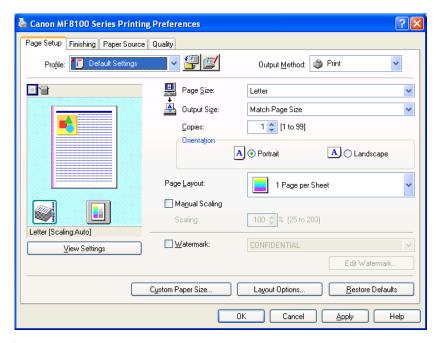

[Profile]

Stores various printer driver settings, each suitable for certain print jobs, as pre-defined Profiles. Selecting Profiles from the drop-down list enables the printer to perform a variety of print jobs. A frequently performed print job can also be saved as a Profile.


#### Preview image

Displays the image with the currently selected settings reflected.

Changes the setting for [Page Layout] every time you click anywhere inside the image of the page (see p. 2-41). The setting changes in the following order: [1 Page per Sheet] → [2 Pages per Sheet] → [4 Pages per Sheet] → [1 Page per Sheet]....

Right-clicking the mouse button on the preview image displays the pop-up menu, from which you can also change the setting for [Page Layout] and [Color Mode].

Clicking the edges of the preview image of the page changes the binding location.

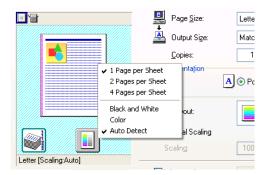

#### [Output Method]

Switches the job mode between [Print] and [Edit and Preview].



#### [Print]

Executes a normal print job.

#### [Edit and Preview]

Saves the data in the Canon PageComposer dialog box. If you open [Canon MF8100 Series Properties] from the [Printers] folder and select the [Edit and Preview] mode, (Lock) button appears on the right side. When you click this button, the [Edit and Preview] mode is locked.



(Add Profile) Click this button to display the Add Profile dialog box to add a new Profile to the list (see p. 2-57).




(Edit Profile) Click this button to display the Edit Profile dialog box to edit the name, icon, or comment of a stored Profile (see p. 2-57).

#### [View Settings]

Click this button to display the [View Settings] dialog box. This dialog box allows you to view and confirm all of the current page settings in a listed form (see p. 2-59).

#### ■ Add Profile

Clicking (Add Profile) opens the [Add Profile] dialog box. This dialog box enables you to register a new profile with the current settings. You can add up to 50 new profiles.

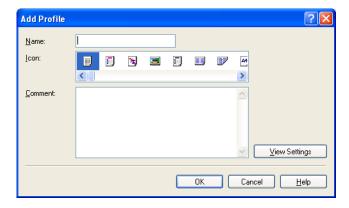

[Name] Specifies the name of the profile to be registered.

[lcon] Selects an icon to represent the profile to be registered.

[Comment] Adds comments on the profile to be registered.


[View Settings] Click this button to display the [View Settings] dialog box. This dialog

box allows you to view and confirm all of the current page settings in a

listed form (see p. 2-59).

#### ■ Edit Profile

Clicking (Edit Profile) opens the [Edit Profile] dialog box. This dialog box enables you to edit the profile selected in [Profile List].

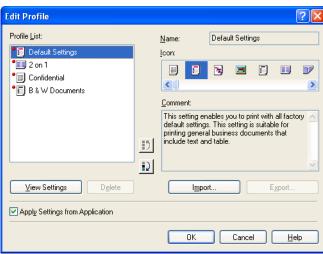

[Profile List] Displays the list of registered profiles.

[View Settings] Click this button to display the [View Settings] dialog box. This dialog

box allows you to view and confirm all of the current page settings in a

listed form (see p. 2-59).

Moves the profile selected in the [Profile List] one position up.

Moves the profile selected in the [Profile List] one position down.

[Delete] Removes the selected profile from [Profile List].



When one of the pre-defined profiles or the profiles you defined in the [Profile] tab of the printer properties dialog box is selected, you cannot delete it.

[Name] Displays and allows you to change the name of the currently selected profile.



When one of the pre-defined profiles in the [Profile] tab of the printer properties dialog box is selected, the name cannot be changed.

[Icon] Displays and allows you to change the icon representing the currently selected profile.

∧ NOTE

When one of the pre-defined profiles in the [Profile] tab of the printer properties dialog box is selected, the icon cannot be changed.

[Comment] Displays and allows you to change the comment on the currently selected profile.

**⊘** NOTE

When one of the pre-defined profiles in the [Profile] tab of the printer properties dialog box is selected, the comment cannot be changed.

[Import...] Enables you to import profile information from a file.

[Export...] Enables you to export the selected profile information to a file.


When one of the pre-defined profiles is selected, this button is disabled.

[Apply Settings from Application]

Applies the selected profile only to the settings other than [Paper Size], [Orientation] and [Copies].

### ■ View Settings

Clicking [View Settings] opens the [View Settings] dialog box. This dialog box displays the current settings in the [Page Setup], [Finishing], [Paper Source] and [Quality] tab sheets.

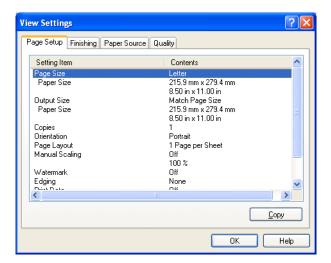

[Copy] Copies the contents of the current settings to the clipboard.

## **Using the Machine on Your Network**

This section provides instructions for using the Canon Color imageCLASS MF8180c machine on your network.

By setting your machine as a shared printer on your network, the network users can share the machine for printing. The print server and clients do not need to use the same operating system, and it is possible to print from a Windows 98/Me client to a Windows 2000/XP/Server 2003 print server, or vice versa.

You can start printing simply by starting the server, even if the server was not running when the client was started.

If the server is running on Windows 2000/XP/Server 2003, you can print even if no one is logged into the server.

For more information, refer to the Network Guide.

## **Setting the Machine as a Shared Printer**

If you plan to share your Canon Color imageCLASS MF8180c machine on a network, install the print server locally, then make the following settings. For more information, see your print server system documentation.

## Windows 2000/XP/Server 2003 Server Settings

The following is the procedure to make your machine available to your network users, under Windows 2000/XP/Server 2003.

- Adding Server Service (Windows XP/Server 2003)
- 1 Click [start] on the Windows task bar → select [Control Panel].


  The [Control Panel] folder appears.
- Click [Network and Internet Connections] → select [Network Connections].

The [Network Connections] folder appears.

3 Right-click the [Local Area Connection] icon → select [Properties] from the pop-up menu.

The [Local Area Connection Properties] dialog box appears.

Select [File and Printer Sharing for Microsoft Networks] → click [OK].

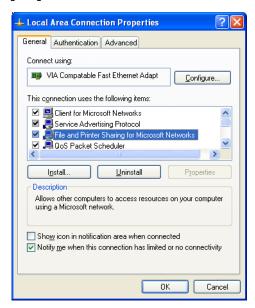

The server service is added.


- Adding Server Service (Windows 2000)
- 1 Click [Start] on the Windows task bar → select [Settings] → [Network and Dial-up Connections].

The [Network and Dial-up Connections] folder appears.

2 Right-click the [Local Area Connection] icon → select [Properties] from the pop-up menu.

The [Local Area Connection Properties] dialog box appears.


# 3 Select [File and Printer Sharing for Microsoft Networks] → click [OK].

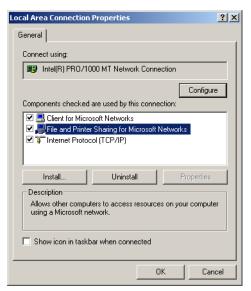

The server service is added.

## ■ Setting Printer Sharing

1 Open the printer properties dialog box → select [Share this printer] (Windows 2000: [Shared as]) in the [Sharing] tab sheet.

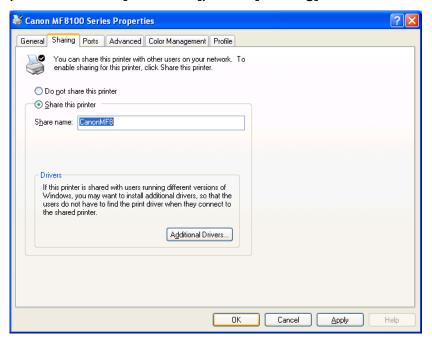



On how to open the printer properties dialog box, see "Changing Print Settings," on p. 2-4.

2 Enter a share name in the edit box as needed.



Do not enter a space or special character in the [Share name] edit box.

## 3 Click [OK].

The printer driver icon changes to indicate sharing.

## Windows 98/Me Server Settings

The following is the procedure to make your machine available to your network users, under Windows 98/Me.

The screen shots shown are from Windows 98.

## ■ Adding Server Service


1 Click [Start] on the Windows task bar → select [Settings] → [Control Panel].

The [Control Panel] folder appears.

2 Double-click the [Network] icon.


The [Network] dialog box appears.

3 Click [Add...] in the [Configuration] tab sheet.

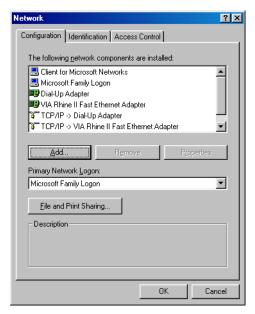


The [Select Network Component Type] dialog box appears.

4 Select [Service] → click [Add...].

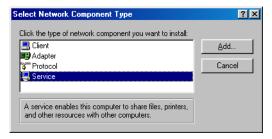


The [Select Network Service] dialog box appears.

5 Select [File and printer sharing for Microsoft Networks] → click [OK].

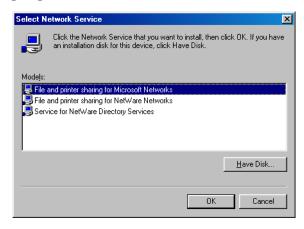

6 Click [File and Print Sharing...].

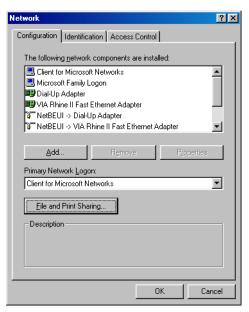


The [File and Print Sharing] dialog box appears.

7 Select [I want to be able to allow others to print to my printer(s).] → click [OK].



## Select the [Access Control] tab → [Share-level access control] or [User-level access control].

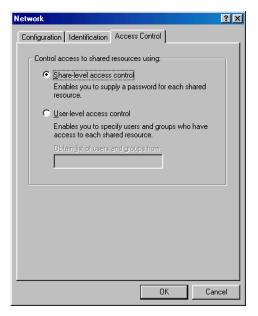

## 9 Click [OK].

The server service is added.

If the confirmation message dialog box appears, click [Yes] to restart your computer.

## Using the Shared Printer on Your Network

When the Canon Color imageCLASS MF8180c machine is already on your network and set as a shared printer, you can use it via network. The easiest way to make the machine available for your computer is using network download. If your operating system is Windows 2000/XP/Server 2003, you cannot download the driver from Windows 98/Me servers. In that case, use [Add Printer Wizard].

## **Network Download**

The following is the procedure to connect to the shared printer on your network using network download.



Windows 2000/XP/Server 2003 clients cannot download the driver from Windows 98/Me servers.

- Open Explorer → browse the network until you can see the icon of the shared printer.
- 2 Double-click the machine icon, or drag the machine icon to your [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder.

The [Add Printer Wizard] dialog box appears.

3 Follow the instructions on the screen to complete the installation.

## Add Printer Wizard (Windows 2000/XP/Server 2003)

The following is the procedure to connect to the shared printer on your network using Windows 2000/XP/Server 2003.

(IMPORTANT

Installation in Windows 2000/XP/Server 2003 needs to be done by a user with administrator privileges.

1 Open the [Printers and Faxes] (Windows 2000: [Printers]) folder.

Click [start] on the Windows task bar  $\rightarrow$  select [Printers and Faxes] (Windows 2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Printers]).

Open the [Add Printer Wizard] dialog box.

Click [Add a printer] in [Printer Tasks] (Windows 2000: double-click the [Add Printer] icon).

- Click [Next >].
- Select [A network printer, or a printer attached to another computer] (Windows 2000: [Network printer]) → click [Next >].

The [Specify a Printer] (Windows 2000: [Connect to Printer]) dialog box appears.

5 Select [Connect to this printer (or to browse for a printer, select this option and click Next)] (Windows 2000: [Type the printer name, or click Next to browse for a printer]) → enter the name of the printer you want to connect to → click [Next >].

If you do not know the name of the printer, click [Next >] without entering the name to proceed to the [Browse for Printer] dialog box. In this dialog box, select the printer  $\rightarrow$  click [OK].



- If the printer name is invalid, it means the client cannot connect to the shared printer.
- If a suitable driver is not found, it probably means the server is a Windows 98/Me computer.
- **6** Follow the instructions on the screen to complete the installation.

## Add Printer Wizard (Windows 98/Me)

The following is the procedure to connect to the shared printer on your network using Windows 98/Me [Add Printer Wizard].

The screen shots shown are from Windows 98.

Click [Start] on the Windows task bar → select [Settings] → [Printers].

The [Printers] folder appears.

2 Double-click the [Add Printer] icon.

The [Add Printer Wizard] dialog box appears.

- 3 Click [Next >].
- 4 Select [Network printer] → click [Next >].
- 5 Enter the network path or print queue that you want to connect to, or select the location of the shared printer.
  - To enter the location directly:
    - ☐ Enter the path name or print queue in the edit box.


#### To select the location:

- ☐ Click [Browse...].
- □ Select the location of the printer → click [OK].



Depending on your network environment, the installation of the driver may be carried out automatically. In this case you need not perform steps 7 through 10 below.

- 6 Click [Next >].
- 7 Click [Have Disk...].

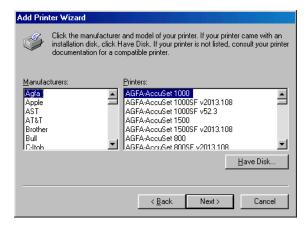

The [Install From Disk] dialog box appears.

Select the location containing the printer driver.



- To specify in the default location:
  - ☐ Go to step 9.

## • To change the location:

- ☐ Click [Browse...].
- $\square$  Select the location containing the printer driver  $\rightarrow$  click [OK].

You can also enter the path name directly in the edit box.

- 9 Click [OK].
- 10 Enter the name of the printer you want to use → click [Next >].

If you accept the default name, leave the edit box as it is  $\rightarrow$  click [Next >].



If the connection fails, you will be able to install the printer but you will not be able to use the printer until it comes back online.

11 Follow the instructions on the screen to complete the installation.

# Scanning



This chapter explains the procedure to scan documents to your computer.



For better scanning quality for color documents, we recommend that you place documents on the platen glass. If you use the ADF, the scanned image might not be clear.

## Scanning with [B&W Start] or [Color Start] on the Machine

By pressing [SCAN] → [B&W Start] or [Color Start] on the operation panel of the machine, you can scan documents to your computer.

Pressing [SCAN] → [Color Start] has the same effect as clicking [Save] in the MF Toolbox.

Pressing [SCAN] → [B&W Start] has the same effect as clicking [OCR] in the MF Toolbox.

You can change the settings for [Save], or set up a button other than [Save] to perform the same operation. (See "Setting the Scanning Function for [B&W Start] or [Color Start]," on p. 3-3.)



You can use the machine for only a local scanner (connected directly to your computer).

1 Place the document face-down on the platen glass or load it face-up in the ADF.

## 2 Press [SCAN] → [B&W Start] or [Color Start] on the machine.

If you are asked to select a program to launch, select "MF Toolbox Ver4.9." Scanning starts.

The MF Toolbox and the [Save] or [OCR] dialog box will open, but the document will be scanned without pressing [Start] in the [Save] or [OCR] dialog box.

The scanned document will be processed according to your settings.

When you use [Start] for the first time, a folder with the scanning date will be created in the [My Pictures] folder in the [My Documents] folder, and your document will be saved in this folder. If there is no [My Pictures] folder, the folder with the scanning date will be created in the [My Documents] folder and your document will be saved in this folder.

## Setting the Scanning Function for [B&W Start] or [Color Start]

When you scan for the first time using [B&W Start] or [Color Start] on the machine, scanning will occur in the same way as when you click [Save] or [OCR] in the MF Toolbox.

## Setting Up [Start] to Operate in a Different Way from [Save]

1 On the Windows desktop, double-click [Canon MF Toolbox 4.9].

Alternatively, on the Windows desktop, click [start]  $\rightarrow$  [(All) Programs]  $\rightarrow$  [Canon]  $\rightarrow$  [MF Toolbox 4.9]  $\rightarrow$  [Toolbox 4.9]. The MF Toolbox will open.



2 Drag the B&W or Color 

mark over the button you want to select.



The  $\Phi$  mark will be displayed above the button you select.



## Setting Up [B&W Start] or [Color Start] in the [Settings] Dialog Box

In the MF Toolbox, click [Settings]. In the [Settings] dialog box, from the pull-down list for [B&W Start] or [Color Start], select the button you want to link [B&W Start] or [Color Start] to, then click [OK] or [Save].



You cannot set the [B&W Start] and [Color Start] to the save event.




You can also set up [B&W Start] or [Color Start] in the [Scanners and Cameras] folder (see p. 3-5).

# Setting Up [B&W Start] or [Color Start] in the [Scanners and Cameras] Folder (Windows 2000: the [Scanners and Cameras Properties] Dialog Box)

1 Open the [Scanners and Cameras] folder (Windows 2000: the [Scanners and Cameras Properties] dialog box).

Click [start] on the Windows task bar, select [Control Panel]  $\rightarrow$  [Scanners and Cameras] (Windows 98/Me/2000: [Settings]  $\rightarrow$  [Control Panel]  $\rightarrow$  double-click the [Scanners and Cameras] icon).


- 2 Click the corresponding scanner driver name or icon.
- From the [File] menu, click [Properties]. (Windows 98/Me/2000: Click [Properties].)

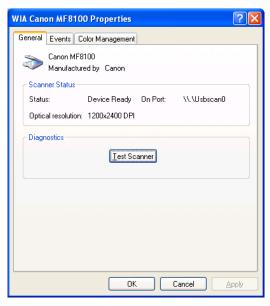

## Specify an action for [B&W Start] or [Color Start].

#### On Windows XP:

□ Select the [Events] tab → select [Canon MF8100 Color Start Button] or [Canon MF8100 B&W Start Button] in the [Select an event] pull-down list → select the operation for [B&W Start] or [Color Start] in [Actions] → click [OK].

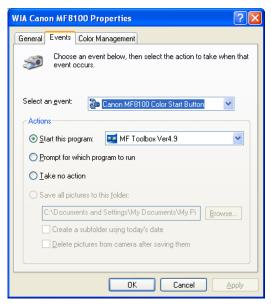

#### On Windows 98/2000/Me:

Select the [Events] tab → select [Canon MF8100 Color Scan Button] or [Canon MF8100 B&W Scan Button] in the [Scanner events] pull-down list → select the operation for [B&W Start] or [Color Start] in [Send to this application] → click [OK].



If the settings you specified in the scanner property dialog box do not work immediately, disconnect and reconnect the USB cable, or restart your computer.

## Scanning with the MF Toolbox

You can scan a document using the buttons on the MF Toolbox.

- 1 Place the document face-down on the platen glass or load it face-up in the ADF.
- 2 On the Windows desktop, double-click [Canon MF Toolbox 4.9].

Alternatively, on the Windows desktop, click [start]  $\rightarrow$  [(All) Programs]  $\rightarrow$  [Canon]  $\rightarrow$  [MF Toolbox 4.9]  $\rightarrow$  [Toolbox 4.9]. The MF Toolbox will open.



[MF Toolbox] buttons

3 Click one of the scanning buttons below.

[Mail] The document will be scanned and attached to an e-mail message

in your e-mail application.

[OCR] The text will be scanned and read by the OCR software.

[Save] The document will be scanned and saved.

[PDF] The text will be scanned and saved as a PDF file.

[Scan-1], [Scan-2] The text will be scanned and appear in the registered application.

You can change the button name by directly entering a new name over the button name. The name can be up to 8 characters long.

A dialog box will appear for each of the buttons.



Example: [Mail] dialog

## 4 Adjust the settings.

For details, see "MF Toolbox Settings," on p. 3-10.


If you clicked a button other than [Mail] or [Save] and no application appears in [External program (Mail Program)], select an application.

If you want to keep the same settings for future scans, click [Apply] before clicking [Start].

## 5 Click [Start].

If you checked the [Display the Scanner Driver] checkbox in step 4, the [ScanGear MF] dialog box will appear.

Adjust the settings, then click [Scan].

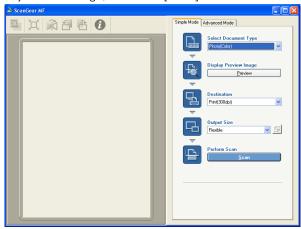

[ScanGear MF] dialog box

For details, see "Setting Preferences and Scanning with ScanGear MF," on p. 3-19. Scanning starts.

If you clicked [Mail], [Save] or [PDF] in step 3, a folder with the scanning date will be created in the [My Pictures] folder in the [My Documents] folder, and your document will be saved in this folder. If there is no [My Pictures] folder, the folder with the scanning date will be created in the [My Documents] folder and your document saved in this folder.

If you clicked [Mail], [OCR], [PDF], [Scan-1], or [Scan-2] in step 3, the scanned image will be displayed in the application after scanning. Send the e-mail message or perform OCR conversion. (The scanned image will not be displayed if you have not installed the applications on the MF8100 Series Setup CD-ROM or if you have not set the [External Program] (Mail program))

When the applications in the MF8100 Series Setup CD-ROM are installed, they will be registered in the MF Toolbox buttons.

[OCR]ScanSoft OmniPage


[PDF]Presto! PageManager



#### NOTE

If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately <sup>1</sup>/<sub>8</sub>" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

## MF Toolbox Settings

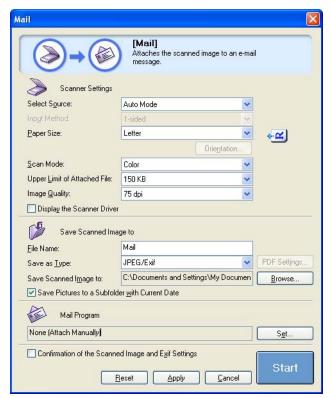

Example: [Mail] dialog box

## **Scanner Settings**

You can specify the scanning mode, scanning resolution, document size, and file size of the scanned image. You can also select to make advanced settings using the ScanGear MF.

## **■** [Select Source]

Selects where the document is placed ([Platen Glass], [ADF], or [Auto Mode]).



When [Auto Mode] is selected, the document in the ADF is automatically scanned. if there is no document in the ADF, the document on the platen glass will be scanned.

#### **■** [Paper Size]

Selects the size of the document you will scan.

If you wish to specify the width and height with a value, select [Custom] to display the [Paper Size Settings] dialog box. Select the [Unit], enter the [Width] and [Height] → click [OK].

#### ■ [Scan Mode]

Selects the scan mode. The scan modes you can select differ depending on the MF Toolbox button you press.

[Black and White] Scans document as a black and white image.

[Black and White Scans document as a black and white image for OCR.

(OCR)]

[Grayscale] Scans document as a grayscale image (similar to a monochrome

picture).

[Color] Scans document as a color image.

[Color (Magazine)] Scans document as a color image with the [Descreen] function set to

[On]. The [Descreen] function is designed to reduce the distorted pattern (moire) as much as possible, which occasionally occurs when scanning printed materials. The scanning of a document will take

longer if you use this function.

#### ■ [Upper Limit of Attached File]

Selects an approximate upper size limit (after compression) for the image you will send. (Depending on the image, some file sizes after compression may be larger than the value set.)

For an ordinary mail message, a file size of [150 KB] is recommended.

You cannot select this item when [PDF] is selected in [Save as Type].

#### ■ [Image Quality]

Selects the scan quality (resolution).

When scanning using the [Mail] button, the resolution you can select will depend on your setting in [Upper Limit of Attached File].

#### **■** [Display the Scanner Driver]

If you check this checkbox and click [Start], the ScanGear MF dialog box will appear and you can make advanced settings for scanning.

If you do not check this checkbox, scanning will begin immediately with the settings displayed.

This option is not available when scanning using the [OCR] button.

## **Save Scanned Image to**

You can specify the file name, file format, and location to save the scanned image. When you select [PDF] as file format, you can also perform detailed settings for the PDF file.

#### **■** [File Name]

Enter a file name for the scanned image.

If you try to save another file with the same name, four digits starting from 0001 will be attached after the file name.

## ■ [Save as Type]

[BMP] Bitmap format.

[JPEG/Exif] JPEG/Exif format. This operation is available when [Grayscale],

[Color] or [Color (Magazine)] is selected in [Scan Mode].

[PDF] TIFF format. PDF format.

[PDF (Multiple Creates one PDF file from two or more scanned pages, see "Creating

Pages)] One PDF File from Two or more Pages," on p. 3-16.

[PDF (Add Page)] Adds the scanned image to the last page of an existing PDF file that

was created with the MF Toolbox.

The type of file which can be saved with each button is shown below.

	ВМР	JPEG/Exif	TIFF	PDF	(Multiple pages)	PDF (Add page)
[Mail]	_	0	_	0	0	0
[OCR]	0	0	0	_	_	_
[Save]	0	0	0	0	0	0
[PDF]	_	-	_	0	0	0
[Scan-1], [Scan-2]	0	0	0	_	_	_

If you select [PDF] in [Save as Type], depending on the output settings in the Advanced Mode, an error message may appear indicating that the image size is too large. In such cases, reduce the [Output Size] and/or [Output Resolution] under [Output Settings] to reduce the [Data Size] of the scanned file.

If you select [JPEG] in [Save as Type] and then select [Newspaper (B&W)] in ScanGear MF Simple Mode or [Black and White] in ScanGear MF Advanced Mode, the document will still be saved in grayscale.

To change the location to save the scanned images, click [Browse]  $\rightarrow$  select a folder  $\rightarrow$  click [OK].

When you scan for the first time, a folder with the scanning date will be created in the [My Pictures] folder in the [My Documents] folder, and your document will be saved in this folder. If there is no [My Pictures] folder, a folder with the scanning date will be created in the [My Documents] folder and your document saved in this folder.

#### **■** [Save Pictures to a Subfolder with Current Date]

Check this checkbox to create a folder with current date (e.g. 2005-12-31) in the specified location and save the scanned images in this folder.

## **External program (Mail Program)**

You can specify an application to be used to display the scanned image. If no name is displayed or you wish to change the application, click [Set] - select the application you wish to use - click [OK].

If the name of the application you wish to use does not appear for the [Mail] button, select [None (Attach Manually)]. In this case, you must open the image file in the application and attach the file manually.

The software is compatible with the e-mail software such as Outlook Express, Microsoft Outlook, EUDORA and Netscape Messenger.

If you do not want to select an application, click [Set] → Select [None] on the [Setting for E-mail Program] dialog box.

## Confirmation of the Scanned Image and Exif Settings (Confirm Scanned Image)

You can preview the scanned images as thumbnail images, and specify the file type and location to save them. You cannot use this function when scanning with the [OCR] button, and for the [PDF] button, only the confirmation of the scanned image is available.

Check the [Confirmation of the Scanned Image and Exif Settings] checkbox (for the [PDF] button, [Confirm the Scanned Image] checkbox) → click [Start]. When the scanning is complete, the thumbnail of the scanned image will be displayed. Confirm the thumbnail image → specify the file type and location → press [Save] or [Forward].

[Save as Type] Specifies the file type to save the scanned image. You can select from

[JPEG/Exif], [BMP], [TIFF], or [PDF]. The available file types are the same as those listed in [Save as Type] of the [Save Scanned Image to]. If you select [JPEG/Exif], you can set the Exif information using [Exif Settings] dialog box (see "Exif Settings," on p. 3-14). If you select [PDF], you can make advanced settings with the [PDF Settings] (see "Creating

One PDF File from Two or more Pages," on p. 3-16). Specifies the location to save the scanned image.

[Save Scanned

Image to]

[Save Pictures to a Subfolder with Current Date]

Check this checkbox to create a folder with current date inside the specified location and save the scanned images in this folder.

[Forward] Press to forward the scanned images to the application you specified in

the [External Program] settings. When scanning with the [Mail] button and [None (Attach Manually)] is selected for [Mail Program], pressing

[Save] opens the folder where the scanned image is saved.

[Save] Press to save the scanned images in the specified location. This button

appears instead of the [Forward] button when scanning with the [Save]

button.

#### **■** Exif Settings

You can attach extra information in the Exif format, such as the description of the image, the date the image was scanned, etc., to the JPEG files. Select a scanned image from the pull-down list to view and add information for the image.

[Basic information] Displays the information automatically acquired by scanning.

[Advanced information Displays the extra information you enter. Check the checkbox of the

item you want to enter  $\rightarrow$  specify a value  $\rightarrow$  click [Apply].



You can enter only ASCII characters in "Description" and "Artist."

[Apply the Same Setting of Input Items Automatically]

Check this checkbox to use the same values you have specified in

the previous scanning operation.

[OK] Press to exit the Exif Settings.

## Scanning an Image from an Application

You can scan an image from a TWAIN- or WIA- (Windows XP only) compliant application and use the image in that application.

This procedure varies depending on the application. The following is only one example. For the correct procedure, refer to the documentation of the application vou are using.

- Place the document face-down on the platen glass or load it face-up in the ADF.
- Open the application from which you will scan the document.
- Select the command to scan.

In most cases, select [Import] or [Acquire image] etc. from the [File] menu.

Select the scanner driver to be used.

With Windows XP, you can use the ScanGear MF or the WIA driver as the scanner driver

To use ScanGear MF, select [Canon MF8100].

To use the WIA driver, select [WIA-Canon MF8100].

5 Specify the scanner settings → click [Scan].

For details, see "Setting Preferences and Scanning with ScanGear MF," on p. 3-19, or "Scanning with the WIA Driver (Windows XP Only)," on p. 3-44.

When scanning is completed, the scanned image will appear in the application's display area.



If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately <sup>1</sup>/<sub>8</sub>" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

## **Creating One PDF File from Two or more Pages**

You can scan two or more pages and make them into one PDF file.

- 1 Place the document face-down on the platen glass or load it face-up in the ADF.
- 2 On the Windows desktop, double-click [Canon MF Toolbox 4.9].

  Alternatively, on the Windows desktop, click [start] → [(All) Programs] → [Canon] →
- [MF Toolbox 4.9] → [Toolbox 4.9]. The MF Toolbox will open.Click [Mail], [Save] or [PDF].
- 4 Select [PDF (Multiple Pages)] in [Save as Type].
- 5 Click [PDF Settings...].

If necessary, adjust any settings.



## Adjust the following settings if necessary → click [OK].

[Create Click to convert the characters in the document to text data and Searchable PDF make the document searchable with simple keywords. However, all

the characters in the document may not be accurately recognized.

In [Text Language], select [English].


[PDF Select [High] for images such as photos or illustrations to be

Compression] further compressed, reducing the file size.

## Click [Start].

The [ScanGear MF] dialog box will open if you selected [Display the Scanner Driver] in step 3.

Adjust your settings, then click [Scan].

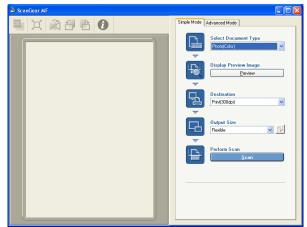


[ScanGear MF] dialog box

For settings, see "Setting Preferences and Scanning with ScanGear MF," on p. 3-19. Scanning starts.

## **⊘** NOTE

If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately 1/8" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass. If you are scanning using the platen glass, the following dialog box appears as each page is scanned.



To continue to scan, place the next page and click [Next]. When scanning is completed, click [Finish].

A folder with the scanning date will be created in the [My Pictures] folder in the [My Documents] folder, and your document will be saved in this folder. If there is no [My Pictures] folder, the folder with the scanning date will be created in the [My Documents] folder and your document saved in this folder.

For text documents or black-and-white documents, it is recommended you select either [Black and White] or [Grayscale] in [Scan Mode].

If making a Multiple PDF with color documents ([Image Quality] set to [300 dpi]), it is recommended that the PDF have fewer than 20 pages.

## Setting Preferences and Scanning with ScanGear MF

With ScanGear MF, you can review with the preview image (provisional scan) how the final image will be scanned and make detailed adjustments for the size and color of the image. If the preview image is satisfactory, you can then scan the document properly.

If you wish to make settings with ScanGear MF when scanning a document, you can either check the [Display the Scan Driver] checkbox in the MF Toolbox before scanning, or scan from an application.




If you are scanning from an application in Windows XP, select ScanGear MF in the application before scanning. For details, see "Scanning an Image from an Application," on p. 3-15.


## **Switching between Simple Mode and Advanced Mode**

ScanGear MF has two modes: [Simple Mode] and [Advanced Mode]. With [Advanced Mode] you can perform detailed settings such as resolution and contrast.

To switch between two modes, click the corresponding tab.

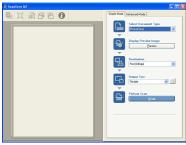


[Simple Mode] dialog box

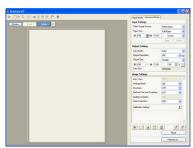

[Advanced Mode] dialog box

## **Using Simple Mode**

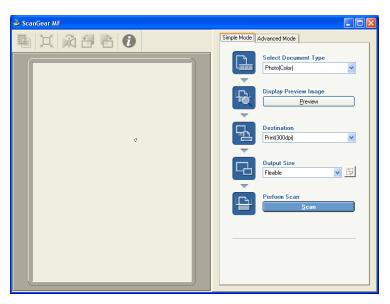

- 1 Place the document face-down on the platen glass or load it face-up in the ADF.
- 2 In [Select Document Type], select the document type.

[Photo (Color)] To scan color photos (300dpi).

[Magazine (Color)] To scan color magazines (150dpi, with the Descreen function).

[Newspaper (B & To scan text and line drawings (black and white, 300dpi). W)]

[Document To scan color image or text in monochrome. Especially appropriate,

(Grayscale)] for scanning high-resolution monochrome image (300dpi).

[Document (Color) To scan color document (300 dpi) on the ADF. ADF]

[Document To scan Grayscale document (300 dpi) on the ADF. (Grayscale) ADF]



If you select a document type other than [Newspaper (B & W)], there will be automatic color correction. To turn off automatic color correction, in Advanced Mode, click [Preferences] →[Color Settings] tab →clear [Always Execute the Auto Tone].

## To see a preview image (provisional scan), click [Preview].

A preview of the document will be scanned and appear in the preview window.

## Select the destination of the scanned image.

You can select from [Print (300 dpi)], [Image Display (150 dpi)], or [OCR (300 dpi)], depending on the document type you select in step 2.

For details on this setting, see "Determining Resolution," on p. 3-42.

## 5 Select the output size of the scanned image depending on the destination you selected in step 4.

If you select [Add/Delete], you can add or delete the custom output size. For details on setting, see "Add/Delete the Output Size," below.

Click to switch the orientation of the output size (landscape or portrait).

## 6 Click [Scan].


Scanning starts.



If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately 0.12 inches from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

## Add/Delete the Output Size

Selecting [Add/Delete...] for the [Output Size] in the [Simple Mode] tab sheet opens the [Add/Delete the Output Size] dialog box. In this dialog box, you can add or delete the custom output size.

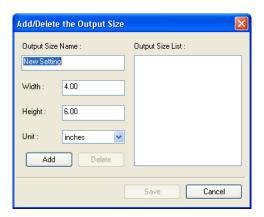

[Output Size Specifies the output size name you want to register.

Name]

[Output Size List] Displays the registered output size.

[Width] Specifies the width of the output size.[Height] Specifies the height of the output size.

[Unit] Selects the unit of measurement for the output size.

[Add] Adds the output size to the [Output Size List].

[Delete] Deletes the selected output size from the [Output Size List].

[Save] Save the output size you specify.

## Simple Mode Toolbar

With the Simple Mode Toolbar, you can make adjustments to the preview image and also select a part of the image displayed.



This button is disabled for this model.

(Auto Crop) Crops the image border automatically. For details, see "Advanced Mode

- Specifying the Parameters of a Scan," on p. 3-25.

(Flip) Flips the scanned image horizontally.

(Left Rotate) Rotates the scanned image 90 degrees left.

(Right Rotate) Rotates the scanned image 90 degrees right.

(Information) Lists the scanning information.


#### ■ To Detach and Move the Toolbar

To detach the toolbar from the ScanGear MF dialog box, click and hold on the edge of the toolbar, then drag the Toolbar. It will return to its original position if you double-click on the title of the toolbar.

The toolbar will adhere to a position if you drag it to the left or right of the preview area or the bottom frame.

## **Using Advanced Mode**

In Advanced Mode, you can adjust settings such as brightness and contrast to the preview.

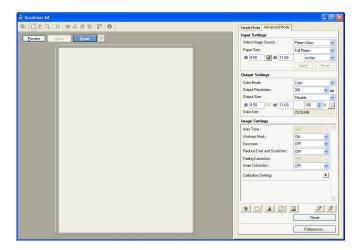

- 1 Place the document face-down on the platen glass or load it face-up in the ADF.
- 2 Select settings for [Input Settings], [Output Settings] and [Image Settings], and adjust the color settings.

For details on the settings, see "Advanced Mode Settings," on p. 3-26.

3 Click [Preview].



- Selecting the range in the preview window and clicking [Zoom] reloads the selected image to enlarge it.
  - When enlarged image is displayed, the [Zoom] button changes to the [Undo] button. Clicking [Undo] displays the image in normal size.
- To delete the displayed preview image, click 

  → when asked to confirm, click [OK].
- 4 If you want to scan only part of the document, specify the parameters.

For details, see "Advanced Mode - Specifying the Parameters of a Scan," on p. 3-25.

## 5 Click [Scan].


Scanning starts.



If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately <sup>1</sup>/8" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

#### Advanced Mode Toolbar

With the Advanced Mode Toolbar, you can make adjustments to the preview image and also select a part of the image displayed.

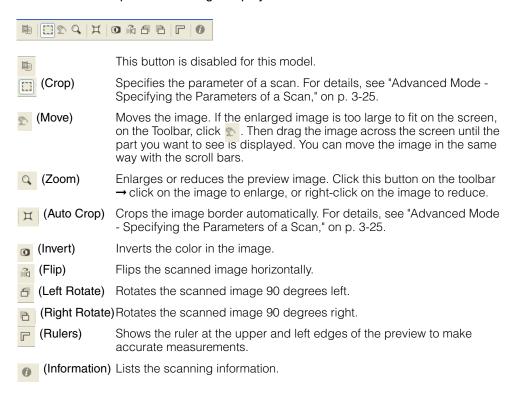

#### ■ To Detach and Move the Toolbar

To detach the Toolbar from the ScanGear MF dialog box, click and hold on the edge of the Toolbar, then drag the Toolbar. It will return to its original position if you double-click on the title of the Toolbar.

The Toolbar will adhere to a position if you drag it to the left or right of the preview area or the bottom frame.

## **Advanced Mode - Specifying the Parameters of a Scan**

You can specify the parameters of a scan by selecting a part of the image. When you scan again, only the part of the image you have specified is scanned.

You can specify the parameters of a scan with one of the following methods.

## To Select the Parameters of a Scan Automatically

After previewing, on the Toolbar, click | . Clicking this button allows you to gradually crop off the image outside the borders detected in the preview image.

## To Specify the Parameters of a Scan


- To maintain the current width and height proportions set for the image even after selecting the parameters of the scan, click 🗟 in the [Input Settings].
- Do one of the followings.
  - Specify by dragging
    - ☐ Click ☐ Then click and drag from the upper left corner of the parameter you wish to specify to the lower right of the parameter. To adjust even further, drag the corner or border of the selected parameters.
  - Specify size
    - ☐ In ☐ (Width) and ☐ (Height), enter the parameters you want.
- ∧ NOTE

If you clicked 🙀 in step 1, entering either 🔳 (Width) or 🔳 (Height) automatically decides the other parameter.

- To move the crop border you have selected, place the mouse pointer inside the crop border, then drag.
- To preview the image, click [Preview].

To delete the settings, click on an area outside of the crop border.

## **Advanced Mode Settings**

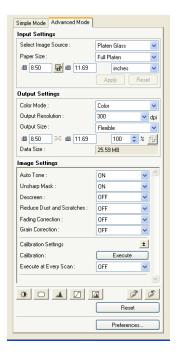

## Input Settings

## ■ [Select Image Source]

Selects where the document is placed ([Platen Glass] or [Document Feeder]).

## ■ [Paper Size]

Selects the size of the document to be scanned. The preview area size (height-to-width ratio) will change to the paper size you selected.

Change this setting to set up the machine not to scan beyond the parameters of the scan when previewing or if you are scanning without specifying the parameters of the scan. If you do not know the size of the document, select [Full Platen] or a large size. You can specify the parameters after previewing. If you change [Paper Size] setting after previewing, the preview image will be deleted.

## ■ Input Size

You can specify the width and height of the parameters of the scan by entering a value. After entering the value, press the Enter key, and the size of the cropping frame will change. Click 🖬 to change the icon to 📊 and maintain the width and height proportions of the image.

## (III) IMPORTANT

- Some applications have a limit to the amount of image data they can receive. If the parameters of a scan contain more than 21,000 x 30,000 pixels, the image will not be received.
- The values you can enter will be within the parameters of the document size you have selected.
- Minimum parameters of an image with [Output Resolution] is set to [600] dpi are 96 x 96 pixels.

## **Output Settings**

## ■ [Color Mode]

Selects the type of document and the way in which it will be scanned.

[Black and White] Select this mode when outputting photos and other documents to

monochrome printer. The image is displayed in black and white. The contrast in the image is divided at certain levels (threshold values) into black and white and is displayed in two colors. Threshold can be set

on the [Halftone] button.

Select this mode to scan black and white photos or monochrome [Grayscale]

images. The image is expressed in a 0-255 scale of black and white.

Select this mode to scan color documents. The image is expressed in [Color]

256 levels (8 bit) of R(ed), G(reen) and B(lue).

[Text Enhanced] Select this mode to scan texts crisply, particularly to process it with

OCR software. The image is displayed in black and white. The document is scanned in grayscale and then converted to black and white, therefore takes longer than the [Black and White] setting.

## ■ [Output Resolution]

Selects the resolution for the scan. If you have selected [Color] for [Color Mode], either click or type a resolution between 75-1200 dpi (in 1 dpi increments), or enter one of the values 4800, 7200 or 9600 dpi. If you have selected [Black and White], [Grayscale], or [Text Enhanced], either click or type a resolution between 75-600 dpi (in 1 dpi increments). For details, see "Determining Resolution," on p. 3-42.

## ■ [Output Size]

For setting the print size (output size) of the scanning parameters you have specified.

Specify by entering a value in either (Width), (Height) or [%] (Scale), or click a [%] (Scale) value. After adjusting the settings, either click on another area or press the Enter key, and the other values linked to the input values will change. Even if you change these settings, the size of the cropping frame and the setting for [Output Resolution] will not change. The resolution when you actually scan will change in accordance with the value entered in [%] (Scale).

The ratio of (Width) and (Height) is linked to (Width) and (Height) in [Input Size]. You can make settings for [%] (Scale) between 25 and 1600 in increments of 1%. [%] (Scale) is fixed to 100% if 4800, 7200 or 9600 dpi is entered in [Output Resolution].

Click for to switch the orientation of the output size (landscape or portrait). This button is disabled when you select [Flexible] for [Output Size].

#### ■ [Data Size]

Shows the data size of the scanned image according to your settings.

## **Image Settings**

## ■ [Auto Tone]

Set to [ON] to automatically adjust the tone of the image. The results of tone adjustment are reflected in the whole image and when the image is actually scanned. You cannot apply this setting if the preview image is not displayed. The default setting applies auto tone adjustment to the cropped image when previewing the image.

To view the preview image without auto tone adjustment, select [OFF].



This setting is not available when [Fading Correction] is turned on or [Canon ColorGear] is selected.

## ■ [Unsharp Mask]

Set to [ON] to emphasize and make sharper the outline of an image. This setting is selected by default. It is effective for scanning photos etc., which have a soft focus.

## ■ [Descreen]

Set to [ON] when scanning printed photographs and pictures. The default setting is [OFF].

## **IMPORTANT**

- You cannot set [Descreen] to [ON] if [Black and White] or [Text Enhanced] is selected in [Color Mode].
- Even if [Descreen] is set to [ON], some moire effect may remain if [Unsharp Mask] is also set to [ON]. In this case, disable [Unsharp Mask].
- [Descreen] cannot be set to [ON] when scanning from an application which will not display the ScanGear MF dialog box. If you are scanning from the MF Toolbox without using ScanGear MF, select [Color (Magazine)] in [Scan Mode] to activate [Descreen].

## **⊘** NOTE

- Printed photographs and pictures are displayed as a collection of fine dots. If you scan without descreen, the dots may interfere with each other and cause an unevenness of gradation and a striped pattern in the image. [Descreen] is the function for reducing this moire effect.
- Selecting [Magazine (Color)] in [Select Document Type] in Simple Mode has the same effect as selecting [Descreen] in Advanced Mode.

## ■ [Reduce Dust and Scratches]

Scanned photos may contain white dots caused by dust and scratches. This setting reduces the dust and scratches on photos. The default setting is [None].

[None] No reduction of dust and scratches will be made.

[Low] Reduces small dust and scratch marks. With this setting, large dust or

scratch marks may remain.

[Medium] Normally this setting is recommended.

[High] Reduces large dust and scratch marks but evidence of the reduction

process may remain and may also remove delicate parts of the image.

## IMPORTANT

- For scanning printed materials, the [OFF] setting is recommended.
- This setting may not be effective for some types of photos.
- This setting is available when [Color], [Color (Documents)] or [GrayScale] is selected in [Color Mode].

## ■ [Fading Correction]

The fading correction feature rebuilds the color quality that has faded over time. It also increases saturation of dull-colored originals to reproduce a vivid image. The default setting is [OFF].

[OFF] No fading correction will be made.[Low] Corrects slightly faded images.

[Medium] Normally this setting is recommended.

[High] Corrects highly faded images, but it may change the tone of the

image.

## ∧ NOTE

- This setting is not available when [Canon ColorGear] is selected in the [Color Settings] tab in the [Preferences] dialog box.
- This setting is reflected also in the preview image.
- This setting is available when [Color] is selected in [Color Mode].
- You cannot apply this setting when the preview image is not displayed.
- If you set [Fading Correction] to [Low], [Medium], or [High], scanning may take more time.
- The fading correction may not work when the scanning area is too small.

## ■ [Grain Correction]

The grain correction feature smoothes out the film grain of the image recorded on fast film. The result is smoother tones and higher overall quality. The default setting is [OFF].

[OFF] No grain correction will be made.

[Low] Select this setting when the grain in the picture is not so notable.

[Medium] Normally this setting is recommended.

[High] Smoothes out the grain in the picture even when the grain is very

notable but it may lower the image sharpness and tonal quality.

## ∧ NOTE

- This setting is not reflected in the preview image.
- This setting is available when [Color] or [Grayscale] is selected in [Color Mode].
- If you set [Grain Correction] to [Low], [Medium], or [High], scanning may take more time.
- The grain correction may not work when the scanning area is too small.

## ■ [Calibration Settings]

Calibrate the scanner if the colors in the preview image vary from those in the original document. To access this setting, press [\*]. Clicking [Execute] starts the calibration process, which adjusts the scanned image to the proper coloration. Set [Execute at Every Scan] to [ON] if you want to calibrate the scanner every time you scan.



Do not open the document cover while the scanner is calibrating.

## **Color Settings**

Using Color Settings buttons, you can adjust the brightness and contrast of the whole image, perform gamma correction, specify highlights and shadows, and adjust the contrast and balance of an image (with the histogram and tone curve).

The Color Settings buttons will be displayed when [Color] or [Grayscale] is selected in [Color Mode].

In [Black and White] mode, the Color Settings buttons changes to the [Threshold] button, and no Color Settings buttons will be displayed when [Text Enhanced] mode or [Canon ColorGear] is selected in the [Color Settings] tab in [Preferences] dialog box.

When you use the Color Settings buttons, the changes you make will be immediately reflected in the preview image or in the scan.

## ■ Color Settings buttons when [Color] or [Grayscale] is selected in [Color Mode1



## ■ Color Settings buttons when [Black and White] is selected in [Color Mode]



Revises all color adjustment settings to default settings. [Master], [Red], [Green], [Blue] and all settings for contrast/brightness, gamma, histogram and tone curve will be suspended and will return to default settings. Images which have undergone automatic color correction will also return to their defaults.

## ■ [Brightness/Contrast]


By clicking , you can access the [Brightness/Contrast] dialog box.

If the original image is too dark or too bright, or if the image quality is flat due to lack of contrast, adjust the levels of brightness and contrast.

The brightness and contrast are active if [Color] or [Grayscale] is selected in [Color Mode].

To adjust the brightness and contrast diagrammatically, press 🔨 .



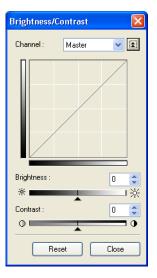

[Channel] Selects a color to adjust either [Red], [Green], or [Blue], or select

[Master] to adjust three colors together.

[Brightness] Move the slider to the left to increase the darkness of the image, and

to the right to increase the brightness of the image. You can also enter

values (-127 to 127).

[Contrast] Move the slider to the left to decrease the contrast of the image, and

to the right to increase the contrast of the image. You can also enter

values (-127 to 127).

[Reset] Resets all the current settings to their default values.

#### **■** [Gamma]

By clicking , you can access the [Gamma] dialog box.

The gamma allows you to adjust the brightness of the image viewed on the computer monitor to the brightness of the original document. The default is 2.2. You will have to change this value if you are using a monitor with a different gamma value. When you set the monitor's gamma value, the scanner's gamma value will automatically be displayed in the formula (reciprocal equation of the monitor gamma value) below.

1/ monitor gamma value = scanner gamma value

The gamma is active if [Color] or [Grayscale] is selected in [Color Mode].


To adjust the gamma diagrammatically, press 🗾 .



- The monitor has characteristics (gamma values) for reproducing colors. The gamma value of an average monitor is between 1.4 and 2.2, and reproduces colors in a somewhat darker way than the original document. Consequently, to correct the difference between the color in the original image and the
- For the monitor's gamma value, refer to the documentation of your monitor, or contact the manufacturer of your monitor.

reproduction of the color by the monitor, you may need to correct the gamma value.



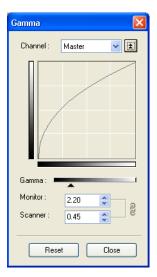

Selects a color to adjust either [Red], [Green], or [Blue], or select [Channel] [Master] to adjust the three colors together.


Move the slider to the left to decrease or the right to increase the [Gamma] contrast displayed in the middle of the tonal range (midtones) of the image. You can also enter values (0.10 to 10.00).

## **■** [Histogram]

By clicking , you can access the [Histogram] dialog box.

A histogram allows you to see the data concentration at each brightness level in an image. You can specify the darkest and brightest levels within an image, cut the levels and expand the middle of the tonal range of the image.

The histogram is active if [Color] or [Grayscale] is selected in [Color Mode].

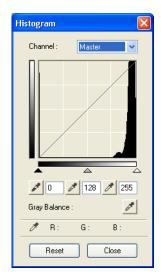

[Channel]

Selects a color to adjust either [Red], [Green], or [Blue], or select [Master] to adjust the three colors at once.

[Reset]

Resets all the current settings to their default values.

- 1 To change the black-point (shadow-level), mid-point (midtone-level), or white-point (highlight-level), do one of the following.
  - ☐ Click ☑ (Black-point eyedropper tool) then click a point in the preview image to specify the darkest point.

You can also enter a value (0 to 245).

☐ Click (Mid-point eyedropper tool) then click a point in the preview image to specify the midtone point.

You can also enter a value (5 to 250).

☐ Click (White-point eyedropper tool) then click a point in the preview image to specify the highlighted point.

You can also enter a value (10 to 255).

☐ Drag the triangles at the bottom of the histogram to an appropriate level.

Areas on the left of \_ (parts darker than the value specified in [Black-point]) will turn black.

The area at \_\_ (parts specified in [Mid-point]) will turn to a color exactly between black-point and white-point.

Areas on the right of  $\triangle$  (parts lighter than the value specified in [White-point]) will turn white.

## When adjusting a color image, click 🗾 (Gray Balance eyedropper tool) → click a point in the preview image to specify the point to execute gray balance adjustment.


The gray balance adjustment ensures that gray elements within a scanned image appear as a neutral gray, and consequently, other elements within the image will also have true color reproduction.

## ■ [Tone Curve Settings]

By clicking , you can access the [Tone Curve] dialog box.

You can make subtle adjustments to the brightness of a specific area of an image by selecting the type of the tone curve. The tone curve is a graph showing the balance of tone input and output.

The tone curve is active if [Color] or [Grayscale] is selected in [Color Mode].

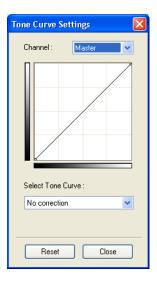

[Channel] Selects a color to adjust either [Red], [Green], or [Blue], or select

[Master] to adjust three colors together.

[Select Tone Selects the tone curve. ([No correction], [Overexposure],


Curve] [Underexposure], or [High contrast])

[Reset] Resets all the current settings to their default values.

## **■** [Final Review]

By clicking , you can access the [Final Review] dialog box.

In this dialog box, you can confirm the color settings you have made.

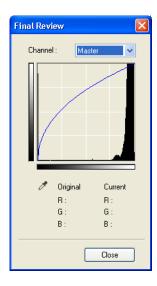


## ■ [Threshold]

By clicking , you can access the [Threshold] dialog box.

If [Black and White] is selected in [Color Mode], the Color Settings buttons will become the [Threshold] button.

#### **⊘** NOTE

- The brightness of color and grayscale images are expressed as a value between 0 and 255 but brightness of black and white images is expressed in terms of either black or white including the parts of an image which are a color between the two. The boundary at which black and white is divided is called Threshold.
- By adjusting the threshold, you can sharpen characters in a text document and reduce back-printing such as in newspapers.

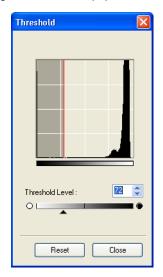


[Threshold Level] Move the [Threshold] slider to the right to increase the threshold value and thus reduce the white areas (black areas will increase). Move the slider to the left to decrease the threshold value and thus increase the white areas (black areas will reduce). You can also enter a value (0 to 255).

[Reset] Resets all the current settings to their default values.

### [Preferences] Dialog Box

Clicking [Preferences] on [Advanced Mode] tab opens the [Preferences] dialog box. In this dialog box, you can adjust settings for scanning and previewing.

### ■ [Preview] Tab

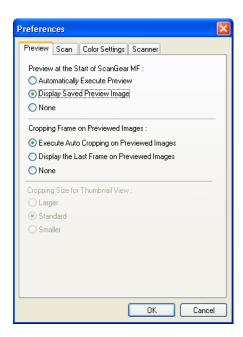

#### [Preview at the Start of ScanGear MF]

Selects the preview operation when you open ScanGear MF. [Display Saved Preview Image] is selected by default.

#### [Automatically Execute Preview]

The preview scan will start automatically when you open ScanGear MF.

#### [Display Saved Preview Image]

Displays the image last previewed. Color Settings and the Flip, Left and Right Rotate, Invert and rulers buttons in the Toolbar will be reproduced.

[None] Nothing is displayed when ScanGear MF is opened.

#### [Cropping Frame on Previewed Images]

Sets how the frame is displayed when you preview images. [Executes Auto Cropping on Previewed Images] is selected by default.

#### [Executes Auto Cropping on Previewed Images]

The document will automatically be cropped to match the document size.

#### [Display the Last Frame on Previewed Images]


Displays the last frame when you preview images.

[None] No frame will be displayed when you preview images.

#### [Cropping Size for Thumbnail View]

This setting is not available for this model.

### ■ [Scan] Tab

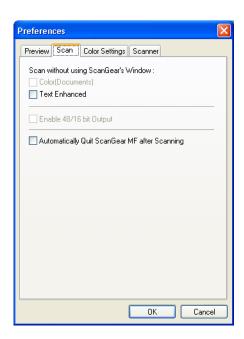

### [Scan without using ScanGear's Window]

Color mode cannot be changed in applications such as OCR software which will not display the ScanGear MF dialog box (UI off mode), and consequently the document will be scanned with the settings in the application. To override the application settings and scan in a specific color mode, configure the settings here. Neither of these settings is selected by default.

#### [Color (Documents)]

This setting is not available for this model.

#### [Text Enhanced]

The document is scanned in [Text Enhanced] mode when the [Black and White] setting is configured in the application.

### IMPORTANT


These settings will be invalid in UI mode (the mode in which the ScanGear MF dialog box is displayed).

[Enable 48/16 bit This setting is not available for this model. Output]

#### [Automatically Quit ScanGear MF after Scanning]

If selected, the ScanGear MF dialog box quits automatically after the image is scanned. This setting is not selected by default. Some applications will automatically quit ScanGear MF after scanning irrespective of this setting.

### ■ [Color Settings] Tab

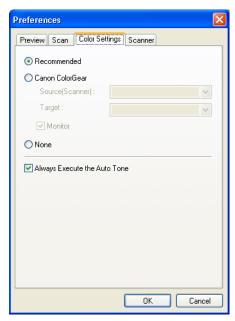

Click one of the following. The default setting is [Recommended].

[Recommended] Vividly reproduces the tone of a document on the screen. Normally this settings is recommended.


[Canon ColorGear] Select to automatically match the scanner, monitor and color printer colors, thus reducing time and trouble to manually match the monitor and printer colors. This setting is available when [Color] is selected in [Color Mode]. If [Canon ColorGear] is selected, the Color Settings buttons are disabled on the Advanced Mode tab.

[None] No color matching is made.

[Always Execute the Auto Tone]

If selected, the image color will always be automatically corrected. If you select either [Canon ColorGear] or [None], this setting is not available. This setting is selected by default.

### ■ [Scanner] Tab

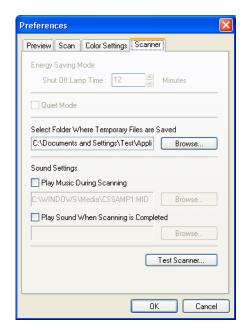

[Energy Saving Mode]

You cannot set the Energy Saving Mode from your computer.

[Quiet Mode]

This setting is not available for this model.

[Select Folder Where Temporary Files are Saved]

Click [Browse] and specify the folder to which the file will be saved.

[Sound Settings] Sets the scanner to play music during scanning or play a sound when

[Play Music During Scanning]

scanning is completed.

If selected, the scanner plays music during scanning. Click [Browse], then specify a sound file.

#### [Play Sound When Scanning is Completed]

If selected, the scanner plays sound when scanning is completed. Click [Browse], then specify a sound file.

You can specify the files below.

- MIDI files (\*.mid, \*.rmi, \*.midi)
- Audio files (\*.wav, \*.aiff)
- MP3 file (\*.mp3)

[Test Scanner...] Checks the power cord plugged in, or the USB cable is connected between the machine and your computer.

### **Determining Resolution**

You can specify a resolution in [Image Quality] in the MF Toolbox settings dialog box, or in [Output Resolution] in ScanGear MF.



- The data in the image you have scanned is a collection of dots carrying information about brightness and color. The density of these dots is called "resolution," and "dpi" (dots per inch) refers to the number of dots in one inch. Resolution will determine the amount of detail your image contains. The higher the resolution (number), the more detail in your image; the lower the resolution (number), the less detail.
- As a general rule, you should select a scanning resolution that corresponds to your final output device such as a monitor or printer.

### ■ Images for Display on a Monitor

Images for display on a monitor should in general be scanned at a resolution of 75 dpi.

### **■** Images for Printing

Images to be printed should be scanned at a resolution which corresponds to the resolution of the printer. For example, if you are using a 600 dpi black and white printer, you should scan your document at [600 dpi].



With a color printer, the colors are expressed as a certain percentage of ink pigment so scanning your document at half the resolution of the printer should be fine. For example, if you are using a 600 dpi color printer, you should scan your document at [300 dpi].

### ■ Printing to Scale

For example, if you want to print a document which is twice the size both vertically and horizontally, the resolution of your document will be reduced by half. If the resolution of the original document is 300 dpi, the resolution of the enlarged document will be 150 dpi. If you print the document with a 600 dpi color printer, the lack of detail in the image may be obvious. In such a case, if you scan at a resolution of 600 dpi, resolution will be 300 dpi even if you double the size of the document and you can print the document with sufficient quality. Conversely, if you want to print a document at a reduced size, it should be sufficient to scan at half the resolution.

#### ■ Resolution and Data Size

If you double the resolution, the image data will be four times greater. If the data is too large, processing speed will slow down significantly, and you may experience malfunctions such as lack of memory. Make sure the resolution corresponds to the purpose of use of the image and set at the lowest level possible.

# Scanning with the WIA Driver (Windows XP Only)

# Scanning from the [Scanner and Camera Wizard] Dialog Box




If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately <sup>1</sup>/8" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

1 Open the [Scanners and Cameras] folder.

For details on how to open the [Scanners and Cameras] folder, see "Setting Up [B&W Start] or [Color Start] in the [Scanners and Cameras] Folder (Windows 2000: the [Scanners and Cameras Properties] Dialog Box)," on p. 3-5.

- Double-click the [WIA Canon MF8100].
- 3 Click [Next >].

# 4 Select a picture type.

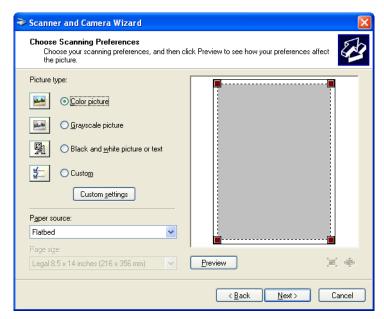

You can select from the following:

- [Color picture]
- [Grayscale picture]
- [Black and white picture or text]
- [Custom]



When selecting [Custom], click [Custom settings] to make detailed settings in the [Properties] dialog box. (See "Advanced Properties," on p. 3-49.)

# 5 Select the paper source ([Flatbed] or [Document Feeder]).




If you selected [Document Feeder], select paper size from [Page size] and proceed to step 7.

## **6** Specify the scanned area.

Click [Preview] → drag to specify the scanned area.

- 7 Click [Next >].
- Specify a name, a file format, and the location for saving the group of pictures.

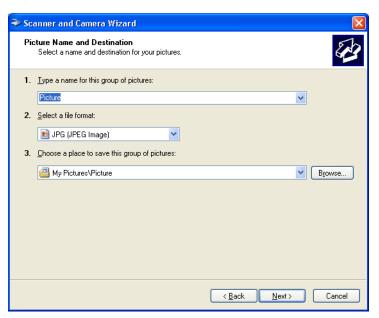

☐ Enter a name for the group of pictures.

When you save more than one picture in the same location, sequential numbers are automatically added at the ends of file names. (e.g. numbers 001, 002, ... are added from the second picture on.)


☐ Select a file format for the pictures.

You can select from the following:

- [BMP (Bitmap Image)]
- [JPG (JPEG Image)]
- [TIF (TIF Image)]
- [PNG (PNG Image)]
- ☐ Select the location where you want to save the pictures.

To change the location, click [Browse...]  $\rightarrow$  select the new location  $\rightarrow$  click [OK].

# 9 Click [Next >].

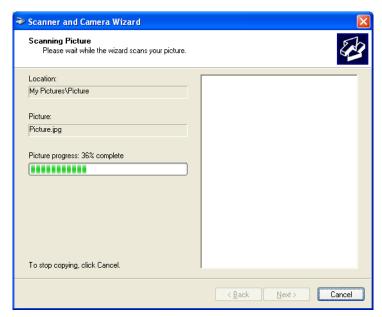


Scanning starts.



To cancel scanning, click [Cancel].

# 10 Click [Next >].

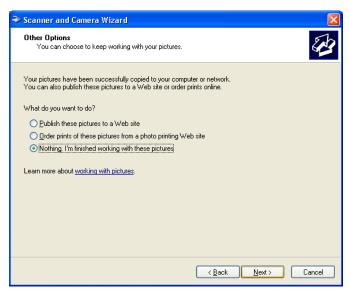

If you want to publish these pictures to a Web site or order printouts online, select the corresponding option. For more information, see the Windows operating system documentation.

# 11 Click [Finish].



The location selected in step 8 will appear.

### **Advanced Properties**

The following screen shows the Advanced Properties tab in Windows XP.



The setting items and default values in the [Advanced Properties] tab vary depending on the type of picture you have selected.



**Preview** Shows the preview of sample image.

[Brightness] Specifies the brightness (–127 to 127).



You can also adjust the brightness in PageManager or OmniPage if it is not specified sufficiently in this tab.

[Contrast] Specifies the contrast (-127 to 127) (only for color or grayscale scanning).



You can also adjust the contrast in PageManager or OmniPage if it is not specified sufficiently in this tab.

[Resolution (DPI)] Selects the scanning resolution in dot per inch (50 to 600).



You can enter the values of resolution listed above in the edit box directly. If you enter an invalid value, the error message will appear and the resolution will be corrected to the closest one.

[Picture type] Selects the scanning color type ([Color picture], [Grayscale picture], or [Black and white picture or text]).


[Reset] Resets all the current settings to their default values.

### Scanning from an Application

With the WIA driver dialog box open, follow the procedure below. To display the WIA driver, see "Scanning an Image from an Application," on p. 3-15.

### ∧ NOTE

If white lines appear on one edge of the scanned image, check that the document is correctly placed on the platen glass. A document should be placed approximately <sup>1</sup>/8" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

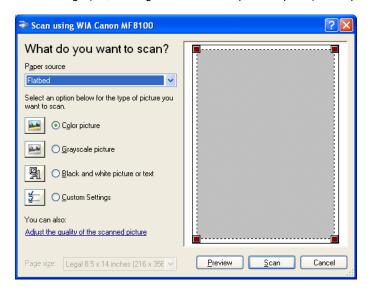

1 Select the type of picture you want to scan.

You can select from the following:

- [Color picture]
- [Grayscale picture]
- [Black and white picture or text]
- [Custom Settings]
- 2 Select the paper source ([Flatbed] or [Document Feeder]).
- If you want to adjust the quality of the scanned image, click [Adjust the quality of the scanned picture].

The [Advanced Properties] dialog box appears.

# 4 Adjust the quality of the image → click [OK].

For details on how to adjust the quality of the image, see "Advanced Properties," on p. 3-49.



If you selected [Document Feeder], proceed to Step 6.

# 5 Specify the scanned area.

Click [Preview]  $\rightarrow$  drag  $\blacksquare$  to specify the scanned area.

# 6 Click [Scan].

Scanning starts. When the scanning is completed, the scanned image will appear in the display area of the application.

# PC Faxing



This chapter explains the procedure to fax documents from your computer. You can send faxes using the fax driver from applications that support document printing.

# Sending a Fax

You can send a fax to multiple recipients in one operation.



### ∧ NOTE


- You cannot send a fax when an error occurs in the machine.
- A very large document may not be sent.
- You can send up to 256 pages per fax (Based on ITU-T No. 1 Chart, Standard Mode.). A document of 257 pages or more needs to be sent in separate faxes.
- Open the document you want to fax in an application → select the command to print.

In most cases, click [Print] from the [File] menu.

The [Print] dialog box appears.

2 From the [Select Printer] list box or the [Name] pull-down list in the [Print] dialog box, select [Canon MF8100 Series (FAX)].



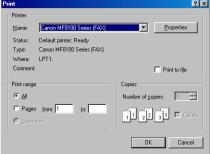

3 Click [Print] or [OK].

The [Fax Sending Settings] dialog box appears.

In the [Fax Sending Settings] dialog box, enter the [Recipient Name] and [Fax Number], or select them from the Address Book → click [Add to Recipient List].

For details on how to use the [Fax Sending Settings] dialog box, see "Fax Sending Settings," on p. 4-3.

For details on the characters and symbols you can use for fax numbers, see "Characters and Symbols for Fax Numbers," on p. 4-3.

For details on how to select a recipient from the Address Book, see "Select Recipient from Address Book," on p. 4-5.

### ∅ NOTE

- You cannot send a fax without entering the [Recipient Name].
- Up to 38 characters (excluding "-") can be entered in the [Fax Number] edit box.
- Up to 85 characters can be entered in the [Recipient Name] edit box.
- To select the [Recipient Name] and [Fax Number] from the Address Book, you must register them in the Address Book first. For details, see p. 4-31.
- You can register the recipient and his/her fax number in the Address Book so that you
  can use it in the future. Click [Add to Address Book] after entering the recipient name and
  fax number in the [Fax Sending Settings] dialog box. You can enter additional
  information, such as the company name and department, etc., in the [Edit Address Book]
  tab (see "Edit Address Book Tab," on p. 4-31).
- 5 Click [OK].

# **Characters and Symbols for Fax Numbers**

You can use the following characters and symbols in the fax numbers you send from your computer or for a recipient you register in the Address Book.

Character/symbol	Explanation
0-9 * #	For use in telephone and fax numbers.
р	To place a pause between numbers.
P	To place a pause at the end of an array of numbers.
Т	Numbers after the T will be sent as a tone signal.
+ - (),	To make the number easier to read.

# **Fax Sending Settings**


If you select the command to print from an application, the [Fax Sending Settings] dialog box appears. The [Fax Sending Settings] dialog box has three tab sheets.



- For more information about the following features, see the Online Help (see p. 1-3).
- The screen shots shown are from Windows XP.

### Sending Settings Tab


Specifies the recipient name and fax number of the destination to which you send a fax. You can specify multiple destinations in one operation.

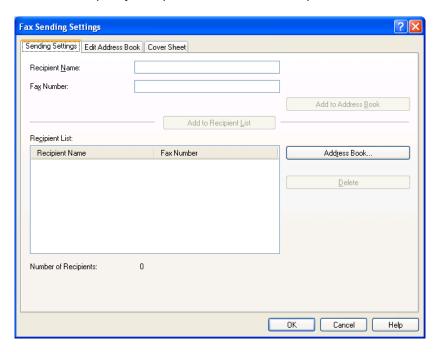

[Recipient Name] Specifies the recipient's name. [Fax Number] Specifies the fax number of the recipient. For details on the characters and symbols you can use for fax numbers, see "Characters and Symbols for Fax Numbers," on p. 4-3. [Add to Address Adds the recipient name and fax number you entered in Book] [Recipient Name] and [Fax Number] to the Address Book. [Add to Recipient Adds the recipient name and fax numbers you entered in List] [Recipient Name] and [Fax Number] to the [Recipient List]. [Address Book...] Opens the [Select Recipient from Address Book] dialog box. (See p. 4-5.) [Recipient List] Shows the list of the recipient names and fax numbers of the destinations you are going to send a fax. [Number of Recipients] Displays the number of people the fax will be sent to.

Deletes destination(s) from the [Recipient List]. Select the [Delete] destination(s) you want to delete from the list and click [Delete].

### ■ Select Recipient from Address Book

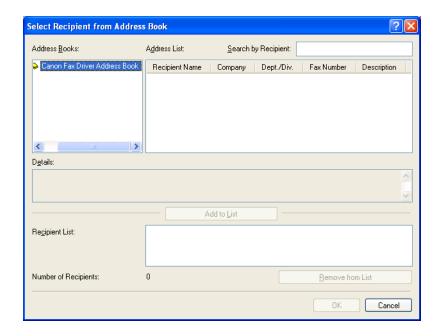

[Address Books] Shows the available address books. [Address List] Displays a list of the recipients registered with the selected address book. [Search by Searches the destination by the recipient name. Recipient] [Details] Displays information about the selected recipient. [Add to List] Adds the recipient names and fax numbers to [Recipient List] you selected in [Address List]. Shows the list of the recipient names and fax numbers of the [Recipient List] destinations you are going to send a fax. [Number of Displays the number of people the fax will be sent to. Recipients]

[Remove from List]

Deletes destination(s) from the [Recipient List]. Select the destination(s) you want to delete from the list and click [Remove from List].

### **Edit Address Book Tab**


Allows you to edit the Address Book. For details, see "Edit Address Book Tab," on p. 4-31.

### **Cover Sheet Tab**

Specifies the cover sheet to be attached to the document you fax.



You can create your original cover sheets using the Canon Cover Sheet Editor. For details, see "Canon Cover Sheet Editor," on p. 4-40.

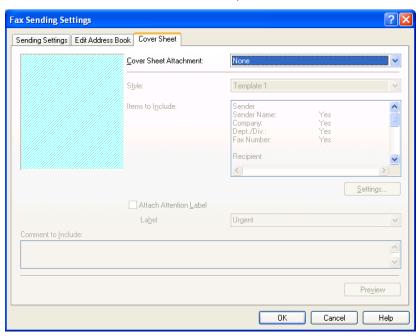

[Cover Sheet Attachment] Specifies if the cover sheet is attached or not. ([None], [Different Sheet to Each Recipient] or [Same Sheet to All Recipients])

Selects the style of the cover sheet from the list of the [Style] cover sheet templates supplied with the fax driver, or the

cover sheets you registered in the [Register Cover Sheet] dialog box (for Windows 98/Me, see p. 4-23, for Windows 2000/XP/Server 2003, see p. 4-36).

Displays the items to be included in the cover sheet. [Items to Include]

Opens the [Item Settings] dialog box. (See p. 4-7.) [Settings...]

[Attach Attention Label] Prints the attention label to the cover sheet. ([Urgent],

[Very Urgent], [FYI], or [Confidential])

[Comment to Include] Allows you to enter the comment to be included in the

cover sheet.


[Preview] Displays the preview image of the cover sheet.

### ■ Item Settings

The [Item Settings] dialog box allows you to set the details of the items to be included in the cover sheets. The [Item Settings] dialog box has the following five tab sheets.

#### Sender Tab


The [Sender] tab sheet enables you to edit the sender information to be included in the cover sheets.

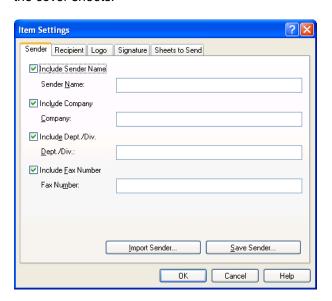

[Include Sender Enables you to enter the sender name in [Sender Name] text Name1 box up to 85 characters. [Include Company] Enables you to enter the company name in the [Company] text box up to 40 characters. [Include Dept./Div.] Enables you to enter the department or division name of the sender in the [Dept./Div.] text box up to 40 characters. [Include Fax Enables you to enter the fax number in the [Fax Number] text box up to 45 characters (up to 38 characters excluding Number] hyphens "-" ). Imports sender information from a CSV file. [Import Sender...] [Save Sender...] Saves sender information in a CSV file.

#### Recipient Tab

Specifies to include the display of Recipient information specified in the Address Book on the cover sheet. You can specify to include specific recipient information by selecting the appropriate check box.

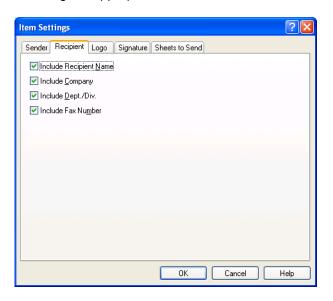


Symbols for Fax Numbers," on p. 4-3.

and symbols you can use for fax numbers, see "Characters and

Number]

#### Logo Tab

The [Logo] tab sheet enables you to select whether the logo is attached to the cover sheet, and sets how the logo is attached.

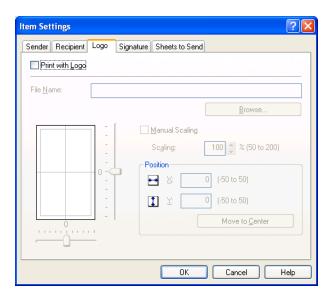

[Print with Logo] Attaches the logo to the cover sheet.

[File Name] Selects the data file of the logo to be attached to the cover sheet.

You can select a bitmap data only.

[Browse...] Allows you to search for the logo file in your computer.

Enables you to specify the size of the logo in [Scaling] from 50% [Manual Scaling]

to 200%.

[Position] Specifies the vertical and horizontal position where the logo is


> printed. You can enter the values in the [X] and [Y] edit boxes (in a range between -50 and 50), or use the X and Y slide bars to

move the position.

[Move to Center] Relocates the logo to the center of the page.

### Signature Tab


The [Signature] tab sheet enables you to select whether the signature is attached to the cover sheet, and sets how the signature is attached.

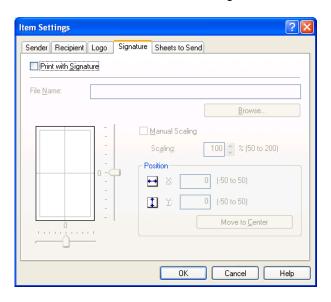

[Print with Attaches the signature to the cover sheet. Signature] [File Name] Selects the data file of the signature to be attached to the cover sheet. You can select a bitmap data only. [Browse...] Allows you to search for the signature file in your computer. [Manual Scaling] Enables you to specify the size of the logo in [Scaling] from 50% to 200%. [Position] Specifies the vertical and horizontal position where the signature is printed. You can enter the values in the [X] and [Y] edit boxes (in a range between -50 and 50), or use the X and Y slide bars to move the position. [Move to Center] Relocates the signature to the center of the page.

#### Sheets to Send Tab

The [Sheets to Send] tab sheet enables you to select whether the number of sheets to send is included in the cover sheet, and edit the number of sheets to be included in the cover sheet.

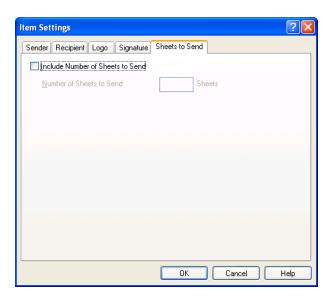

[Include Number of Sheets to Send]

Enables you to specify the number in the [Number of Sheets to Send] text box up to maximum of 4 numeric characters.

# **Changing Fax Settings**

If you want to view or change the fax options, access the fax properties or fax printing preferences dialog box of the fax driver.

You can access the fax properties dialog box either from the application's [Print] dialog box and the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder, or the fax printing preferences dialog box from the [Printers and Faxes] (Windows 2000: [Printers]) folder.

To access the dialog box, follow this procedure below.



#### ∧ NOTE

- If you open the fax properties dialog box from the [Printers and Faxes] (Windows 98/Me/ 2000: [Printers]) folder, you can set up the fax configuration and configure the fax settings for all Windows applications. The fax printing preferences dialog box enables you to specify the default settings for the faxing options available when you fax with the Canon MF8100 Series (only for Windows 2000/XP/Server 2003).
- The number of tabs displayed in the properties dialog box will vary, depending on the type of operating system you are using and the method you use to access the dialog box.
- The method you use to access the dialog boxes determines how long the faxing options remain in effect:
  - If you access the dialog box from an application's [Print] dialog box, your selected faxing options apply only to the current fax job. They will not be stored when you close the application.
  - If you access the dialog box from the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder, selected faxing options apply to all Windows applications and remain in effect until you change those settings.

### From a Windows Application

Opening the MF8100 Series (FAX) Printing Preferences or MF8100 Series (FAX) Properties Dialog Box

- Open the application from which you will fax the document.
- 2 Select the command to print.

In most cases, click [Print] from the [File] menu.

The [Print] dialog box appears.

- From the [Select Printer] list box or the [Name] pull-down list in the [Print] dialog box, select the fax to be used.
- 4 Click [Preferences] or [Properties].

The [Canon MF8100 Series (FAX) Printing Preferences] or [Canon MF8100 Series (FAX) Properties dialog box appears.

# From the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) Folder

### Opening the MF8100 Series (FAX) Properties Dialog Box

Open the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder.

Click [start] on the Windows task bar, select [Printers and Faxes] (Windows 98/Me/ 2000:  $[Start] \rightarrow [Settings] \rightarrow [Printers]$ ).

- Click the corresponding printer driver icon.
- From the [File] menu, click [Properties].

You can also open the [MF8100 Series (FAX) Properties] dialog box by right-clicking the corresponding printer driver icon and selecting [Properties] from the pop-up menu.

The [Canon MF8100 Series (FAX) Properties] dialog box appears.

### Opening the MF8100 Series (FAX) Printing Preferences Dialog Box (Windows 2000/XP/Server 2003 Only)

- Open the [Printers and Faxes] (Windows 2000: [Printers]) folder.
  - ☐ Click [start] on the Windows task bar, select [Printers and Faxes] (Windows 2000:  $[Start] \rightarrow [Settings] \rightarrow [Printers]).$
- Click the corresponding printer driver icon.

# **3** From the [File] menu, click [Printing Preferences].


You can also open the [MF8100 Series (FAX) Printing Preferences] dialog box by right-clicking the corresponding printer driver icon and selecting [Printing Preferences] from the pop-up menu.

The [Canon MF8100 Series (FAX) Printing Preferences] dialog box appears.

# Windows 98/Me Fax Properties


### General Tab

Lets you print a test page or define separator pages. Refer to your Windows operating system documentation for more information.

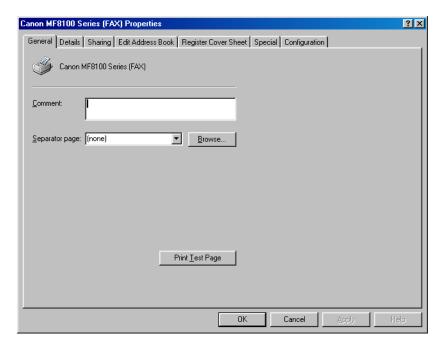

### **Details Tab**

Specifies the printer port and time-out settings. Refer to your Windows operating system documentation for more information.

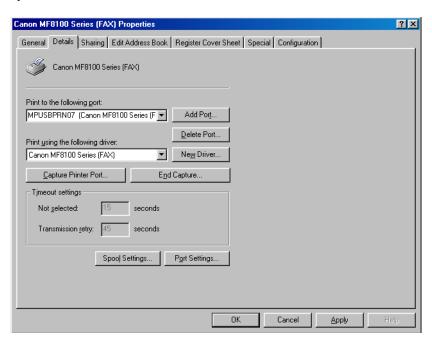


### ■ Spool Settings

The installer sets the following defaults.




### **Sharing Tab**

Specifies the printer sharing settings. This tab sheet is available only when the printer sharing is enabled. (See "Adding Server Service," on p. 2-64.) Refer to your Windows operating system documentation for more information.

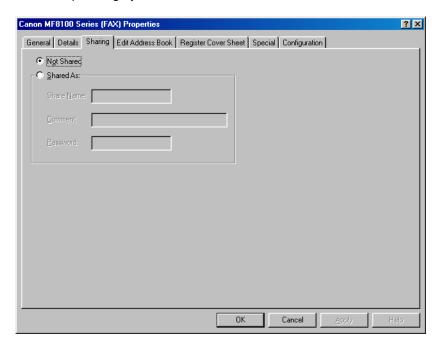

### Edit Address Book Tab

Lets you edit the address book.

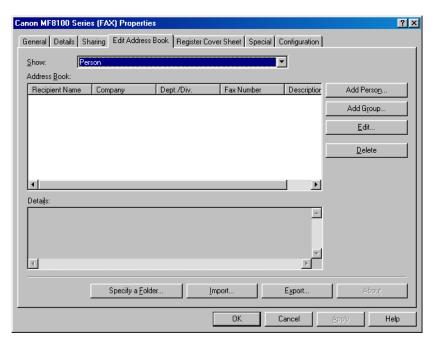


[Show] Selects the category of the list displayed in [Address Book]. ([Person], [Group] or [All]) [Address Book] Displays the list of the destinations registered in the Address Book. The entries can be sorted by their information ([Recipient Name], [Company], [Dept./Div.], [Fax Number], and [Description]). Opens the [Add Person] dialog box. (See p. 4-19.) [Add Person...] Opens the [Add Group] dialog box. (See p. 4-20.) [Add Group...] Edits the selected entry in the Address Book list. If you select a [Edit...] person, the [Edit Person] dialog box appears. If you select a group, the [Edit Group] dialog box appears. [Delete] Deletes the selected entry from the Address Book. Displays information about the recipient selected in the Address [Details] Book list box. Opens the [Browse For Folder] dialog box. Enables you to make [Specify a Folder...] changes to the Address book folder. [Import...] Enables you to import address book data from files. Importable file types are: some CSV files (with file extension "\*.csv") and some Canon Data Files (with file extension "\*.abk").

Exports the address book data to an outside file.

[Export...]

#### ■ Add Person

The [Add Person] dialog box enables you to register a person and his/her information in the Address Book.

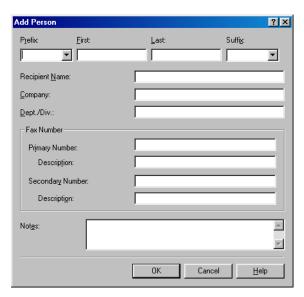

You can register the following information:

[Prefix] Enters the prefix to the recipient's name, or selects the prefix from

the pull-down list. ([Dr.], [Mr.], [Mrs.], or [Ms.])

[First] Enters the recipient's first name.[Last] Enters the recipient's last name.

[Suffix] Enters the suffix to the recipient's name, or selects the suffix from

the pull-down list. ([Jr.], [MD], or [Sr.])

[Recipient name] Enters the recipient name.

[Company] Enters the recipient's company name.

[Dept./Div.] Enters the recipient's department or division name.


[Fax Number] Enters the recipient's fax number. You can enter two numbers and

description.

[Notes] Enters the additional information about the recipient.

### ■ Add Group

The [Add Group] dialog box enables you to register a group and its information in the Address Book.

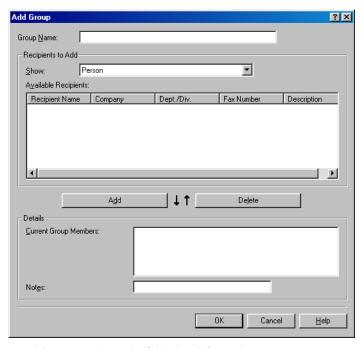


You can register the following information:

[Group Name]	Enters the group name.
[Show]	Selects the category of the list displayed in [Available Recipients]. ([Person], [Group] or [All])
[Available Recipients]	Displays the list of recipients already registered in the Address Books.
[Add]	Adds a person/group to the group.
[Delete]	Deletes a person/group from the group.
[Current Group Members]	Displays the members currently registered in the group.
[Notes]	Enters the additional information about the group.

#### ■ Edit Person

The [Edit Person] dialog box enables you to edit a person and his/her information in the Address Book.

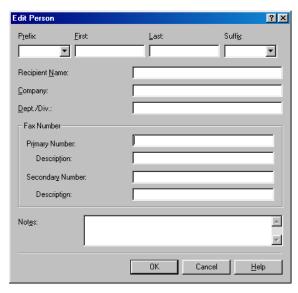

You can edit the following information:

	[Prefix]	Enters the prefix to the recipient's name	, or selects the prefix from
--	----------	---	------------------------------

the pull-down list. ([Dr.], [Mr.], [Mrs.], or [Ms.])

[First] Enters the recipient's first name.[Last] Enters the recipient's last name.

[Suffix] Enters the suffix to the recipient's name, or selects the suffix from

the pull-down list. ([Jr.], [MD], or [Sr.])

[Recipient name] Enters the recipient name.

[Company] Enters the recipient's company name.

[Dept./Div.] Enters the recipient's department or division name.


[Fax Number] Enters the recipient's fax number. You can enter two numbers and

description.

[Notes] Enters the additional information about the recipient.

### **■** Edit Group

The [Edit Group] dialog box enables you to edit a group and its information in the Address Book.

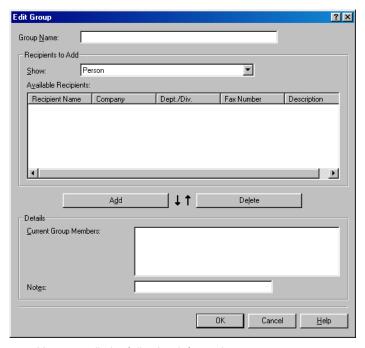

You can edit the following information:


[Group Name]	Enters the group name.
[Show]	Selects the category of the list displayed in [Available Recipients]. ([Person], [Group] or [All])
[Available Recipients]	Displays the list of recipients already registered in the Address Books.
[Add]	Adds a person/group to the group.
[Delete]	Deletes a person/group from the group.
[Current Group Members]	Displays the members currently registered in the group.
[Notes]	Enters the additional information about the group.

### Register Cover Sheet Tab

Registers/deletes the cover sheets to be attached to the document you fax.



You can create your original cover sheets using the Canon Cover Sheet Editor. For details, see "Canon Cover Sheet Editor," on p. 4-40.

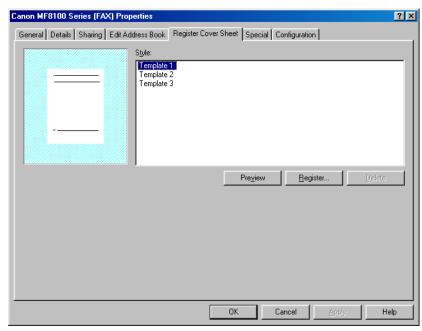

[Style] Displays the list of the registered cover sheets.

[Preview] Displays the preview image of the selected cover sheet.

[Register...] Registers the cover sheet template.


[Delete] Deletes the registered cover sheet template. Select a cover sheet

template from [Style], then press [Delete].

### **Special Tab**

Specifies the page settings including the paper size, orientation, and resolution.

You can also specify the outside dialing prefix if you dial through a switchboard.

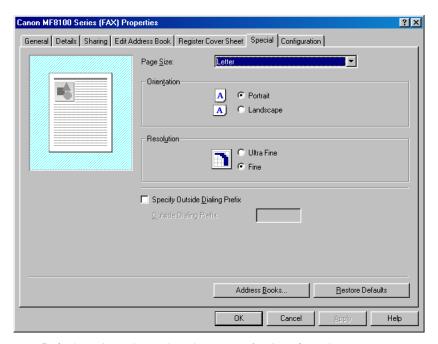


Default settings depend on the country/region of purchase.

Preview image	Displays the image with the currently selected settings reflected.	
[Page Size]	Selects the original page size to work with in an application. ([Letter], [11x17], [Legal], [A4], [A3], [A5], [B4], or [B5])	
[Orientation]	Selects the direction of printing relative to the paper. ([Portrait] or [Landscape])	
[Resolution]	Specifies the resolution of the fax. ([Ultra Fine] or [Fine])	
[Specify Outside Dialing Prefix]		
	Enables you to enter the prefix number in [Outside Dialing Prefix] up to 5 numbers.	
[Address Books] Opens the [Address Books] dialog box (see p. 4-25		

[Restore Defaults] Resets all the current settings to their default values.

#### ■ Address Books


Clicking [Address Books] in the [Special] tab sheet opens the [Address Books] dialog box. This dialog box enables you to specify an Address Book to be referred to when sending a fax.

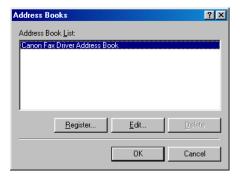

[Address Book Displays the list of the registered Address Books. List] [Register...] Opens the [Register Address Book] dialog box. (See below.) [Edit...] Opens the [Add/Edit Canon Fax Driver Address Book] dialog box. (See p. 4-26.) [Delete] Deletes the selected Address Book from the [Address Book List].

### Register Address Book

This dialog box enables you to register the Address Books to be used when you send a fax.

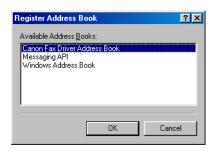


[Available Address Books]

Displays the list of the available Address Books.

#### Add/Edit Canon Fax Driver Address Book


This dialog box enables you to edit the properties of the Address Books to be used when you send a fax.



[Name]

Changes the name of the Address Book. You can enter up to 64 characters.

### **Configuration Tab**

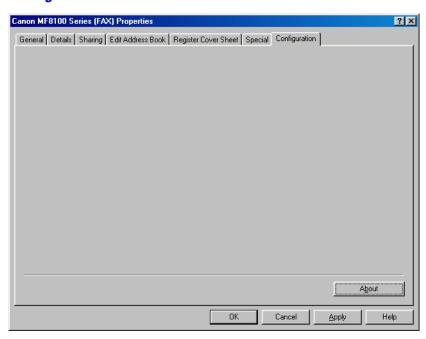

[About]

Displays the version information on the driver.

# Windows 2000/XP/Server 2003 FAX Properties and FAX Printing Preferences

The FAX driver for Windows 2000/XP/Server 2003 has the following two main dialog boxes:

### The FAX Properties Dialog Box

This dialog box enables you to set up the fax configuration and configure the fax settings for all Windows applications.



### The FAX Printing Preferences Dialog Box

This dialog box enables you to edit the address book, register the cover sheets, and set up the page settings.



### **FAX Properties**


The [Canon MF8100 Series (FAX) Properties] dialog box contains several tab sheets that enable you to set up the fax configuration and configure the fax settings.



- The number of tabs displayed in the properties dialog box depends on how you have your system set up.
- For more information about the following features, see the Online Help (see p. 1-3).
- The screen shots shown are from Windows XP.


#### General Tab

Lets you print a test page and define faxing preferences. Refer to your Windows operating system documentation for more information.

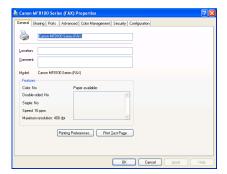


### **Sharing Tab**

Specifies the printer sharing settings. This tab sheet is always available (see p. 2-63). Refer to your Windows operating system documentation for more information.

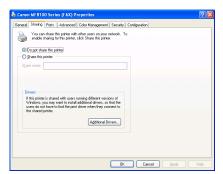


### **Ports Tab**

Specifies the port to which the printer is attached. Refer to your Windows operating system documentation for more information.

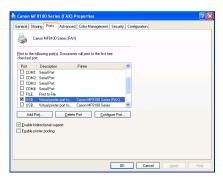

### **Advanced Tab**

Specifies the settings for print spooling. Refer to your Windows operating system documentation for more information.

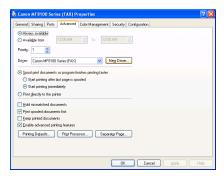




[Spool print documents so program finishes printing faster] and [Start printing immediately] are set automatically when you install the printer driver.


### **Color Management Tab**

Associates color profiles with your color printer. Refer to your Windows operating system documentation for more information.

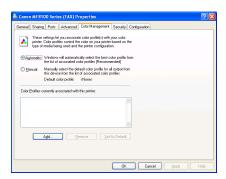


### Security Tab

Specifies security settings. Refer to your operating system documentation for more information.

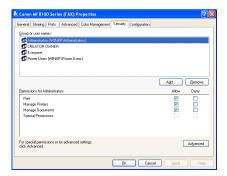

### **Configuration Tab**

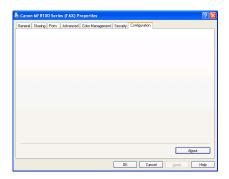

[About]

Displays the version information on the driver.

# **FAX Printing Preferences**


The [Canon MF8100 Series (FAX) Printing Preferences] dialog box contains three tab sheets that enable you to edit the address book, register the cover sheets, and set up the page settings.



- If you access the equivalent dialog box from an application's [Print] dialog box, your selected faxing options apply only to the current fax job.
- For more information about the following features, see the Online Help (see p. 1-3).
- The screen shots shown are from Windows XP.

### Edit Address Book Tab

Lets you edit the address book.

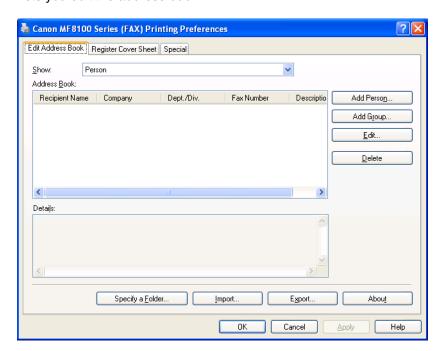

[Address Book] Displays the list of the destinations registered in the Address Book. The entries can be sorted by their information. ([Recipient Name], [Company], [Dept./Div.], [Fax Number], and [Description]) [Show] Selects the category of the list displayed in [Address Book]. ([Person], [Group] or [All]) [Add Person...] Opens the [Add Person] dialog box. (See p. 4-32.) [Add Group...] Opens the [Add Group] dialog box. (See p. 4-33.) [Edit...] Edits the selected entry in the Address Book list. If you select a person, the [Edit Person] dialog box appears. If you select a group, the [Edit Group] dialog box appears. [Delete] Deletes the selected entry from the Address Book. Displays information about the recipient selected in the [Details] Address Book list box. [Specify a Opens the [Browse For Folder] dialog box. Enables you to Folder...] make changes to the Address book folder. [Import...] Enables you to import address book data from files. Importable file types are: some CSV files (with file extension "\*.csv") and some Canon Data Files (with file extension

"\*.abk").

[Export...] Exports the address book data to an outside file.

[About] Opens a dialog box containing the copyright and version

information about this fax driver software.

#### ■ Add Person

The [Add Person] dialog box enables you to register a person and his/her information in the Address Book.



You can register the following information:

[Prefix] Enters the prefix to the recipient's name, or selects the prefix

from the pull-down list. ([Dr.], [Mr.], [Mrs.], or [Ms.])

[First] Enters the recipient's first name.[Last] Enters the recipient's last name.

[Suffix] Enters the suffix to the recipient's name, or selects the suffix

from the pull-down list. ([Jr.], [MD], or [Sr.])

[Recipient Name] Enters the recipient name.

[Company] Enters the recipient's company name.

[Dept./Div.] Enters the recipient's department or division name.


[Fax Number] Enters the recipient's fax number. You can enter two numbers

and description.

[Notes] Enters the additional information about the recipient.

### ■ Add Group

The [Add Group] dialog box enables you to register a group and its information in the Address Book.

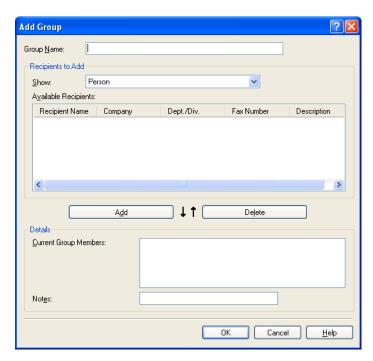


You can register the following information:

[Group Name]	Enters the group name.
[Show]	Selects the category of the list displayed in [Available Recipients]. ([Person], [Group] or [All])
[Available Recipients]	Displays the list of recipients already registered in the Address Books.
[Add]	Adds a person/group to the group.
[Delete]	Deletes a person/group from the group.
[Current Group Members]	Displays the members currently registered in the group.
[Notes]	Enters the additional information about the group.

#### ■ Edit Person

The [Edit Person] dialog box enables you to edit a person and his/her information in the Address Book.

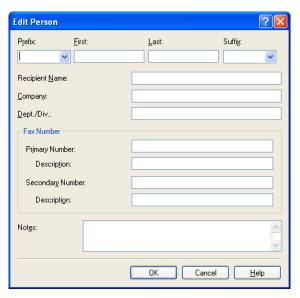


You can edit the following information:

[Prefix]	Enters the prefix to the recipient's name, or selects the prefix from the pull-down list. ([Dr.], [Mr.], [Mrs.], or [Ms.])
[First]	Enters the recipient's first name.
[Last]	Enters the recipient's last name.
[Suffix]	Enters the suffix to the recipient's name, or selects the suffix from the pull-down list. ([Jr.], [MD], or [Sr.])
[Recipient name]	Enters the recipient name.
[Company]	Enters the recipient's company name.
[Dept./Div.]	Enters the recipient's department or division name.
[Fax Number]	Enters the recipient's fax number. You can enter two numbers and description. $ \\$
[Notes]	Enters the additional information about the recipient.

### **■** Edit Group

The [Edit Group] dialog box enables you to edit a group and its information in the Address Book.

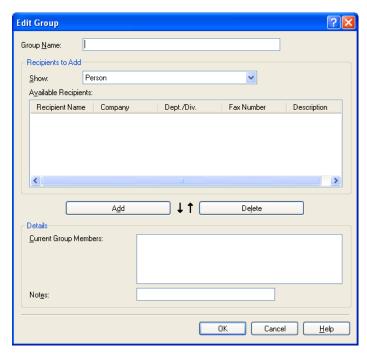

You can edit the following information:


[Group Name]	Enters the group name.
[Show]	Selects the category of the list displayed in [Available Recipients]. ([Person], [Group] or [All])
[Available Recipients]	Displays the list of recipients already registered in the Address Books.
[Add]	Adds a person/group to the group.
[Delete]	Deletes a person/group from the group.
[Current Group Members]	Displays the members currently registered in the group.
[Notes]	Enters the additional information about the group.

### Register Cover Sheet Tab

Registers/deletes the cover sheets to be attached to the document you fax.



You can create your original cover sheets using the Canon Cover Sheet Editor. For details, see "Canon Cover Sheet Editor," on p. 4-40.

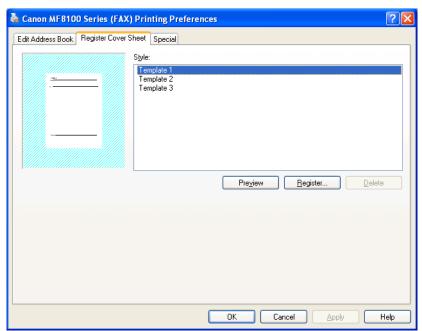

[Style] Selects the style of the cover sheet.

> A bitmap image of the selected cover sheet style is displayed in the preview area to the left of the options.



The number of sheets you are going to send as a fax is not displayed on the cover sheet when you select Template 1, 2 or 3 for Style.

[Preview] Displays the preview image of the selected cover sheet.

[Register...] Registers the cover sheet template.


[Delete] Deletes the registered cover sheet template. Select a cover

sheet template from [Style], then press [Delete].

### Special Tab

Specifies the page settings including the paper size, orientation, and resolution.

You can also specify the outside dialing prefix if you dial through a switchboard.

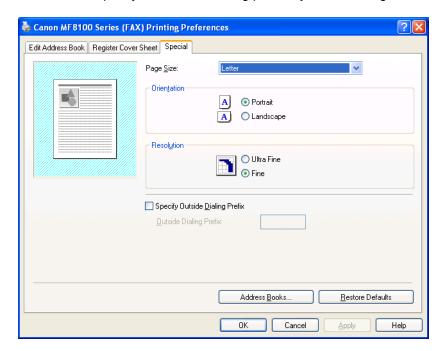


Default settings depend on the country/region of purchase.

Preview image	Displays the image with the currently selected settings reflected.
[Page Size]	Selects the original page size to work with in an application. ([Letter], [11 x17], [Legal], [A4], [A3], [A5], [B4], or [B5])
[Orientation]	Selects the direction of printing relative to the paper. ([Portrait] or [Landscape])
[Resolution]	Specifies the resolution of the fax. ([Ultra Fine] or [Fine])
[Specify Outside Dialing Prefix]	Enables you to enter the prefix number in [Outside Dialing Prefix] up to 5 numbers.
[Address Books]	Opens the [Address Books] dialog box (see p. 4-38).
[Restore Defaults]	Resets all the current settings to their default values.

4-37

#### ■ Address Books


Clicking [Address Books] in the [Special] tab sheet opens the [Address Books] dialog box. This dialog box enables you to specify an Address Book to be referred to when sending a fax.

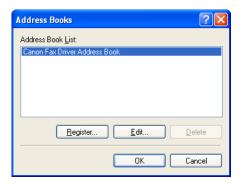

[Address Book List]
 [Register...]
 [Delete]
 Displays the list of the registered Address Books.
 [Delete]
 Displays the list of the registered Address Books.
 [Delete]
 Displays the list of the registered Address Books.
 [Delete]
 Deletes the selected Address Book from the [Address Book List].

#### Register Address Book

This dialog box enables you to register the Address Books to be used when you send a fax.

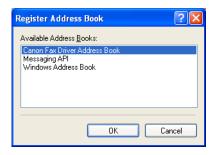

[Available Address Books]

Displays the list of the available Address Books.

#### Add/Edit Canon Fax Driver Address Book

This dialog box enables you to edit the properties of the Address Books to be used when you send a fax.



[Name]

Changes the name of the Address Book. You can enter up to 64 characters.

# **Canon Cover Sheet Editor**

This section describes instructions for installing Canon Cover Sheet Editor, launching the editor, and creating and registering original cover sheets.

The Canon Cover Sheet Editor is software for creating original fax cover sheet templates for use with a Canon fax driver.

After registering the cover sheets created with this software in your fax driver, you can use them with any fax. If you specify fields instead of manually entering data for sender or recipient information, the actual sender or recipient information that you select in the fax driver is automatically entered in the cover sheet when the fax is sent.

With the Canon Cover Sheet Editor, you can do the following:


- Insert text using different fonts, font styles, and font sizes into a cover sheet.
- Insert a variety of objects, such as drawings and images, into a cover sheet.
- Use the field feature for creating cover sheets for sending faxes to multiple recipients.
- Add fields for specifying remarks and comments in addition to the sender and recipient information fields.
- Easily edit the display order and position of objects, and group different objects.
- Align objects on a grid while you work with them.

## **Installing and Uninstalling Cover Sheet Editor**

### Installation

- 1 Insert the CD-ROM into your CD-ROM drive.
- Click [start] on the Windows task bar → [My Computer] (Windows 98/Me/2000: double-click [My Computer]).
- Open the CD-ROM icon → double-click the following folders: [FAX] → [US ENG] → [CSE].


- 4 Double-click the [setup (setup.exe)] icon to start the installation process.
- 5 Click [Next >] → follow the instructions on the screen to continue the installation.

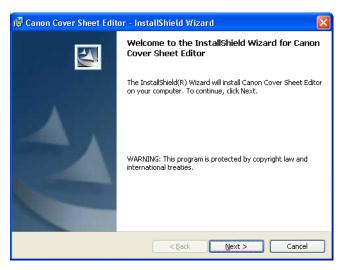

The [License Agreement] dialog box is displayed.

6 Read the Canon Cover Sheet Editor license agreement carefully. If you agree to the terms, select [I accept the terms in the license agreement] → click [Next >] → follow the instructions on the screen to continue the installation.


In the dialog box for selecting a setup type, select [Complete] or [Custom] → click [Next >].

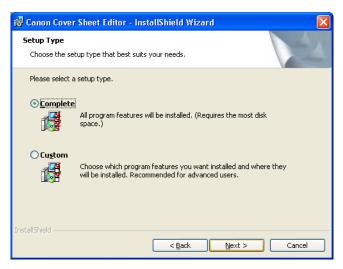

### ∧ NOTE

If you select [Custom] in the dialog box for selecting [Setup Type], you can specify the directory into which Canon Cover Sheet Editor is to be installed.

8 Click [Install] to start copying the files.

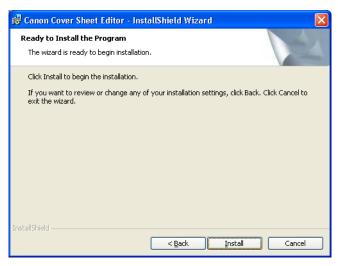


9 Click [Finish].

### Launching

To start the Cover Sheet Editor, follow the procedure below.

1 Click [start] on the Windows task bar → [(All) Programs] → [Canon] → [CSE] → [Cover Sheet Editor].

The Canon Cover Sheet Editor will open.

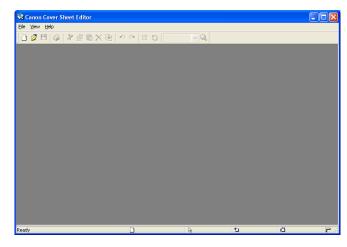

### Uninstalling

If it becomes necessary to uninstall the Canon Cover Sheet Editor, follow the procedure below.

- Click [start] on the Windows task bar → [Settings] → [Control Panel].
- 2 Click [Add/Remove Programs] (Windows 98/Me/2000: double-click [Add/Remove Programs] icon) → select [Canon Cover Sheet Editor] → click [Remove].
- When the [InstallShield Wizard] dialog box appears, follow the instructions on the screen.

The Canon Cover Sheet Editor is uninstalled.

# Opening, Saving, and Closing a File

### Opening a File

### ■ Creating a New File

To create a new cover sheet, follow the procedure below.

1 Click [[7]] (New) on the toolbar.

Alternatively, select [New] from the [File] menu.

The [New] dialog box appears.

2 Select a paper size for the new cover sheet → click [OK].



The New Cover Sheet screen appears.

### ■ Opening a Saved Cover Sheet

You can open a saved cover sheet by specifying its file name.

To open a saved cover sheet, follow the procedure below.

1 Click [👩] (Open) on the toolbar.

Alternatively, select [Open] from the [File] menu.

The [Open] dialog box appears.

Specify the file name of the cover sheet that you want to open.



Clicking [Preview] displays an image of the selected cover sheet.

# Click [Open].

The selected cover sheet appears.

### Saving and Closing a File

#### ■ Saving a New File

If you save a cover sheet, you can register it later in the fax driver for use as an original cover sheet.

# Click [P] (Save) on the toolbar.

Alternatively, select [Save] or [Save as] from the [File] menu.

The [Save as] dialog box appears.

### 2 Enter a name for the file in [File name] → specify the location where you want to save the file → click [Save].

The file extension is automatically set to "cse."

### ■ Saving an Existing File

Follow the procedure below to save an existing cover sheet after editing it.

# Click [] (Save) on the toolbar.

Alternatively, select [Save] from the [File] menu.

### MPORTANT

- To preserve the opened file as it was before editing, select [Save As] and specify a different name or location for saving the edited file. Selecting [Save] will overwrite the existing file.
- Selecting the [Save as] command is necessary only to specify a different file name or a different location to save the cover sheet.

### ■ Closing a File

Follow the procedure below to close a currently opened cover sheet without exiting the Canon Cover Sheet Editor.

1 Click the lower [x] (Close) at the top-right corner of the Canon Cover Sheet Editor main window.



Alternatively, select [Close] from the [File] menu.



If you close a cover sheet that has not been saved after editing, a message appears asking whether you want to save the changes. Click [Yes] to save the changes, or [No] if you do not want to save changes. Click [Cancel] if you do not want to close the cover sheet.

### **Creating an Original Cover Sheet**

This section explains how to insert text, adjust text properties, specify fields, create objects, adjust objects, and specify grid options in order to create an original cover sheet.

### **Inserting Text**

You can insert text and numbers into the cover page. The properties of any text or the text box itself can also be changed. To edit the text, change to the edit mode by clicking anywhere inside of a text box, and then place the cursor on the text that you want to edit.

1 Click [A] (Text Box) on the toolbar.

Alternatively, select [Text Box] from the [Insert] menu.

2 Drag the pointer on the area of the cover sheet to insert text.

A square or rectangular text box appears.

Click inside the text box.

The cursor for editing text appears.

### 4 Enter the desired text.

### **Adjusting Text Properties**

You can change text properties whenever you want. When you change text properties, all text inside the selected text box is affected.



Text properties for field settings inside a text box are also changed according to the text properties you specified. For details on field features, see "Specifying Fields," on p. 4-52.

#### ■ Font

1 Click inside the text box.

The text box is now ready for editing.

- 2 Select the desired font from the Font drop-down menu on the toolbar.
- Font Size
- 1 Click inside the text box.

The text box is now ready for editing.

2 Select the desired font size from the Font Size drop-down menu on the toolbar.

You can also enter the desired font size directly into Font Size.

- Font Color
- 1 Click inside the text box.

The text box is now ready for editing.

2 Select the desired font color from the Font Color drop-down menu on the toolbar.

### ■ Bold Formatting

1 Click inside the text box.

The text box is now ready for editing.

**2** Click [**B**] (Bold) on the toolbar.

To undo the bold formatting, click [R] (Bold) again.

- Italic Formatting
- 1 Click inside the text box.

The text box is now ready for editing.

2 Click [7] (Italic) on the toolbar.

To undo the italic formatting, click [1] (Italic) again.

- Underlining
- 1 Click inside the text box.

The text box is now ready for editing.

2 Click [U] (Underline) on the toolbar.

To undo the underlining, click [U] (Underline) again.

- Aligning Text
- 1 Click inside the text box.

The text box is now ready for editing.

2 Click [

(Align Left), [

(Align Center), or [

(Align Right) on the toolbar.

### ■ Specifying Text Properties

You can specify all of the properties for text inside a text box simultaneously.

[Preview] inside the [Text Properties] dialog box displays a preview of how the text would appear with the currently selected settings. Use it as a guide if you are specifying settings.

### 1 Click inside the text box.

The text box is now ready for editing.


# Click [ (Properties) on the toolbar.

Alternatively, select [Properties] from the [Edit] menu.

Alternatively, right-click inside the text box  $\rightarrow$  click [Properties].

The [Text Properties] dialog box appears.

Select [Font], [Font Style], and [Size] from the respective list boxes.

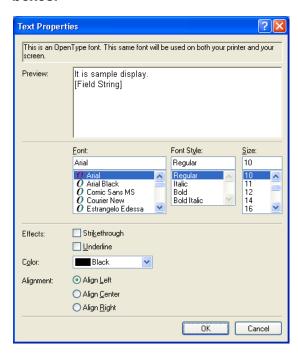

Alternatively, enter the desired font size directly into [Size].

- 4 Select [Strikethrough] or [Underline] to draw a line through or to underline text.
- 5 Select the desired text color from [Color].
- 6 Specify [Alignment] for the text.
- 7 Click [OK].

### ■ Specifying Text Box Properties

Follow the procedure below to specify the type of border, border color, and background color of the selected text box.

1 Click anywhere on the border of the text box.

The border of the text box is selected.

**2** Click [ ] (Properties) on the toolbar.

You can also select [Properties] from the [Edit] menu.

You can also display the [Text Box Properties] dialog box by double-clicking anywhere on the border of the text box.

The [Text Box Properties] dialog box opens.



3 Select the desired border type from [Line Style].

- 4 Specify the [Width] setting to set the thickness of the border (0.1 to 50.0).
- **⊘** NOTE


The [Width] setting is available only if [Line Style] is set to 'Solid'.

- 5 Select the desired color of the border from [Color].
- **6** Select the desired background color for the text box from [Fill in].
- 7 Click [OK].

### **Specifying Fields**

You can show sender or fax recipient information, such as the name, fax number, company name, and department/division name on the cover sheet using a feature called a "field."

Fields are objects in the cover sheet that you can replace with data when sending a fax. Actual sender and recipient information as specified in the fax driver is automatically inserted in the corresponding fields on the cover sheet during transmission.




#### Available fields:

- Sender information: Name, Fax Number, Company, Dept./Div.
- Recipient information: Name, Fax Number, Company, Dept./Div.
- · Sheets to send
- Other information: Remark, Comment

A recipient information field that contains multiple values is called a "repeating field." This feature is convenient for using the same cover sheet to send faxes to multiple recipients.

The repeating field is used to insert data for every recipient specified in the fax driver.

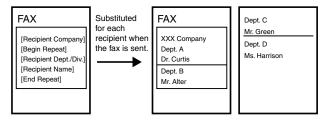

In addition to the [Sender Information] and [Recipient Information] fields, you can also insert [Sheets to Send], [Remark], and [Comment] fields on the cover sheet. When the fax is sent, the number of sheets to send as a fax specified in the fax driver is inserted in the [Sheets to Send] field, information specified in the fax driver such as [Urgent] or [Confidential] is inserted in the [Remark] field, and comments specified in the fax driver are entered in the [Comment] field.

- Inserting Sender and Recipient Information Fields When Editing Text
- Inside the text box, place the cursor to where you want to insert the field.
- 2 Click the [Insert] menu → [Sender Information] or [Recipient Information] → select the field (such as [Name], [Fax Number], [Company], and [Dept./Div.]) to insert.

The selected field is inserted.



If you select [Insert All], all of the available fields for sender or recipient information are inserted simultaneously. The fields are inserted in this order: [Name], [Fax Number], [Company], and [Dept./Div.]. You can change the position of the fields as needed.

- Inserting Sender and Recipient Information Fields When Not Editing Text
- Click the [Insert] menu → [Sender Information] or [Recipient Information] → select the field (such as [Name], [Fax Number], [Company], and [Dept./Div.]) to insert.
- **2** Drag the pointer on the area of the cover sheet to where you want to insert the field.

A square or rectangular text box containing the selected field appears.



If you select [Insert All], all of the available fields for sender or recipient information are inserted simultaneously. The fields are inserted in this order: [Name], [Fax Number], [Company], and [Dept./Div.]. You can change the position of the fields as needed.

### ■ Inserting Repeating Fields

Follow the procedure below to show information for multiple recipients on the cover sheet when sending a fax.

Insert the desired recipient information field, such as [Name], [Fax Number], [Company], and [Dept./Div.].

- Inside the text box, place the cursor to the left of the field to repeat.
- 3 Click the [Insert] menu → [Recipient Information] → [Begin Repeat].

The [Begin Repeat] field is inserted.

- 4 Inside the text box, place the cursor to the right of the field to repeat.
- 5 Click the [Insert] menu → [Recipient Information] → [End Repeat].

The [End Repeat] field is inserted.

The field between the [Begin Repeat] and [End Repeat] fields is replaced with multiple recipients' information when sending a fax.



The text box may not be able to accommodate all of the actual data for a repeating field if a large number of recipients are specified for sending a fax. In this case, a new page is automatically created and data that does not fit into the text box displays from the top of the new page.

### ■ Inserting Borders Between Repeating Fields

When you specify a repeating field for recipient information, you can also select to insert borders between the values for easier reading.

1 Click the [Insert] menu → [Recipient Information] → [Borders].

The [Border Settings] dialog box opens.

2 Select [Insert a Border Between Repeats] to insert borders between multiple values in a repeating recipient information field.



If you do not want to insert borders between the values, deselect this check box  $\rightarrow$  click [OK].

- Select the type of line to use as the border from [Line Style].
- Specify the [Width] setting to set the thickness of the borders (0.1 to 10.0).
- ∅ NOTE

The [Width] setting is available only if [Line Style] is set to 'Solid'.

- Select the desired color of the borders from [Color].
- 6 Click [OK].
- Inserting Sheets to Send Field When Editing Text
- Inside the text box, place the cursor where you want to insert the field.
- From the [Insert] menu, select [Sheets to Send].

The [Sheets to Send] field is inserted.

- Inserting Sheets to Send Field When Not Editing Text
- 1 From the [Insert] menu, select [Sheets to Send].
- 2 Drag the pointer on the area of the cover sheet to insert the field.

A square or rectangular text box containing the selected field appears.

- Inserting Remark and Comment Fields When Editing Text
- Inside the text box, place the cursor to where you want to insert the field.
- **2** From the [Insert] menu, select either [Remark] or [Comment].

  The [Remark] field or the [Comment] field is inserted depending on your selection.
- Inserting Remark and Comment Fields When Not Editing Text
- 1 From the [Insert] menu, select either [Remark] or [Comment].
- 2 Drag the pointer on the area of the cover sheet to insert the field.

A square or rectangular text box containing the selected field appears.

### **Creating Objects**

You can draw lines, rectangles, rounded rectangles, or ovals on the cover sheet. You can also change their properties once they are drawn.

- Lines
- Click [/] (Line) on the toolbar.

  You can also select [Line] from the [Drawing] menu.
- 2 Drag the pointer on the area of the cover sheet to draw the line.

To draw a line, hold down [SHIFT] on the keyboard while dragging.

### ■ Rectangles

Click [ ] (Rectangle) on the toolbar.

You can also select [Rectangle] from the [Drawing] menu.

Drag the pointer on the area of the cover sheet to draw the rectangle.

To draw a square, hold down [SHIFT] on the keyboard while dragging.

### ■ Rounded Rectangles

Click [ ] (Rounded Rectangle) on the toolbar.

You can also select [Rounded Rectangle] from the [Drawing] menu.

**2** Drag the pointer on the area of the cover sheet to draw the rounded rectangle.

To draw a rounded square, hold down [SHIFT] on the keyboard while dragging.

You can adjust the degree of the curve or the roundness of the corners of the rounded rectangle. To do so, click anywhere outside the newly created rounded rectangle → click the rounded rectangle again → click and drag the inner handle in its upper right corner to change the degree of the curve.

#### ■ Ovals

Click [ ] (Oval) on the toolbar.

You can also select [Oval] from the [Drawing] menu.

Drag the pointer on the area of the cover sheet to draw the oval.

To draw a circle, hold down [SHIFT] on the keyboard while dragging.

### ■ Inserting Images

1 Click [ [ [ (Image) on the toolbar.

You can also select [Image] from the [Insert] menu.

The [Open] dialog box appears.

# Specify the file name of the bitmap file that you want to insert.



Clicking [Preview] opens the [Preview] dialog box, where an image of the highlighted bitmap file is displayed.

# 3 Click [Open].

### **Editing Objects**

You can copy, move, and delete objects such as lines, rectangles, rounded rectangles, ovals, images, and text boxes on the cover sheet.

### ■ Selecting an Object

1 Click the object to select.

You can also drag the pointer completely over the object.

The object is selected.



You can also select multiple objects by holding down [SHIFT] on the keyboard and clicking each object that you want to select, or by dragging the pointer completely over the objects. If you want to deselect any of the objects you selected, hold down [SHIFT] on the keyboard →click the objects that you want to deselect.

### ■ Moving an Object within the Same Cover Sheet

1 Select the object to move.

You can select multiple objects and move them at the same time.

**2** Drag the selected object to the desired location.

Alternatively, use any of the four arrow keys  $[\leftarrow]$ ,  $[\uparrow]$ ,  $[\rightarrow]$ , or  $[\downarrow]$  to move the object in the desired direction in 0.1 mm increments.



- Hold down [SHIFT] on the keyboard while dragging to move the object horizontally or vertically only.
- Hold down [CTRL] on the keyboard while dragging to copy the selected object and drag the copy to the desired location.
- If [Snap to Grid] is specified, holding down [SHIFT] on the keyboard while pressing an arrow key moves the object in the direction of the arrow in half-grid space increments. If [Snap to Grid] is not specified, holding down [SHIFT] on the keyboard while pressing an arrow key moves the object in the direction of the arrow in 2.0 mm increments.

### ■ Moving an Object to a Different Cover Sheet

Select the object to move.



You can select multiple objects and move them at the same time.

Click [] (Cut) on the toolbar.

Alternatively, select [Cut] from the [Edit] menu.

Display the second cover sheet.



If the second cover sheet is open, you can select it from the [Window] menu.

Click [ ] (Paste) on the toolbar.

Alternatively, select [Paste] from the [Edit] menu.

The selected object is moved to the active cover sheet.

# ■ Resizing an Object

Select the object whose size you want to change.



You can select multiple objects and change all of their sizes at the same time.

2 Drag any handle on the selected object to change its size.



The shape of the pointer changes depending on which handle you place it over.

- Dragging the handles on the top and bottom sides of the object changes its height.
- Dragging the handles on the left and right sides of the object changes its width.
- Dragging the handles on the corners of the object changes both its height and width.

### ■ Copying an Object by Dragging

1 Select the object to copy.



You can select multiple objects and copy them at the same time.

2 Hold down [CTRL] on the keyboard → drag the selected (copied) object to the desired location.



Dragging the selected object without holding down [CTRL] on the keyboard moves the object to the new location instead of copying it.

### ■ Copying an Object by Using Button or Menu Commands

You can use button and menu commands to copy an object such as a line, rectangle, rounded rectangle, oval, image, or text box on the same cover sheet or to another cover sheet.

Follow the procedure below.

1 Select the object to copy.



You can select multiple objects and copy them at the same time.

**2** Click [

[
] (Copy) on the toolbar.

You can also select [Copy] from the [Edit] menu.

If you want to copy the object to a different cover sheet, display the second cover sheet.



If the second cover sheet is open, you can select it from the [Window] menu.

4 Click [] (Paste) on the toolbar.

Alternatively, select [Paste] from the [Edit] menu.

The selected object is copied.



- You cannot copy an object to a different cover sheet by dragging.
- To copy text, drag the pointer over the text to select it → click [□] (Copy) or select the [Copy] command to copy it → click [ [ ] (Paste) or select the [Paste] command. If you want to copy text within the same text box, hold down [CTRL] on the keyboard while dragging the selected text.

# ■ Duplicating an Object

Duplicating enables you to copy and paste an object in one operation.

Select the object to duplicate.



You can select multiple objects and duplicate them at the same time.

Click 🔄 (Duplicate) on the toolbar.

Alternatively, select [Duplicate] from the [Edit] menu.

The selected object is duplicated.

# ■ Deleting an Object

Select the object to delete.



You can select multiple objects and delete them at the same time.

Click [▼] (Delete) on the toolbar.

Alternatively, select [Delete] from the [Edit] menu, or press [DELETE] on the keyboard.

The selected object is deleted.

# ■ Grouping Objects

You can edit or handle multiple objects that are grouped together as a single object. You can move, copy, or change the size of grouped objects in a single operation. You can also simultaneously modify the properties of all objects in the group.

- While holding down [SHIFT] on the keyboard, you can individually select multiple objects by left clicking on them with the mouse, or you can select all of the objects by running the mouse over them.
- 2 Click [m] (Group) on the toolbar.

Alternatively, select [Group] from the [Layout] menu.

You can ungroup objects by selecting the group of objects that you want to ungroup and clicking [[mail] (Ungroup) on the toolbar or selecting [Ungroup] from the [Layout] menu.

# Specifying Object Properties

Follow the procedure below to change the line style, line color, and background color of objects such as lines, rectangles, rounded rectangles, ovals, and images.

1 Select the object whose properties you want to change.



You can select multiple objects and change their properties at the same time.

2 Click [ [ (Properties) on the toolbar.

Alternatively, select [Properties] from the [Edit] menu, or display the [Object Properties] dialog box by double-clicking the selected object.

The [Object Properties] dialog box opens.

- **3** Select the desired line type for the object from [Line Style].
- 4 Specify the [Width] setting to set the thickness of the line.



The [Width] setting is available only if [Line Style] is set to 'Solid'.

- 5 Select the desired line color for the object from [Color].
- Select the desired background color for the object from [Fill in].



[Fill in] cannot be specified if the selected object is either a line or an image.

# Click [OK].

# **Arranging Objects**

You can rearrange the order and appearance of objects such as lines, rectangles, rounded rectangles, ovals, images, and text boxes on the cover sheet.

# ■ Changing the Order of Display

If multiple objects overlap, you can specify the order in which they overlap. Use the following four commands to change the order of display of overlapping objects.

- [Bring to Front]: Moves the selected object to the front.
- [Send to Back]: Moves the selected object to the back.
- [Bring Forward]: Moves the selected object one level higher.
- [Send Backward]: Moves the selected object one level lower.
- Select the object whose display order you want to change.



- You can select multiple objects and change the order of display for all of them at the same time.
- If the object you want to select lies behind other objects and thus is hidden from view, press [TAB] on the keyboard repeatedly until the object you want is selected. You can also select in reverse order by holding down [SHIFT] on the keyboard while pressing [TAB] on the keyboard.
- Click [4] (Bring to Front), [4] (Send to Back), [4] (Bring Forward), or [4] (Send Backward) on the toolbar.



Alternatively, select [Bring to Front], [Send to Back], [Bring Forward], or [Send Backward] from the [Layout] menu.

### ■ Aligning Multiple Objects

You can align multiple selected objects according to their left edge, right edge, top edge, bottom edge, or center in one operation. The position of the last selected object becomes the point of reference of alignment.

Use the following commands to change the alignment of the selected objects.

- [Align Left]: Aligns the left edge of all objects along the left edge of the last selected object.
- [Align Center]: Aligns the left-right center axis of all objects along the left-right center axis of the last selected object.
- [Align Right]: Aligns the right edge of all objects along the right edge of the last selected object.
- [Align Top]: Aligns the top edge of all objects along the top edge of the last selected object.
- [Align Middle]: Aligns the top-bottom center axis of all objects along the top-bottom center axis of the last selected object.
- [Align Bottom]: Aligns the bottom edge of all objects along the bottom edge of the last selected object.
- 1 While holding down [SHIFT] on the keyboard, you can individually select multiple objects by left clicking on them with the mouse, or you can select all of the objects by running the mouse over them.

Select the object to be used as the point of reference last.



If you drag the pointer to select multiple objects, the object positioned in the front is used as the point of reference.

2 Click [□] (Align Left), [□] (Align Center), [□] (Align Right), [□] (Align Top), [□] (Align Middle), or [□] (Align Bottom) on the toolbar.

Alternatively, click the [Layout] menu  $\rightarrow$  point to [Distribute Horizontally] or [Distribute Vertically]  $\rightarrow$  select the type of alignment you want.

# Specifying Grid Options

The grid function is useful for arranging created objects.

### ■ Showing Grids

You can display the grid on the cover sheet to help you create and arrange objects.

On the toolbar, click [IIII] (Show Grids) to activate the grid.

Alternatively, activate the command by clicking [Show Grids] from the [View] menu.

Hide the grid by clicking the activated [IIII] (Show Grids) to deactivate it or by clicking [Show Grids] from the [View] menu.

# ■ Snapping Objects to Grid

If you activate the [Snap to Grid] setting for the cover sheet, objects are aligned along the grid when they are moved or resized on the cover sheet.

On the toolbar, click [#] (Snap to Grid) to activate the grid.

Alternatively, activate the command by clicking [Snap to Grid] from the [View] menu.

Deactivate the [Snap to Grid] setting by clicking the activated [17] (Snap to Grid) or by clicking [Snap to Grid] from the [View] menu.



[Snap to Grid] is available only after this setting is specified. It does not affect objects that are modified before this setting is specified.


# ■ Specifying Grid Properties

Follow the procedure below to specify the properties for the grid on the cover sheet, such as type, color, and spacing. You can also specify whether to display the grid and whether to snap objects to the grid.

Select [Grid Properties] from the [View] menu.

The [Grid Properties] dialog box appears.

Select [Show Grids].

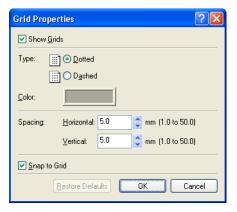

Deselect the check box if you do not want to display the grid.



Deselecting this check box disables the [Type], [Color] and [Spacing] settings.

- 3 Select [Dotted] or [Dashed].
- 4 Click the button to the right of [Color].

The [Color Setting] dialog box appears.

- Select a color to use as the grid's basic color in the [Color Setting] dialog box.
  - To select basic color:
    - ☐ Select the color you want from [Basic colors].



#### To create your own color:

- ☐ Click on a color that is the closest to the color you want.
- ☐ Click [Define Custom Colors].

The color matrix appears on the right of the [Color Settings] dialog box.

- ☐ Adjust the luminosity of the color → click [Add to Custom Colors].
- Click [OK] in the [Color Setting] dialog box.
- Specify the [Horizontal] and [Vertical] spacing for the grid.



You can change the unit of measure for the spacing in the [Unit Setting] dialog box displayed by selecting [Unit] from the [View] menu.

To align objects along the grid, select [Snap to Grid].

To deactivate [Snap to Grid], deselect the check box.

9 Click [OK].



Clicking [Restore Defaults] in the [Grid Properties] dialog box restores all [Grid Properties] settings for the cover sheet to their default values.

# **Printing a Cover Sheet**

Follow the procedure below to print the cover sheet.

1 Click [[]] (Print) on the toolbar.

Alternatively, select [Print] from the [File] menu.

The [Print] dialog box appears.

Select the printer → click [OK].

If necessary, click [Properties] to specify detailed print settings.

3 Specify the number of copies to print.



[All] is the only active selection for the [Print range] setting because the cover sheet consists of only one page.

4 Click [OK].

# Registering an Original Cover Sheet as a Template


You can register the cover sheet created with the Canon Cover Sheet Editor with the fax driver for use as a template.

Click [Start] on the Windows task bar → [Settings] → [Printers].




If you are using Windows XP Professional, on the [start] menu, click [Printers and Faxes]. If you are using Windows XP Home Edition, on the [start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].

- 2 In the [Printers] folder, right-click the printer icon for your fax → click [Properties] (Windows 98/Me), or [Printing Preferences] (Windows 2000/XP/Server 2003).
- **3** Click the [Register Cover Sheet] tab.

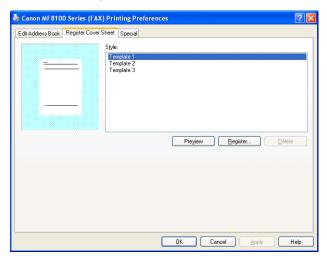

# 4 Click [Register].

The [Register Cover Sheet] dialog box appears.

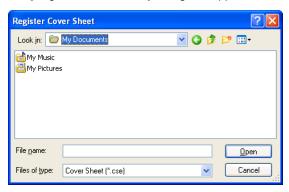

# 5 Select the cover sheet template file → click [Open].

The selected template is added to [Style] in the [Register Cover Sheet] sheet.



In addition to the default templates, you can add up to 30 templates to the fax driver.

# **Troubleshooting**

This chapter describes the problems you might encounter when using the machine and their remedies. It also explains what to do if you cannot solve the problem by yourself.

- •"Printer Problems," on p. 5-1.
- •"Driver Problems," on p. 5-4.
- •"Scanning Problems," on p. 5-6.
- •"Installing and Uninstalling Problems," on p. 5-11.

If you cannot solve the problem by referring to the information in this chapter, refer to also "System Requirements," on p. 1-1 to p. 1-2, "Where to Find Help," on p. 1-3 and Chapter 9, "Troubleshooting," in the *Basic Guide*.

# **Printer Problems**

Printer does not print.			
Q	Is there paper in the machine?		
Α	Make sure paper is loaded.		
Q	Does the copy job stop due to out of paper?		
Α	Load paper. The print job will start automatically when the copy job is completed.		
Q	Is the cartridge installed correctly?		
Α	Make sure the cartridge is installed correctly. (Refer to the Quick Start Guide.)		
Q	Does your BIOS port setting need to be modified?		
Α	See your computer's documentation concerning available ports.		

- Is your computer working properly?
- Α Make sure your computer is turned on. If so, see your computer's documentation for troubleshooting.
- Are you using a USB 2.0-compatible USB hub?
- Α If you connect the machine to a USB 2.0-equipped computer using a USB 2.0-compatible USB hub, you may not be able to print. In this case, connect a USB cable directly to the computer.
- Α If you connect the machine to a USB 2.0-equipped computer, you may not be able to print. If your PC is equipped with two or more USB ports, try connecting the machine to another USB ports.

#### No power is supplied.

- Q Is the power cord plugged in?
- Make sure the power cord is securely plugged into both the machine and the Α AC outlet.
- Q Is the AC outlet supplying power?
- Α Make sure the AC outlet is supplying power; try another outlet if necessary.
- Q Does the AC voltage match the printer?
- Α Make sure the voltage of the AC outlet matches the ratings on the machine.

#### Printer stops printing.

- Is the interface cable loose?
- Α Check your computer and cable.
- O Are you working on an application in the foreground?
  - Α Printer performance improves if you give priority to your print job.

#### Printout is wrong.

- Q Is there a communication problem between the printer and your computer?
- Α Make sure your cable connections are secure.
- Α Make sure your USB cable is less than 9.8 ft (3 m) long.
- Α Make sure you are not using a switch box.
- Make sure you have selected the correct printer driver in Windows.

- Q Is a wrong printer driver selected in the [Printers and Faxes] (Windows 98/Me/ 2000: [Printers]) folder?
- A Make sure the corresponding printer driver is selected in the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder.

#### Printer locks up system.

- Q Does your system setup have a problem?
  - A Make sure that you have a high-quality shielded interface cable.
  - A The problem might be in your BIOS. Verify that your BIOS setup is correct. (See your computer's documentation for details.)
  - A Verify that your physical memory is working correctly.
- A If you have a Toshiba laptop, change the following line in your CONFIG.SYS file: c:\winutils\mxtime.exe to

#### Computer indicates a device time-out.

- Q Is the machine off, offline, or not connected to the computer?
- A Make sure the machine is not paused.

REM c:\winutils\mxtime.exe

- A Make sure the machine's interface cable is securely connected to both the machine and the computer.
- A Make sure paper is properly loaded from the cassette or multi-purpose tray.
- A Reset the machine and the computer.
- A Try the print operation again.
  - A Try a different cable.

# **Driver** Problems

Driver is not working properly.

- Is the printer driver selected as the default printer driver?
  - Specify the corresponding printer driver as the default printer driver for the Α MF8100 Series.

Cannot print some fonts in a document correctly.

- O Does the document contain Adobe Type Manager (ATM) fonts?
- Α Adobe Type Manager (ATM) is not supported. Replace Adobe Type Manager (ATM) fonts to other appropriate fonts.

Cannot print with a printer driver other than the MF8100 Series printer.

- Is the printer driver connected to the same port as the MF8100 Series printer driver?
- Connect the printer driver to a port different from the MF8100 Series printer Α

Cannot install the MF8100 Series printer driver using the USB port.

- Is the USB driver installed properly? Q
  - Perform the following steps.
    - 1. Make sure the machine is connected to your computer using a USB cable and the machine is turned on.
    - 2. Double-click [System] in the [Control Panel] folder. The [System Properties] dialog box appears.
    - 3. For Windows 2000/XP, select the [Hardware] tab → click [Device Manager] → double-click [Universal Serial Bus controllers]. For Windows 98/Me, select the [Device Manager] tab → double-click [Universal Serial Bus controllers].

4. Locate the USB class driver under [Universal Serial Bus controllers]. Delete ONLY the USB class driver specified for your operating system. (If the USB class driver is displayed under [Other device], delete ONLY one of the following, depending on your operating system: [USB Printing Support], [Canon MF8100 Series], or [Unknown].) For Windows 2000/XP, select [USB Printing Support] → select [Uninstall] from the [Action] menu. For Windows 98/Me, select [Canon MF8100 Series] → click [Remove].



Never delete other devices or device drivers. Windows may not operate properly.

- 5. Close the [Control Panel] folder → unplug the USB cable.
- 6. Restart your computer.
- 7. For instructions on installing the printer driver, see "Installing Software on Your Computer," on p. 1-4.



The procedure for Windows XP/Server 2003 is given for the Category View mode.

Strings of garbled characters are printed.

Q Is the driver installed properly?

> Check if the corresponding printer driver icon is displayed in the [Printers and Faxes] (Windows 98/Me/2000: [Printers]) folder. If not, install the driver. If the corresponding printer driver icon is displayed, right-click the corresponding printer driver icon → check if [Set as Default printer] (Windows 98/Me: [Set as Default]) is selected in the pop-up menu. For more information, see "Checking Installation," on p. 1-22.

# **Scanning Problems**

#### Cannot scan a document.

- Is there anything displayed in the LCD?
- If nothing is displayed in the LCD, refer to Chapter 9, "Troubleshooting," in the Α Basic Guide.
- Is the Alarm indicator blinking? Q
- If the Alarm indicator is blinking, refer to Chapter 9, "Troubleshooting," in the Α Basic Guide.
- Q Is the document loaded correctly?
- Α Remove the document and load it on the platen glass or ADF correctly. (Refer to Chapter 3, "Document Handling," in the Basic Guide.)
- Q Is your computer working properly?
- Α Restart your computer.
- Q Is a USB hub or repeater working properly?
- When using a USB hub or repeater, try connecting a USB cable directly to the Α computer to check if it works properly. If you can scan the document successfully after connecting a USB cable directly to the computer, check your USB hub or repeater if it is working properly.
- Q Are you using a USB 2.0-compatible USB hub?
- Α If you connect the machine to a USB 2.0-equipped computer using a USB 2.0-compatible USB hub, you may not be able to scan. In this case, connect a USB cable directly to the computer.

If you want to connect the printer and computer via a USB 2.0-compatible hub, follow the procedure below to modify the INI file. It is recommended to make a backup copy of the file before making any changes to it.

1. Open the following file in Notepad or another text editor application. Windows 98/Me:

windows\system\CNCMFP13.ini

Windows 2000:

winnt\system32\CNCMFP13.ini

Windows XP/Server 2003:

windows\system32\CNCMFP13.ini

2. Below the last line, add the following two lines, then save the file. Take care not to modify any other parts. Scan1

ReadSize=16

- If you connect the machine to a USB 2.0-equipped computer, you may not be able to scan. If your PC is equipped with two or more USB ports, try connecting the machine to another USB ports. If the problem persists, follow the procedure below to modify the INI file. It is recommended to make a backup copy of the file before making any changes to it.
  - 1. Open the following file in Notepad or another text editor application. Windows 98/Me:

windows\system\CNCMFP13.ini

Windows 2000:

Α

winnt\system32\CNCMFP13.ini

Windows XP/Server 2003:

windows\system32\CNCMFP13.ini

- 2. In the [ScanSize] section, change "Read512Bytes=0" to "Read512Bytes=1," then save the file. Take care not to modify any other parts.
- Q Is the [Select Source] setting in the MF Toolbox, ScanGear MF, or WIA driver set correctly?
  - Α Choose between loading the document on the platen glass or ADF.
  - Q After installing the software, did you install a TWAIN-compatible application?
- Α The TWAIN system file is replaced with something inappropriate and you will be unable to scan images. If this happens, remove the software (see "Uninstalling and Reinstalling the Software," on p. 1-23), then reinstall it (see "Installing Software on Your Computer." on p. 1-4).
- Is the machine recognized in [Scanners and Cameras] of the [Control Panel] Q folder?
- Follow this procedure below to check if the corresponding scanner driver name Α or icon is present in [Scanners and Cameras] of the [Control Panel] folder:
  - Click [start] on the Windows task bar → [Control Panel]. (Windows 98/Me/ 2000: Click [Start] on the Windows task bar → select [Settings] → [Control Panel].)

- 2. Click [Printers and Other Hardware] in the [Control Panel] folder → [Scanners and Cameras]. (Windows 98/Me/2000: Double-click [Scanners and Cameras].)
- 3. If [WIA Canon MF8100] (Windows 98/Me/2000: [Canon MF8100]) is present in the [Scanners and Cameras] folder or dialog box, the machine is recognized. If not, remove the software (see "Uninstalling and Reinstalling the Software," on p. 1-23), then reinstall it (see "Installing Software on Your Computer," on p. 1-4).

#### Computer has hung up or frozen.

- O Is enough memory loaded in your computer?
- Quit other opened applications and try again.
- Is enough space available in the hard disk? Q
- Check that hard disk has enough available space, in particular when scanning large documents at a high resolution. For example, an LTR-size document scanned at 600 dpi, full color requires a minimum of 300 MB of disk space.
  - \* If you do not have enough available space, scan the document at a lower resolution.
- $\circ$ Does an error occur when scanning an image in Photoshop?
- Α Change the allocated memory. On the [Edit] menu, select [References] → click [Memory & Image Cache]. Change the [Physical Memory Usage] in a range of approximately 10% to 20%.
- Q Is the driver installed properly?
- Remove the software (see "Uninstalling and Reinstalling the Software," on p. Α 1-23), then reinstall it. (See "Installing Software on Your Computer," on p. 1-4.)

You installed the applications on the MF8100 Series Setup CD-ROM but they were not registered in the MF Toolbox.

- Have you installed the applications with the MF Toolbox open? O
- Α If you install the applications with the MF Toolbox open, the applications will not be registered in the MF Toolbox. Click [Reset] to register them. (See "Scanning" with the MF Toolbox," on p. 3-7.)

When you click a button on the MF Toolbox, another application opens.

- Is the application selected correctly for that button?
- Α Click a button on the MF Toolbox and select the application you want to open for that button. Repeat for the other buttons. (See "MF Toolbox Settings," on p. 3-10.)

Changed settings in a dialog box are not activated (Windows Me/2000).

- Q Did you restart your computer after changing the settings?
- Α In Windows Me/2000, if you open [Scanners and Cameras] in the [Control Panel] folder and change the settings in the [Events] tab, the settings will not be activated unless you restart your computer. Once you have changed your settings, restart your computer.

#### Scanned images look dirty.

- Q Is the platen glass or the platen glass cover clean?
- Α Clean the platen glass or the platen glass cover.
- Is the image size too small? Q
- Α Some applications do not display an image properly at small sizes. Try displaying the image at 100% magnification.
- Q Does the monitor display color set at below 16 bits?
- Α In [Display Properties], set the display colors to 16-bit color, 24-bit color or higher.

White lines appear on one edge of the image you scan.

- Is the document placed on the platen glass correctly? Q
- Α Place the document approximately <sup>1</sup>/<sub>8</sub>" (3 mm) from the front edge (i.e., the edge closest to the operation panel) of the platen glass.

Scanned image is displayed at a larger (smaller) size on the computer screen.

Is the resolution setting correct?

Α Do one of the following:

- 1. Enlarge or reduce the image display in the application. However, if you open the image in [Paint] or [Imaging], it may display at a large size and you will not be able to reduce it.
- 2. Change the resolution and scan again. The image will be large if resolution is high. It will be small if resolution is low. (See "Determining Resolution," on p. 3-42.)

# **Installing and Uninstalling Problems**

#### Cannot install the software.

- Have you followed the instructions to install the software?
- Α Try reinstalling the software. If an error occurred and installation was not complete, restart your computer and try reinstalling the software.
- Are any other applications open?
- Α Quit all of these and try reinstalling the software.

#### Removal of the drivers takes too long (Windows XP/Server 2003).

- Is any application such as a anti-virus open when removing the software?
- Α Quit any applications (including anti-virus) before removing the software.

#### Removal of the software was completed, but [Canon] remains.

- Q Did you remove the MF drivers before removing the MF Toolbox?
- Α In Windows XP/Server 2003, right-click the [start] menu to open the Windows Explorer → select [Start Menu] in [Administrator] → [Programs] → delete the [Canon] folder.

In Windows 2000, open [Settings] from the [Start] menu → click [Taskbar & Start Menu] → [Advanced] → [Advanced ...] → select [Start Menu] in [All Users] → [Programs] → delete the [Canon] folder.

In Windows 98/Me, open [Settings] from the [Start] menu → click [Taskbar & Start Menu] → [Start Menu Programs] → [Remove] → select the [Canon] folder → click [Remove].

### The message <Version conflict> appears on your computer (Windows 98).

- a Is Photoshop installed on your computer?
- If the message <Version conflict> or <Windows 98 file language or ...> appears during installation, click [Yes] or [No]. Whichever you click, installation thereafter will continue trouble-free.

#### Cannot use the software after upgrading to Windows XP/Server 2003.

- Q Have you upgraded Windows 98/Me/2000 to Windows XP/Server 2003 without removing the software?
- Α Remove the software (see "Uninstalling and Reinstalling the Software," on p. 1-23), then reinstall it. (See "Installing Software on Your Computer," on p. 1-4.)

### In [Device Manager], green mark "?" is displayed (Windows Me).

- Is green mark "?" displayed on [USB Composite Device] in [USB (Universal Serial Bus) Controller] in [Device Manager] in Windows Me?
- As this is not a problem, you can continue to use it as is. Α

# **Appendix**

# **Printer Specifications**

# Hardware

Printing Speed	When printing LTR continuously B&W 20 pages/min. Color 4 pages/min.
Resolution	Approx. 600 dpi × 600 dpi
Paper Sizes	
Cassette	LTR, LGL, Executive, A4, B5, A5 Plain paper Maximum capacity: 250 sheets of 17 lb (60 g/m²) paper
Multi-Purpose Tray	8 $^{1}$ /2" $\times$ 14" (216 mm $\times$ 356 mm) [max.] to 3" $\times$ 5" (76 mm $\times$ 127 mm) [min.] Plain paper, heavy paper, and transparencies (up to 44 lb (163 g/m²)) Maximum capacity: 125 sheets of 17 lb (60 g/m²) paper
Paper Delivery (Face Down Output Way)	80 to 100 sheets (17lb to 28 lb (60 g/m² to 105 g/m²))
Host Interface	USB interface Network interface card

# Software

Printing Software	Canon MF8100 Series Printer Driver
Valid Printing Area	The 13/64" (5.0 mm) border from all sides cannot be printed. (13/32" (10 mm) border for envelope)

# **About Color Printing**


This section describes the fundamentals of colors and the method for color printing from this printer.

# The Three Primary Colors of Light and Color

The colors that you see in the computer display are expressed from the three primary colors of light which are red, green, and blue. White will result if all the three primary colors are mixed (additive process).




Most color printers express color not with the three primary colors of light but with their three inverted complimentary colors, the same as those used in mixing plants, but with the addition of black as a separate color. The three primary printing colors are cyan (C), magenta (M), yellow (Y), plus black (K)(subtractive process).




The three primary colors of light and color are in a complementary color relationship.

The red in light and cyan in color, green in light and magenta in color, and blue in light and yellow in color complement one another.

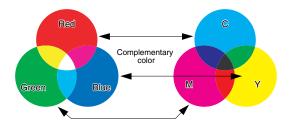


# **Method for Expressing Color**

Paint is mixed on a pallet to create various colors. This cannot be done inside a printer or on a display, therefore, color is expressed with a group of color dots.

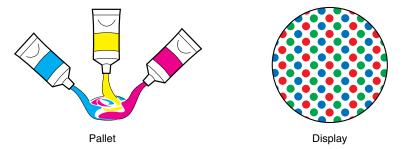


On the display, various colors are expressed by the red, green, and blue dots.

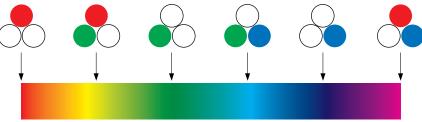

Color bar

The colors of toner cannot be saturated by the printer. Therefore, a larger amount of dots are used in the printer, and colors are expressed in various combinations by adding black to cyan, yellow, and magenta. In addition, the smaller the dots are, colors can be printed in a higher resolution.

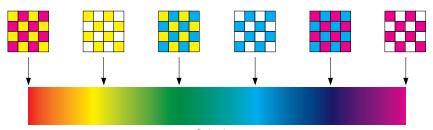


Color bar


# **Mechanism of Color Printing**

In color printing, the shape and color of images are expressed in groups of minute cyan, magenta, yellow, and black dots.


Therefore, image data input in the printer are dissolved into cyan, magenta, yellow, and black.

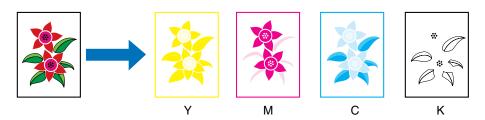

The data is developed in each cartridge, and toner is transferred onto paper repeatedly.

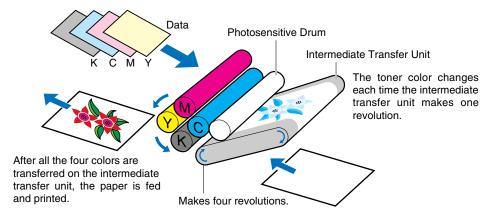

When data in all four colors is transferred onto paper, the paper goes through the fuser unit and is output.

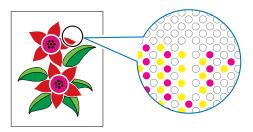


# To Achieve More Beautiful Results in Smoother **Operations**

When printing color images, the capacity of the printer will drop considerably if the desired color cannot be obtained, or if the image quality deteriorates, or if it takes a long time to print data. A printer can be used to its full extend with small adjustments or concerns.

#### ■ Adjusting the color on the display

Colors shown on the display are not always the actual colors. The actual color of the printed image may differ from the color that you see on the display if the color on the display is specified inaccurately.


Use the color samples or color adjustment tools that come with the application software to adjust the displayed colors to the colors that are actually printed.

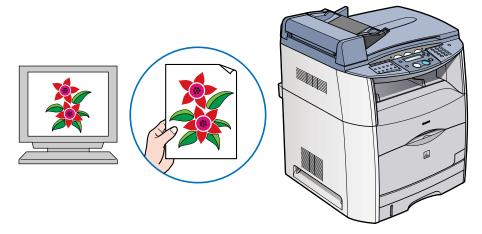

#### ■ Adjusting the resolution


Image quality higher than the printer resolution cannot be obtained no matter how high you specified the resolution for the data. 600 dpi is sufficient for most print size. If the resolution of data is too high, not only will it take a long time to print, but the data size will increase as well. On the other hand, a sufficient image quality cannot be obtained if the resolution is too low.

Check the dimension and resolution of the print data using the application software for processing images, and specify the resolution to 300 dpi or 200 dpi.

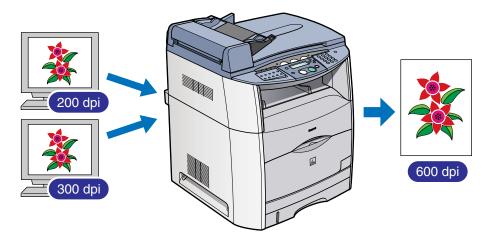

#### ■ Selecting a print mode according to the contents

Specify gradation to standard for printing documents that do not required high image quality such as text documents, reports or presentation references that consist of mainly with graphics, or black-and-white data. The speed for printing can be increased by changing to this mode. Specify gradation to High for printing color photos or complicated illustrations clearly. Printing can be performed efficiently by adjusting the modes according to the data.

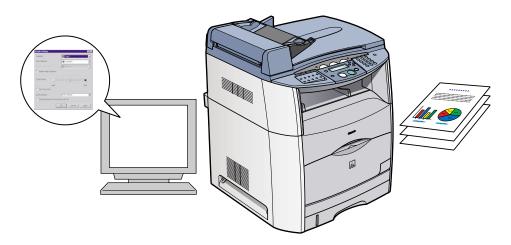

# **Glossary**

# Α

#### AC

Alternating Current. The type of electrical current typically available from household wall outlets.

### **Application**

Abbreviation of the phrase "application software." Software designed for a specific purpose such as word processing software, spreadsheet software, database software, or a combination of these.

# В

#### **Bold**

A characteristic of a printed character with wider, and darker representation. Also referred to as emphasized or double-strike printing.

### **Brightness**

The relative proportion of light and dark areas. Decreasing brightness darkens the overall image; increasing brightness lightens it.

# C

# **Canon ColorGear Color Matching**

Color management system for high-speed, high-precision color processing using Canon's own color management technology. Canon ColorGear is compatible with the industry-standard format "ICC Profiles" and enables high-precision color management using the properties of color devices specified in color profiles. The system is used in many Canon products.

#### Client

A computer that is connected to the printer over a network. A client does not control the printer directly. It interacts with the printer through a server. See also Server.

#### Collate

To print multiple copies of a multi-page document in sequential page order.

#### Command

An instruction that tells the machine to perform a certain function. Commands are sent from the computer to the machine via the interface cable when the machine is readv.

#### Contrast

The degree of difference between the lightest and darkest areas of an image. Decreasing contrast lightens the dark areas and darkens the light areas; increasing it darkens the dark areas and lightens the light areas.

#### **Control Panel**

The set of Windows programs you can use to change system, hardware, software, and Windows settings.

# ח

#### **Default setting**

A setting that is automatically used if no other setting is specified.

#### Desktop

The entire Windows screen that represents your work area in Windows. Icons, windows, and the taskbar are displayed on the Windows desktop.

#### dpi

Dots per inch. A unit of measurement for indicating a printer's resolution. The Canon Color imageCLASS MF8180c prints at a resolution of 600 dpi.

#### Driver

A program that controls how the computer and an external device interact. For example, the printer driver supplies Windows with information such as descriptions of the fonts and features of the installed printer.

# F

#### Exif

The Exif (Exchangeable Image File) format is a JEIDA (Japan Electronic Industry Development Association) standard used by most digital cameras to store images. The Exif compressed files use the baseline JPEG format, so they can be read by any application supporting "JPEG." EXIF supports the storage of extra information, such as the date & time the image was taken, exposure information, etc., within the header of each JPEG file.

# F

### Fixing assembly

The device used during the print process to fix the toner onto the paper (or other media) through applying heat and pressure. The assembly, located inside the printer, gets extremely hot (374°F (190°C)) during operation.

#### Folder

A container in which documents, program files, and other folders are stored on your disks. Formerly referred to as a directory.

#### Font

A complete set of characters of the same size and style. For example, 12-point Courier bold.

#### Form

A custom paper size, with width and height defined by the user.

# G

#### **Gamma Correction**

Method for changing the brightness of an image. With gamma correction, the brightness of parts of an image in the middle of the tonal range is changed without changing the lightest or darkest areas of the image, which means you can change the brightness of an image while maintaining contrast.

#### Grayscale image

A bitmap image that stores data for each dot as a shade of gray, rather than as black or white.

# Н

#### **Halftones**

The process of converting a grayscale image to black dots and white (unprinted) dots that simulate the gray shades in the original image.

#### **Import**

To bring in information created in another application.

#### Install

To copy software to a designated location on a computer's hard disk so that it can be used at any time.

#### Interface

The connection between two devices through which they communicate with each other. The Canon Color imageCLASS MF8180c features USB interface, which makes it compatible with IBM and similar personal computers.

#### Interface port

The port through which the machine communicates with the computer. The Canon Color imageCLASS MF8180c has a USB port, located on the back of the machine. See also USB interface.

#### Italic

A font style distinguished by slanted characters (the upright strokes of the characters are at an angle to the vertical axis).

# J

#### Jam

A situation created when paper becomes caught along the paper path. You must remove jammed paper before you can continue printing.

# K

# Kilobyte (KB)

A unit of measurement, representing the binary number 1024, used to describe machine or computer memory size in thousand-byte units.

## Landscape

A horizontal print orientation. Text and graphics are printed across the longer axis of the page.

### Local printer

A printer that is directly connected to your computer, using a USB cable.

# М

#### Megabyte (MB)

A unit of measurement, representing one million bytes, used to describe machine or computer memory size.

### Multi-page PDF

Several scanned documents saved as one PDF. Each document will become one page of the PDF.

#### My Computer

The Windows program that you can use to browse through your computer's filing system, and to open drives, folders, and files. You can also use [My Computer] to manage your files and your filing system, by moving, copying, renaming, and deleting items.

# N

#### Network

A group of computers connected by cables or other means and using software that enables them to share equipment (such as printers) and exchange information.

### OCR (Optical Character Reader)

Device for reading characters optically. System for extracting information in a text format from information in the form of a graphic such as hand-written or printed characters which have been scanned with a scanner. You cannot edit text scanned with a scanner because it is in a graphic format, but with OCR software you can convert to a text file and then edit the text with word-processing software.

#### Orientation

The printing of text either along the width (portrait) or length (landscape) of the page.

# Р

### Paper feed

The act of guiding a sheet of paper into the machine's paper path.

#### Paper jam

A situation created when paper becomes caught along the paper path. You must remove jammed paper before you can continue printing.

#### Paper path

The route that paper travels through the machine.

#### Paper source

Source of paper feed. The machine has a cassette and a multi-purpose tray.

#### Paper type

All kinds of paper (plain paper, heavy paper, transparencies, and envelopes) are grouped under several paper types.

#### PDF

Stands for Portable Document Format. A widely used format for transmitting and viewing documents on computers. PDF documents can be read or printed out with Adobe's Acrobat Reader program.

#### **Physical RAM**

Random Access Memory (RAM) that is physically present in the computer in the form of memory chips, as opposed to virtual memory. See also Virtual Memory.

#### Platen

The document scanning unit.

#### Point size

Character height is defined in points: one point is 1/72 of an inch.

#### **Portrait**

A vertical print orientation. Text and graphics are printed across the shorter axis of the page.

#### **Preview**

Provisional scanning and display of the document you are about to scan before you actually scan it. If the preview scan looks different from what you want, you can change the settings, display the preview again and confirm before scanning.

#### Print job

A document that a Windows application has processed and sent to the Spooler to be added to the print queue or directly to the machine.

#### Print queue

A list of files that are either waiting to be printed or are currently printing. Once a file has been printed, it is removed from the print queue.

#### **Printer driver**

A program that controls how the computer and printer interact. The printer driver supplies Windows with information such as descriptions of fonts and features of the installed printer.

#### **Printers and Faxes folder (Printers folder)**

The container in which your printer and fax information is stored.

#### Properties dialog box

The dialog box that contains information about a particular device, such as a printer.

#### Proportional spacing

The spacing of characters according to the width of each character. This variable spacing between each character closes up awkward space and makes text easier to read.

#### Queue

A list of files that are either waiting to be printed or are currently printing. Once a file has been printed, it is removed from the print gueue.

# R

### Random Access Memory (RAM)

The working memory of the computer in which programs and data are temporarily stored while you use them. Resetting or shutting off the computer clears all information from RAM. Printing very complicated documents might require closing other running programs or adding more RAM to the computer. See also Physical RAM, Virtual memory.

#### Reinstall

To remove installed software and install again.

#### Resolution

The density of dots for any given output device, expressed in terms of dots per inch (dpi). Low resolution causes font characters and graphics to have a jagged appearance, but prints faster than higher resolutions. Higher resolution provides smoother curves and angles as well as a better match to traditional typeface designs, but prints more slowly. This machine can produce output with 600 dpi resolution. Resolution values are represented by horizontal data and vertical data, for example,  $600 \times 600$  dpi.

#### Scalable fonts

Scalable fonts allow characters to be printed in various sizes and rotation angles. This is different from bitmap fonts, which are printed in fixed sizes and angles.

### **Scaling**

Enlarging or reducing the printed image.

#### Scanner driver

A program that controls how the computer and scanner interact. The scanner driver is provided with two drivers: The TWAIN and the WIA driver (for use with Windows XP).

#### Separator page

Optional pages printed at the beginning of each document to help separate one print job from another.

#### Server

A network computer that is directly attached to the printer. The server controls the printer and handles print jobs sent from the clients. See also Client.

#### Shielded

A type of cable that contains a metallic sheath over the conductor material to protect the data passing through the cable from electromagnetic interference. You need to use a double-shielded interface cable with this machine.

#### Spooling

A process by which an application sends a document to the spooler, rather than directly to the printer, thus freeing the computer and application for other tasks. Spooled documents are printed in the order they are received.

# Т

#### Title bar

The horizontal bar that contains the title of a window or dialog box. On many windows, the title bar contains the [Control] menu box and Maximize and Minimize buttons.

#### **Toner**

A black, resin-coated powder contained in the Cartridge. The machine applies the toner to the surface of the photosensitive drum inside the machine via an electro photographic mechanism.

#### Toner saver

Because the black areas of print data are thinned, toner consumption is reduced.

#### Transfer roller

Presses the paper against the drum, to aid the transfer of toner to the paper.

### TrueType fonts

Scalable fonts used for both screen display and printing. TrueType fonts can be sized to any height, and print exactly as they appear on the screen, but with higher resolution.

#### TWAIN (Technology Without Any Interested Name)

Industry-standard protocol for transferring information from devices such as scanners and digital cameras to a computer.

Industry-standard protocol for an application programming interface (API) for input devices such as scanners. If both the device and the application comply with the standard, they will be compatible regardless of differences in manufacturer or model.

For example, with TWAIN-compatible image-processing software, you can start the scanner's TWAIN driver from the software's menu, scan the document and return the scanned image to its original image-processing software.

# U

#### Uninstall

To remove software installed on a computer and return the computer to its condition before the software was installed.

### Universal Serial Bus (USB) interface

These are new serial interface standards. This bus automatically recognizes connections (Plug and Play) to allow plugging and unplugging connectors with the power still turned on to the PC or peripheral equipment.

# V

# Virtual Memory

Space on the hard disk that Windows uses for temporary data storage as if it were actually random access memory (RAM). Windows does this by means of a swap file. This provides Windows with more usable memory, but reduces speed of access to it when the swap file must be used. See also Physical RAM.

# W

### Weight

Refers to the thickness of a font: light, medium, or bold. Also refers to the thickness of paper.

### **WIA (Windows Image Acquisition)**

Standard for downloading images from scanners or digital cameras. The machine includes a TWAIN-compliant driver and a WIA-compliant driver. The WIA driver can only be used with Windows XP. With either driver, you can scan documents with the machine in applications which support the TWAIN interface (Photoshop etc.).

#### **Windows Explorer**

The Windows program you can use to browse through, open, and manage the disk drives, folders, and files on your computer in a network system. You can also use Windows Explorer to view and open shared folders on other computers on the network. You can use Windows Explorer to manage your files by moving, copying, renaming, and deleting files.

#### **WYSIWYG**

Pronounced wizzy-wig, an acronym for "what you see is what you get." For example, when you format a paragraph, the line breaks that appear on the printout are exactly the same as they are on the screen.

# Index

About Color Printing, 6-3

Accompanying Applications installing, 1-11 Add Group dialog box, 4-20, 4-33 Add Person dialog box, 4-19, 4-32 Add profile, 2-57 Add/Delete the Output Size dialog box, 3-21 Add/Edit Canon Fax Driver Address Book, 4-26, 4-39 Add/Edit profile, 2-38 Address Book, 4-18, 4-31 Address Books, 4-25, 4-38 Address Books dialog box, 4-25, 4-38 Advanced Mode settings, 3-26 switching, 3-19 toolbar, 3-24 using, 3-23 Advanced Properties dialog box, 3-49 Advanced tab, Windows 2000/XP/Server 2003, 2-33, 4-29 Alarm indicator, 5-6 Application, 3-15, 6-8 Attribution tab, Windows 2000/XP/Server 2003, 2-38 Auto Tone, 3-28

# В

Brightness, 6-8 Brightness/Contrast, 3-32

# C

Calibration, 3-31 Cannot install, 5-11 Canon ColorGear, 3-41 Cassette, 6-1 Client, 6-8 Collate, 6-8 Color, 2-34, 4-29 Color Adjustment tab Windows 2000/XP/Server 2003, 2-52 Windows 98/Me, 2-21 Color Management tab Windows 2000/XP/Server 2003, 2-34, 4-29 Windows 98/Me, 2-8 Color Settings, 3-31 Windows 2000/XP/Server 2003, 2-52 Windows 98/Me, 2-20 Color Settings tab, 3-40 Composite device, 5-12 Configuration tab Windows 2000/XP/Server 2003, 4-30 Windows 98/Me. 4-26 Contrast. 6-9 Control Panel, 6-9 Cover Sheet, 4-23, 4-36 Cover Sheet Editor, 4-40 installing/uninstalling, 4-40 Cover Sheet tab, 4-6 Custom Paper Size Settings, 2-13

# D

Default setting, 6-9 Descreen, 3-29 **Detailed Settings** Windows 2000/XP/Server 2003, 2-50 Windows 98/Me, 2-19

Finishing tab Windows 2000/XP/Server 2003, 2-39, 2-46 Windows 98/Me, 2-15 Fixing assembly, 6-10 Font, 6-10
Form, 6-10
G
Gamma, 3-33

# E

Easy Installation, 1-6, 1-16
Edit Address Book tab, 4-5, 4-18, 4-31
Edit Group dialog box, 4-22, 4-35
Edit Person dialog box, 4-21, 4-34
Edit Profiles
Windows 2000/XP/Server 2003, 2-57
Windows 98/Me, 2-26
Edit Watermark
Windows 2000/XP/Server 2003, 2-42
Windows 98/Me, 2-12

# F

Fading Correction, 3-30 Fax sending, 4-1 settings, 4-12 Fax printing preferences Windows 2000/XP/Server 2003, 4-30 Fax properties Windows 2000/XP/Server 2003, 4-27 Windows 98/Me. 4-15 Fax Sending Settings, 4-3 Fax Setting changing, 4-12 Fields, 4-52 Final Review, 3-36 Finishing Details Windows 2000/XP/Server 2003, 2-47 Windows 98/Me, 2-16

General tab
Windows 2000/XP/Server 2003, 2-30, 4-28
Windows 98/Me, 2-6, 4-15
Gradation, 2-19, 2-50
Grain Correction, 3-30
Grayscale image, 6-10
Gutter Settings
Windows 2000/XP/Server 2003, 2-47
Windows 98/Me, 2-16

# Н

Halftones, 6-10 Hard disk, 5-8 Histogram, 3-34

# I

Image Settings, 3-28
Import, 6-10
Input Settings, 3-26
Installation, 1-1
Accompanying applications, 1-11
checking, 1-22
MF drivers, 1-6
problem, 5-11
Interface, 6-11
Interface port, 6-11
Item Settings dialog box, 4-7

#### P Landscape, 6-11 Page Setup tab **Layout Options** Windows 2000/XP/Server 2003, 2-39, 2-40 Windows 2000/XP/Server 2003, 2-45 Windows 98/Me, 2-9 Windows 98/Me, 2-14 Paper Local printer, 1-5 delivery, 6-1 feed, 6-12 Logo tab, 4-9 size, 6-1 type, 6-13 M weight, 6-1, 6-16 paper size Matching tab custom, 2-13 Windows 2000/XP/Server 2003, 2-53 Parameters of a scan Windows 98/Me, 2-22 specifying, 3-25 PDF, 6-13 Megabyte, 6-12 MF drivers PDF Setting dialog box, 3-16 installing, 1-6, 1-16 Portrait, 6-13 uninstalling, 1-24 Ports tab, Windows 2000/XP/Server 2003, 2-32, MF Toolbox Save Scanned Image to, 3-12 Power scanner settings, 3-10 not supplied, 5-2 setting, 3-10 Preferences dialog box, 3-38 Presto! PageManager, 3-9 uninstalling, 1-23 using, 3-7 Preview, 6-13 Preview tab, 3-38 [MF8100 Series Setup] screen, 1-5 Multiple PDF, 3-16 Print Multi-purpose tray, 6-1 queue, 6-13 settings, 2-4 Printer N does not print, 5-1 driver, 5-4, 6-13 Network locks up, 5-3 opening printing preferences, 2-5, 4-13 setting shared printer, 2-60 using shared printer, 2-67 opening properties, 2-4 Windows 2000/XP/Server 2003 server settings, problems, 5-1 2-60 sharing settings, 2-63 Windows 98/Me server settings, 2-64 specifications, 6-1 stops printing, 5-2 Printer properties Windows 2000/XP/Server 2003 dialog boxes, 2-29 Orientation, 6-12 Windows 98/Me dialog boxes, 2-6 Printing, 2-1 Output Settings, 3-27 speed, 6-1

Problems	Scanner tab, 3-41
driver, 5-4	Scanners and Cameras, 3-5
installing, 5-11	Scanning, 3-1
printer, 5-1	from an application, 3-15, 3-50
removing (uninstalling), 5-11	problems, 5-6
scanning, 5-6	setting, 3-5
uninstalling, 5-11	using MF Toolbox, 3-7
Profile tab, Windows 2000/XP/Server 2003, 2-36	with [B&W Start] or [Color Start] on the
Profiles	machine, 3-1
Windows 2000/XP/Server 2003, 2-55	ScanSoft OmniPage, 3-9
Windows 98/Me, 2-24	Security tab
	Windows 2000/XP/Server 2003, 2-35, 4-30
	Select Recipient from Address Book, 4-5
Q	Sender tab, 4-7
<b>~</b>	Sending fax, 4-1
Quality tab	Sending Settings tab, 4-4
Windows 2000/XP/Server 2003, 2-39, 2-49	Server, 6-15
Windows 98/Me, 2-18	settings Windows 2000/XP/Server 2003, 2-60
Queue, 6-14	settings Windows 98/Me, 2-64
	Shared printer, 2-60
	Add Printer Wizard (Windows 2000/XP/Serve
R	2003), 2-68
• •	Add Printer Wizard (Windows 98/Me), 2-69
Random Access Memory, 6-14	network download, 2-67
Recipient tab, 4-8	Sharing tab
Reduce Dust and Scratches, 3-29	Windows 2000/XP/Server 2003, 2-31, 4-28
Register Address Book, 4-25, 4-38	Windows 98/Me, 2-8
Register Cover Sheet tab, 4-23, 4-36	Sheets to Send tab, 4-11
Resolution, 4-24, 4-37, 6-1, 6-14	Shielded, 6-15
adjusting, 6-6	Signature tab, 4-10
determining, 3-42	Simple Mode
DPI, 3-49	switching, 3-19
output, 3-27	toolbar, 3-22
οιιραί, 5-27	using, 3-20
	Software
S	
3	checking installation, 1-22
Scaling, 6-15	installing, 1-4 problems during installation, 5-11
	· · · · · · · · · · · · · · · · · · ·
Scan tab, 3-39	problems during removal, 5-11
ScanGear MF	uninstalling/reinstalling, 1-23
Advanced Mode, 3-23	Special tab, 4-24, 4-37
dialog box, 3-9, 3-17	Specifications
setting, 3-19	printer, 6-1
Simple Mode, 3-20	Spool Settings, 2-7, 4-16
Scanner and Camera Wizard, 3-44	Spooling, 6-15
Scanner driver, 6-15	System requirements, 1-1

Threshold, 3-37 Tone Curve, 3-35 Toner, 6-15 saver, 6-15 Transfer roller, 6-15 Troubleshooting, 5-1 driver problems, 5-4 installing and uninstalling problems, 5-11 scanning problems, 5-6

# U

Uninstall, 6-16 drivers, 1-24 Unsharp Mask, 3-28 USB 2.0, 1-2, 5-6 USB cable connecting, 1-11 USB interface, 6-16

Version conflict, 5-11 View Settings Windows 2000/XP/Server 2003, 2-59 Windows 98/Me, 2-28

# W

White lines, 5-9 WIA driver, 3-44 Windows 2000/XP/Server 2003 Advanced tab, 2-33, 4-29 Attribution tab, 2-38 Color Adjustment tab, 2-52 Color management tab, 2-34, 4-29 Finishing tab, 2-46 General tab, 2-30, 4-28 Matching tab, 2-53 Page Setup tab, 2-40 Ports tab, 2-32, 4-28

Profile tab, 2-36 Quality tab, 2-49 Sharing tab, 2-31, 4-28 Windows 98/Me Color Adjustment tab, 2-21 Color Management tab, 2-8 Details tab, 2-7, 4-16 Fax Properties, 4-15 Finishing tab, 2-15 General tab, 2-6, 4-15 Matching tab, 2-22 Page Setup tab, 2-9 Printer Properties, 2-6 Quality tab, 2-18 Sharing tab, 2-8 WYSIWYG, 6-17

# Canon

#### CANON INC.

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

#### CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

#### CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

#### **CANON EUROPA N.V.**

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

#### CANON FRANCE S.A.S.

17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France

#### **CANON COMMUNICATION & IMAGE FRANCE S.A.S.**

12, rue de l'Industrie 92414 Courbevoie Cedex, France

#### CANON (U.K.) LTD.

Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

#### **CANON DEUTSCHLAND GmbH**

Europark Fichtenhain A10, 47807 Krefeld, Germany

#### CANON ITALIA S.p.A.

Via Milano, 8 20097 San Donato Milanese (MI) Italy

### **CANON LATIN AMERICA, INC.**

703 Waterford Way Suite 400, Miami, Florida 33126 U.S.A.

#### **CANON AUSTRALIA PTY. LTD**

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

#### **CANON CHINA CO., LTD**

15F, North Tower, Beijing Kerry Centre, 1 Guang Hua Road, Chao Yang District, 100020, Beijing, China

#### **CANON SINGAPORE PTE. LTD.**

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

120V

FA7-8572 (000) © CANON INC. 2006